


A ENSURE FIREARM IS UNLOADED

A WARNING: Over-torquing fasteners can damage your mount and will not be covered by warranty.

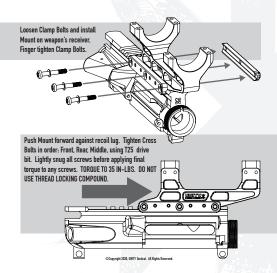





A ENSURE FIREARM IS UNLOADED

A WARNING: Over-torquing fasteners can damage your mount and will not be covered by warranty.

Install optic into Mount base. Install Ring Caps and finger tighten all ring screws. Ensure scope is in the proper position for shooter's eye relief.

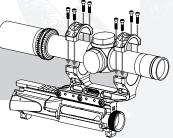

 Level scope reticle. Tighten Ring Cap Screws in the order shown, with T15 drive bit. Lightly snug all screws before applying final torque to any screws. TORQUE IN THE PATTERN BELOW TO 18 IN-LBS. COMPLETE THIS PATTERN TWO TIMES. DO NOT USE THREAD LOCKING COMPOUND.



©Copyright 2020, UNITY Tactical. All Rights Reserv