

STOP!

Before you burn down the house with your mad cooking skills, it is important you read this safety information. Failure to follow these instructions could result in fire or explosion which could cause property damage, personal injury or death. Assembly and usage of the oven should be carried out by a competent person.

This appliance has to be installed on a secure level base prior to use.

WARNING: This appliance will become very hot, do not move it during operation.

WARNING: Keep away from children and pets.



Do not store combustible material within 45cm (18inches) of the burner or mouth of the oven.




Do not use in enclosed areas. Roccbox and the burner must be well ventilated.



Do not use plastic or glass utensils inside the Roccbox




Do not move or leave the Roccbox unattended whilst in use.

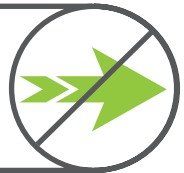

WARNING: - Failure to follow the instructions and observe the warnings provided in this operating manual could result in serious bodily injury or damage to property. Please read the complete manual before assembly or operation of your Roccbox. **NOTE TO INSTALLER:** This manual must remain with the owner for future reference.

GENERAL SAFETY

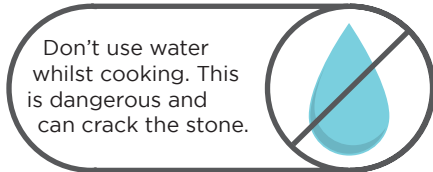

Warning: Contact your local municipality for any building codes regulating the installation of outdoor barbecue appliances. Outdoor installations must conform to local codes or, in the absence of local codes, with the following:

USA: National Fuel Gas Code, ANSI Z223.1/ NFPA 54

CAN: CGA: B149.1 Natural Gas & Propane Installation Code.

AUST/NZ: Australian Standards Code AS: 5601 as well as the requirements of any local council, gas electricity authority or other statutory regulation.

Spanner tighten all gas fittings as per instructions.

Do not modify the appliance. Parts sealed by the manufacturer or the company shall not be manipulated.