


Cooler Backpack User Manual

READ AND SAVE THESE INSTRUCTIONS

Inspect Unit Before Use.


Contact support@upperechelonproducts.com immediately for any damaged or defective units.

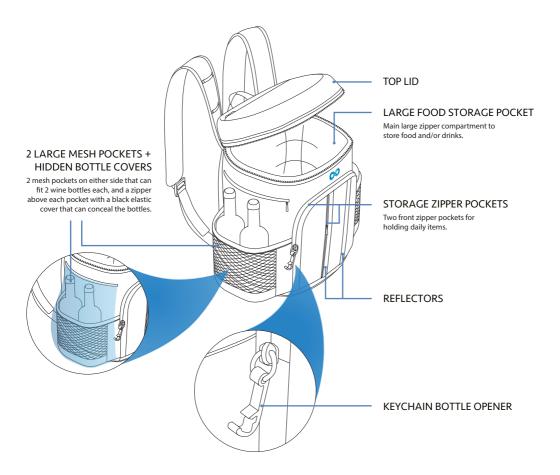



PACKING TIPS


To keep items cold, gently pour ice into the bottom of the backpack, then fill with contents, then add more ice.

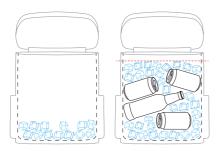


3 DO NOT overfill the backpack to avoid any damage and/or leaks.




5 Allow the backpack to sit with the top lid unzipped and open to air dry.

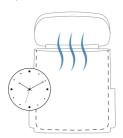

 7 Store food in leak-proof containers or sealed bags.



When filling the backpack, leave at least 1.5 inches of space (or the width of 2 fingers) below the top lid.

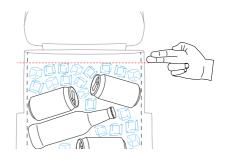

4 Empty water by opening the top lid and turning the backpack upside down.



6 Keep cooler backup upright when in use.



- Do not drop your cooler backpack when there are contents inside as it may cause damage to the backpack.
- 9 Wrap any hot food container in a towel to avoid damaging the inner liner of the backpack.

HOW TO CLEAN

Hand wash using cold water and a mild detergent or hand soap. Wipe with a clean cloth or air dry only.

- DO NOT put the backpack in the washer or dryer.
- DO NOT bleach.
- DO NOT iron.

HAVE AN ISSUE WITH YOUR COOLER BACKPACK?

Enjoy hassle-free replacements: if your cooler backpack is defective or damaged, we will ship you a new one ABSOLUTELY FREE.

For fast and knowledgeable service, get in touch with one of our customer service experts right now!

WRITE A MESSAGE TO SUPPORT

Email: support@upperechelonproducts.com

To check out more of the products we offer visit: **everlastingcomfort.net**

