



For TECH SUPPORT call 1-833-AIS-TECH

WWW.AISINTERFACE.COM

The right side of the image features a large, stylized AIS logo in white with a red swoosh underline, set against a black and red background. Below the logo, four white vehicles are shown: a Honda Civic, a Ford Explorer, a Jeep Wrangler, and a BMW sedan.

AUTOMOTIVE INTEGRATION SOLUTIONS

BMWAPMOD1

AUTOPLAY FOR BMW

WITH THE 6.5"/8" CCC SYSTEM

WWW.AISINTERFACE.COM

APPLICATIONS

AUTOPLAY Integration with Rear-View Camera Input for select BMW's with the CCC Systems (6.5" or 8.8" Monitor) and 10-Pin LVDS Connector.

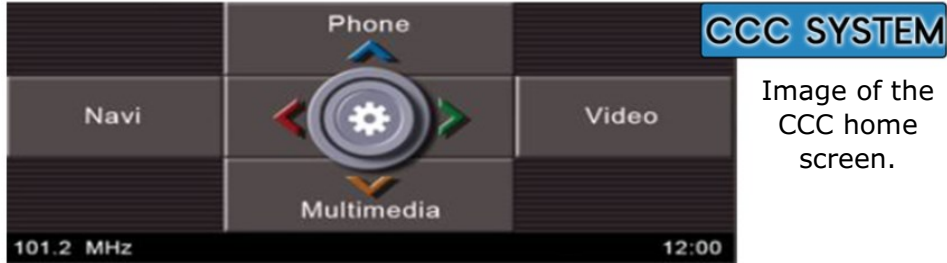


Image of the
CCC home
screen.

FEATURES

- **AUTOPLAY** Integration system allows connection of Android and CARPLAY to the infotainment system with full control using the factory IDrive.
- Rear camera input with dynamic lines
- Picture-in-picture mode combining after-market rear-view picture with factory parking sensor graphics.
- Adds Bluetooth to models that are not factory equipped.

IMPORTANT!!

- Android Phones must have a firmware version of 8 and above.
- For 2007 & up vehicles without a factory AUX input, add on the **BMW AUX1** for audio.
- For 2007 & below vehicles without a factory AUX input, add on the **BMW AUX2** for audio.

NOTES

Wiring Diagram


1. Unplug the factory 10pin LVDS cable from the back of the factory screen.
2. Plug the factory LVDS cable into the interface.
3. Connect the provided LVDS cable into the factory screen's LVDS socket on the factory screen and the other end into the interface.

Main Harness Wiring Diagram


1. Disconnect the main Quadlock from the factory radio.
2. If present, remove the fiber optic cable from the factory Quadlock connector and insert it into the same location of the Main T-harness. (fig 2)
3. Connect the main T-harness into the factory harness of the car then connect it to the radio. (fig 1)
4. Connect the 8 pin molex plug from the T-harness to the CAN harness of the interface.

NOTES

Autoplay Setup

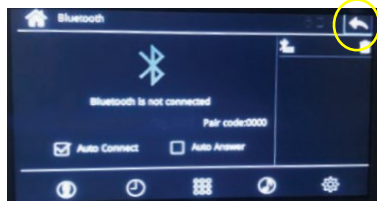

Using the iDrive, navigate the cursor to the BACK icon.

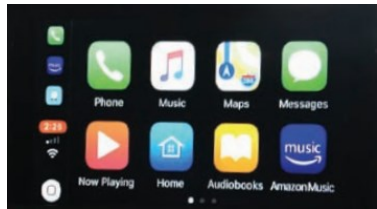

Carplay home screen once the device is connected.

Display settings for Autoplay




Adjust brightness, contrast, and saturation for a more defined image. To get to the Display menu, scroll to the SETTING icon in the Autoplay HOME menu, and select it.




Once in the SETTING menu, scroll to the Display submenu and adjust the brightness, contrast, and saturation as needed.

Wiring Diagram (fig 1)

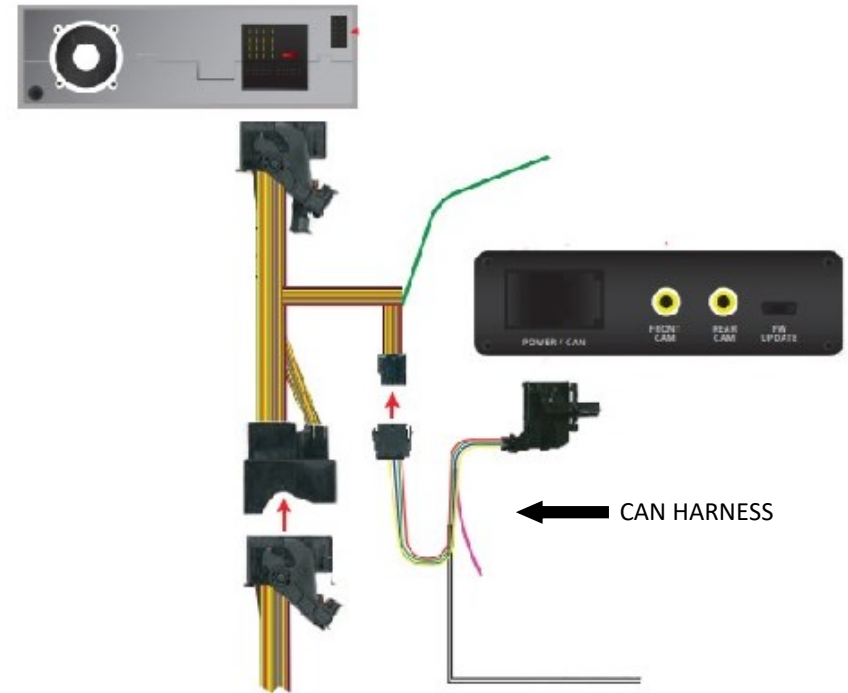


Wiring Diagram (fig 2)

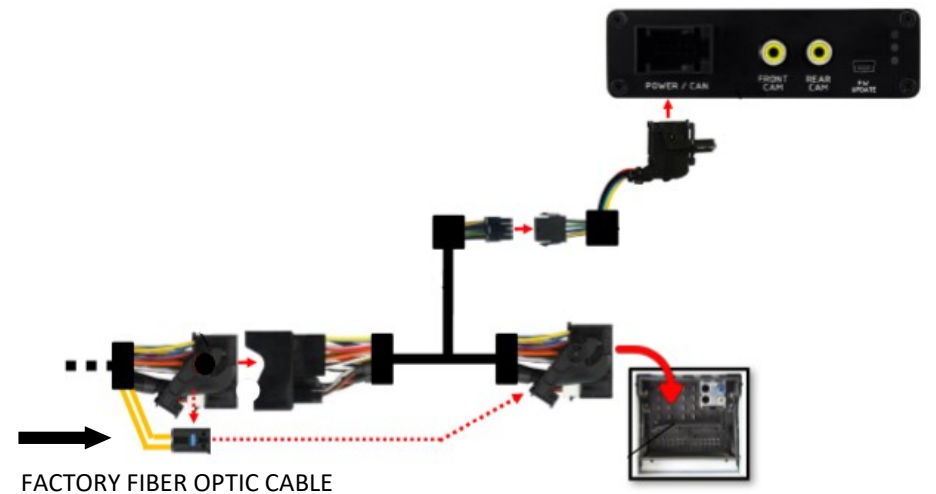

Rear Camera Wiring Diagram

1. When installing a rear camera, connect the camera's 12v power wire to the **PINK** wire of the CAN harness. Connect the ground wire of the camera to chassis ground.
2. Plug the RCA from the camera to the REAR CAMERA input of the main interface.
3. Once installation is complete **SEE OSD MENU SETTINGS.**

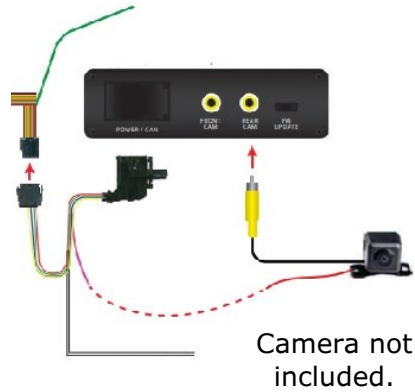

Auto Play interface Wiring Diagram


1. Connect the **BLACK** wire of the Auto Play harness to the **BLACK** wire of the main Quadlock T-harness.
2. Connect the **YELLOW** wire of the Auto Play harness to the **RED** wire of the main Quadlock T-harness
3. Connect the **RED** wire of the Auto Play harness to the **GREEN** wire of the main Quadlock T-harness labeled POWER 2.
4. Plug the **UDART** connector from the CAN power harness to the Auto Play interface.
5. Run the mic to the desired location and plug it into the **MIC INPUT** of the Auto Play harness.
6. Plug the RCA from the Auto Play harness into the **FRONT CAMERA** input of the main interface.
7. Run the USB extension to the desired location.
8. Once installation is complete **SEE OSD MENU SETTINGS.**

Autoplay Setup


IMPORTANT

If your smartphone is set to automatically connect to your factory bluetooth, make sure you void the connection. One way is to forget the device (your vehicle) on your phone. This will avoid Autoplay connection interferences. If you are using the wireless feature and notice degraded audio or video quality, switch to the wired alternative, for it is a higher quality connection than bluetooth.



AUTOPLAY HOME SCREEN

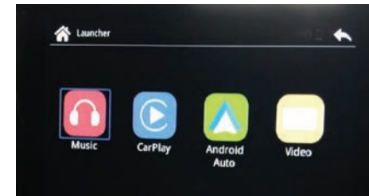

The music and video icons are for media that is stored on a USB flash drive.

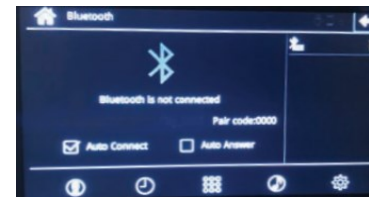

Using the iDrive, navigate the cursor to the Bluetooth icon (scrolling right). Image above will appear on the screen the BT device name and pairing code (0000).

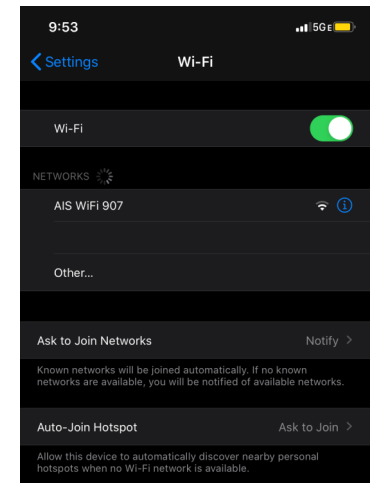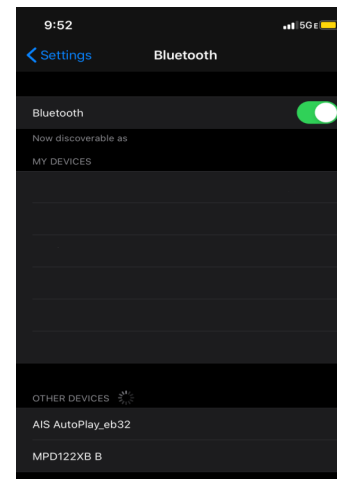


For Apple devices go to Settings. Open Bluetooth and connect to AIS Autoplay XXXX. Once connected, it will connect automatically to Wifi.

AUX INPUT

For sound, the factory AUX input is used. Connect the RCA to 3.5mm to the audio output of the Auto Play interface and plug the opposite end into the factory AUX. If the vehicle does not have the factory AUX, you will need one of the following;

- For 2007 & up vehicles without a factory AUX input, add on the **BMW AUX1** for audio.
- For 2007 & below vehicles without a factory AUX input, add on the **BMW AUX2** for audio.

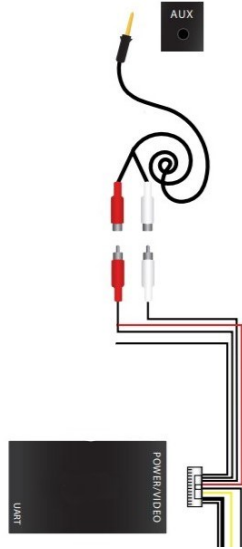

DIP SWITCH SETTINGS

Vehicle / Navigation	Dip 1	Dip 2	Dip 3
M-ASK	OFF	No function	No function
CCC	ON	No function	No function

Setting the DIP switches of the Interface Box.

DIPs 1 and 2 on the back of the interface-box is used to set the monitor size.

DIP 3 must be set to OFF.

After each change of the DIP switch setting change you have to reset power of the interface box by unplugging the CAN harness!

OSD MENU Setup

Use the following buttons on the iDrive to navigate the OSD Menu:



Hold the menu button to change the video sources

Use the iDrive to navigate Autoplay and make selections.

Shift the iDrive to the right for 10 seconds to enter OSD Menu. Use iDrive to navigate menu and make selections.


OSD Autoplay Setup

To ensure that Autoplay works, make sure these input settings have been set in the OSD MENU:

FRONTCAM (FVC) = SmartPhone

To retain the factory rear camera:
REARCAM (RVC) = OEM

When adding an aftermarket rear camera:
REARCAM (RVC) = ON

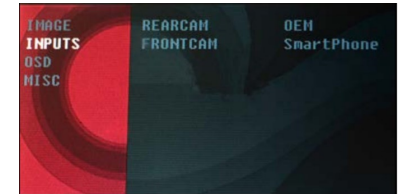

Smartphone Connections

Apple devices - WIRELESS

Android - Must plug into the USB port provided.

USB - Music & videos can be played from a USB flash drive.

Accessing Autoplay

1. Switch the audio source to AUX. This will allow the audio from the Autoplay interface to be heard from the factory audio system.
2. Press and hold the "MENU" button on the iDrive for 5 seconds to activate the Autoplay screen mode. To exit Autoplay menu, press and hold again for 5 seconds.
3. After activating Autoplay, a short press of the MENU button again will switch to the rear camera.