

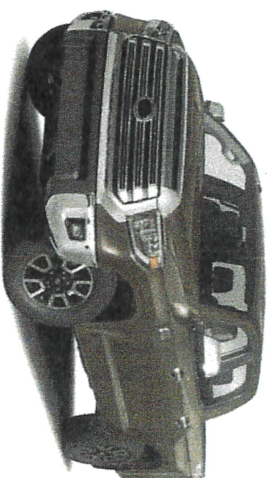


Toyota Auto Play OEM Integration Kit


OEM Touch Control Plug & Play

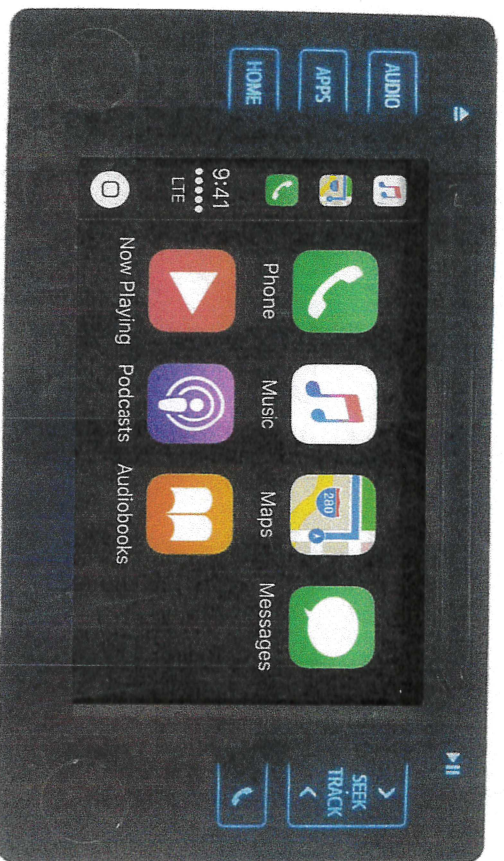


Kit Contents

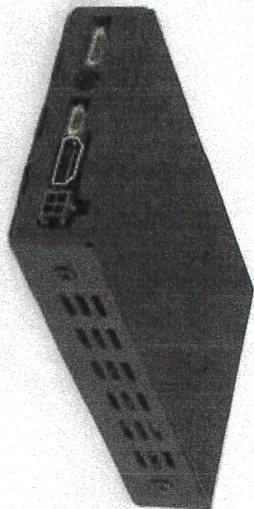


AutoPlay Interface

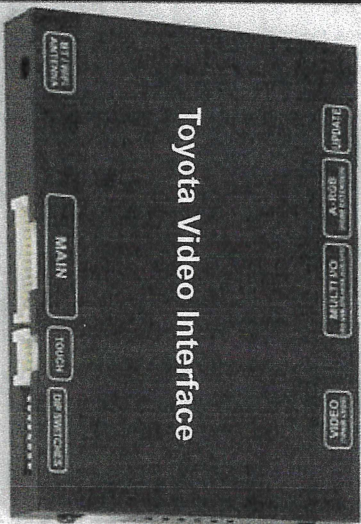

Toyota Video Interface

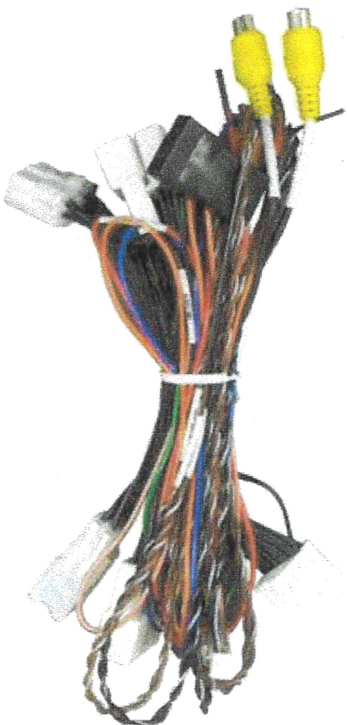


Plug and Play Harness

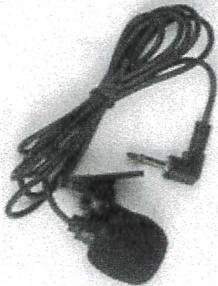


Microphone



Audio adapter

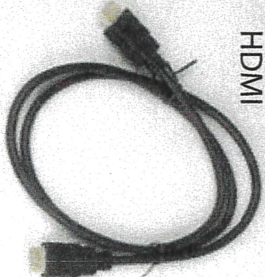


HDMI

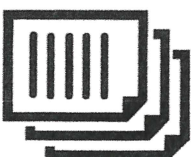



Install & Activation
Instructions

Connection Example

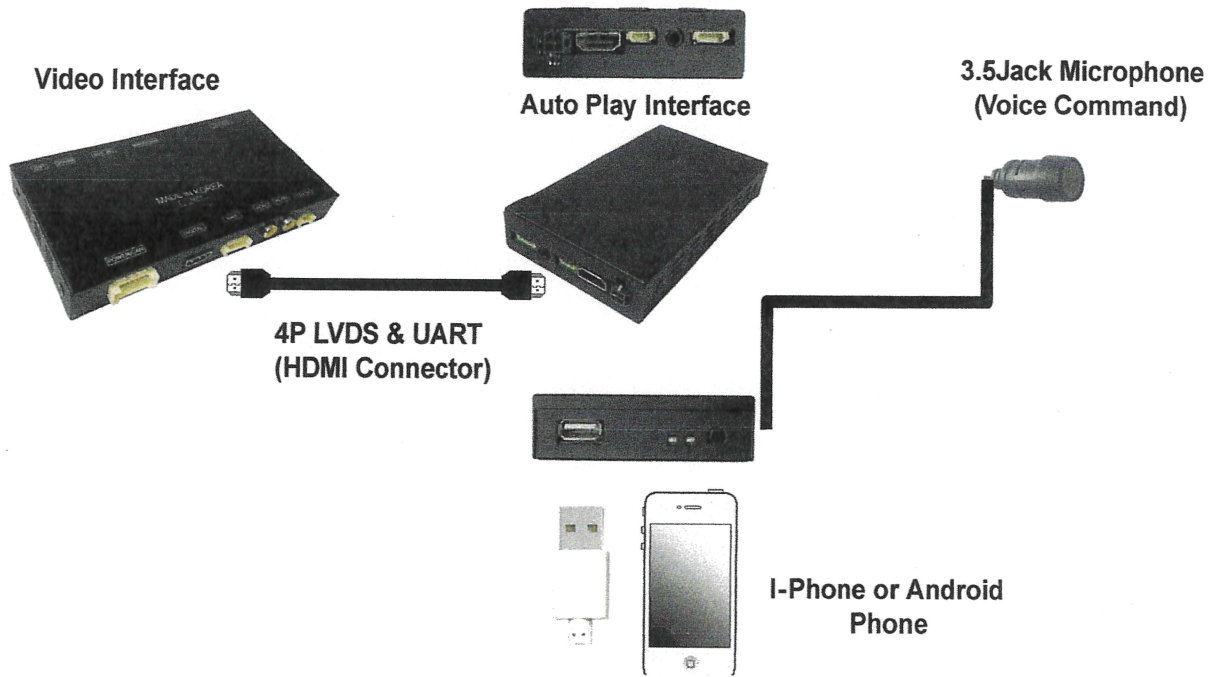

Input & Output

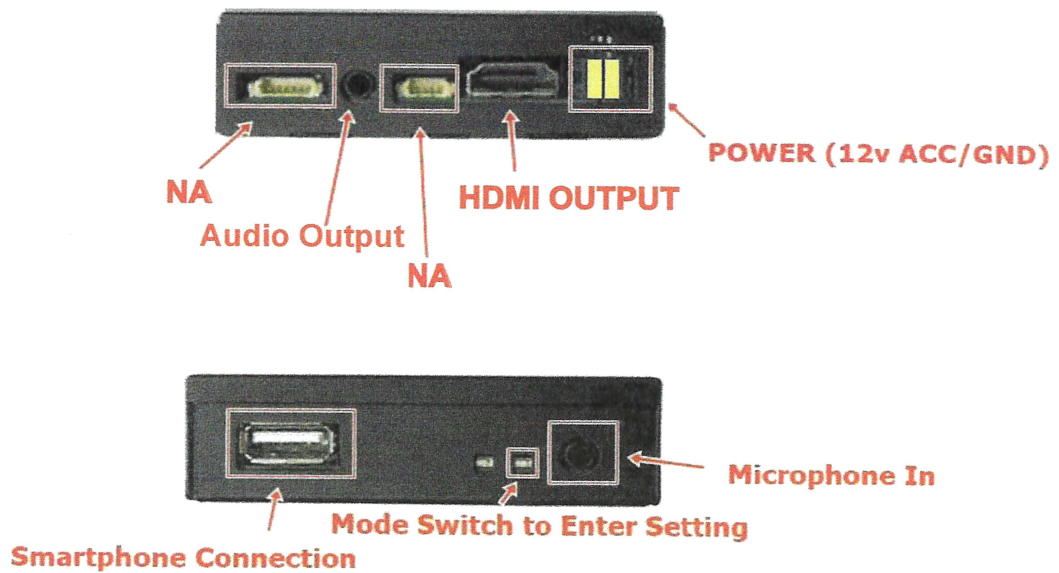

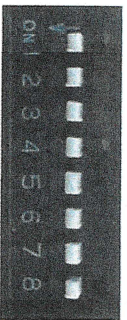

DIP Switch Settings 1

Dip Switches ALL OFF (All UP) ♪

Universal Pioneer Radio Dip Switch♪

- USA Sienna 2014~2016 (86140-08040) Pioneer China♪
- USA Sienna (86140-08060) Pioneer China♪
- USA Sienna (186140-08080) Pioneer China♪
- USA Camry 2015~2017 (86140-06680) Pioneer♪
- USA Camry 2015~2017 (86140-06690) Pioneer♪
- USA Highlander (86140-0E231) Pioneer♪
- USA Highlander (86140-0E241) Pioneer ♪
- Rav4 2015~2017 (86140-42390) Pioneer♪
- Hilux 2016~2018 (86140-0K590) Pioneer♪
- Hilux 2013~2015 (86140-0K371) Pioneer♪
- Fortuner 2015~2018 (86140-0KA50) Pioneer♪
- Fortuner 2013~2015 (86140-0K371) Pioneer♪
- Land Cruiser Prado 2017~2018 (86140-60C80) Pioneer♪
- Land Cruiser Prado 2014~2015 (86140-60C80) Pioneer♪


♪
Dip 1 ON♪

Universal Panasonic Radio Dip Switch♪

- Hilux, Fortuner 2011~2013 (86140-0K120) Panasonic♪
- ♪

♪
Dip 2 ON♪

- USA Tundra 2014~2016 (86100-0C100) Panasonic♪
- ♪

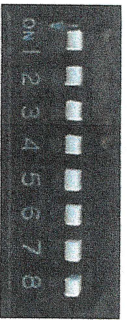

DIP Switch Settings 2

Dip 2, 6 ON▷

- USA Tundra 2014~2015 (86140-0C040) Panasonic Mexico▷

▷

Dip 3 ON▷

Univeral Fujitsuten Radio Dip Switch▷

- USA Corolla 2016~2019 (86140-02540) Fujitsuten (No Swipe, Touch Only)▷
- USA Rav4 2016~2019 (86140-42460) Fujitsuten China ▷
- AUSTRALIA Hilux 2015~2018 (86140-0K200) Fujitsuten▷
- EUROPE CH-R 2016~2018 (86140-F4020) Fujitsuten▷
- EUROPE CH-R 2016~2018 (86140-F4010) Fujitsuten▷
- EUROPE YARIS 2014~2019 (86140-0D320) Fujitsuten▷
- EUROPE YARIS 2014~2019 (86140-0D440) Fujitsuten▷


Dip 3, 6 ON▷

- USA Rav4 86100-0R101 Fujitsuten Mexico▷

▷

Dip 3,7 ON▷

- USA Corolla 2016~2019 (86140-02520) 6" Fujitsuten Mexico▷
- USA Rav 4 2015~2018 (86140-42110) 6" Fujitsuten▷
- USA Prius C 2016~2017 (86140-52330) Fujitsuten China ▷

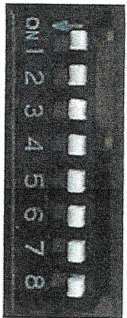

DIP Switch Settings 3

Dip 4 ON▷

- USA Tundra 2016~2019 (86140-0C190) Panasonic▷
- USA 4 Runner 2019 (86100-35354) Panasonic China▷
- USA 4 Runner 2019 (86100-35364) Panasonic Japan▷
- USA Tacoma 2015~2019 (86140-04180) Panasonic Mexico▷
- USA Tacoma 2015~2019 (86140-04181) Panasonic Mexico▷
- USA Tacoma 2015~2019 (86140-04185) Panasonic Mexico▷
- USA Tundra 2016~2019 (86100-0C262) Panasonic Mexico▷
- USA Prius 2016~2019 (86140-47270) Panasonic▷
- USA Prius 2016~2019 (86140-47271) Pioneer▷

▷ Dip 4,6 ON▷

- USA Tacoma 2015~2019 (86100-04161) Panasonic Mexico▷
- USA Tacoma 2015~2019 (86100-04163) Panasonic China▷
- USA Tacoma 2015~2019 (86100-04180) Panasonic▷
- USA Tundra (86140-0C191) Panasonic China ▷
- USA Tundra (86100-0C272) Panasonic China▷
- USA Tundra (86140-0C201) Panasonic China▷
- USA Tundra (86140-0C130) Panasonic Mexico▷

Dip 5 ON▷

- USA Prius 2016~2019 (86100-47460) Panasonic JBL▷
- USA Tacoma 2015~2019 (86100-04170) Panasonic JBL ▷
- USA Tacoma 2015~2019 (86100-04172) Panasonic JBL China▷
- USA Tacoma 2015~2019 (86100-04173) Panasonic JBL Mexico▷
- USA 4 Runner 2019 (86100-35181) Panasonic JBL China▷
- USA Highlander (86100-0E293) Panasonic China▷
- USA Highlander (86100-0E291) Panasonic China▷

DIP Switch Settings (Special Options)

♪
Dip 6 ON (Optional Dip Switch)♪

♪ Turn this on when the radio automatically activates Carplay mode without pressing any buttons of the radio.♪

Dip 7 ON (Optional Dip Switch)♪

♪ Turn this on if the radio has 6" small LCD Display.♪



Dip 8 ON (Optional Dip Switch)♪

♪ Turn this dip switch on when there is no any UI Graphic of Volume up, down on the top screen area.♪

AUTO PLAY INSTALLATION GUIDE (2018 Toyota Tacoma shown)




Step 1 Remove trim bezel from vehicle
(NOTE) Make sure to protect surrounding areas to avoid scratching or damage

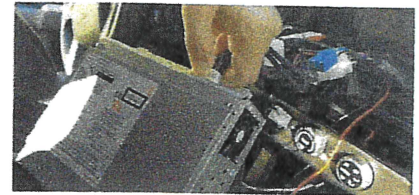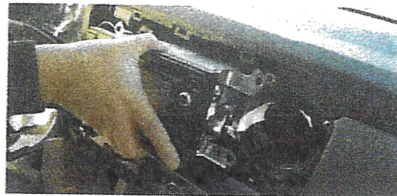

Step 2 Remove radio from dash after removing fastening bolts
Step 3 Disconnect all connecting cables at the back of unit.
Step 4 Proceed to remove the stereo. Place it in a safe area free from potential damage or scratching
(NOTE) make sure bolts are placed in secure location so as not to lose

Step 5 Open Auto Play kit and proceed to unwrap Master T Harness
Step 6 Proceed to connect the Master Harness to each respective connection. You will be connecting the 24 pin, 28 pin and 10 pin main harness

Each of the provided T harnesses has a proprietary connection on it. Please make sure to connect accordingly

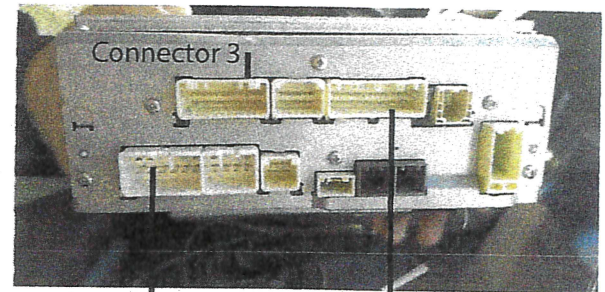

Connector 1


Connector 2

Step 7 Locate the Auto Play module, Video Interface, HDMI cable & audio cable
Connect as follows:

MAIN RADIO HARNESS-Provides power to AP module and Video interface

28 pin HARNESS- provides Touch and audio connections

24 pin HARNESS-provides video interfacing into radio

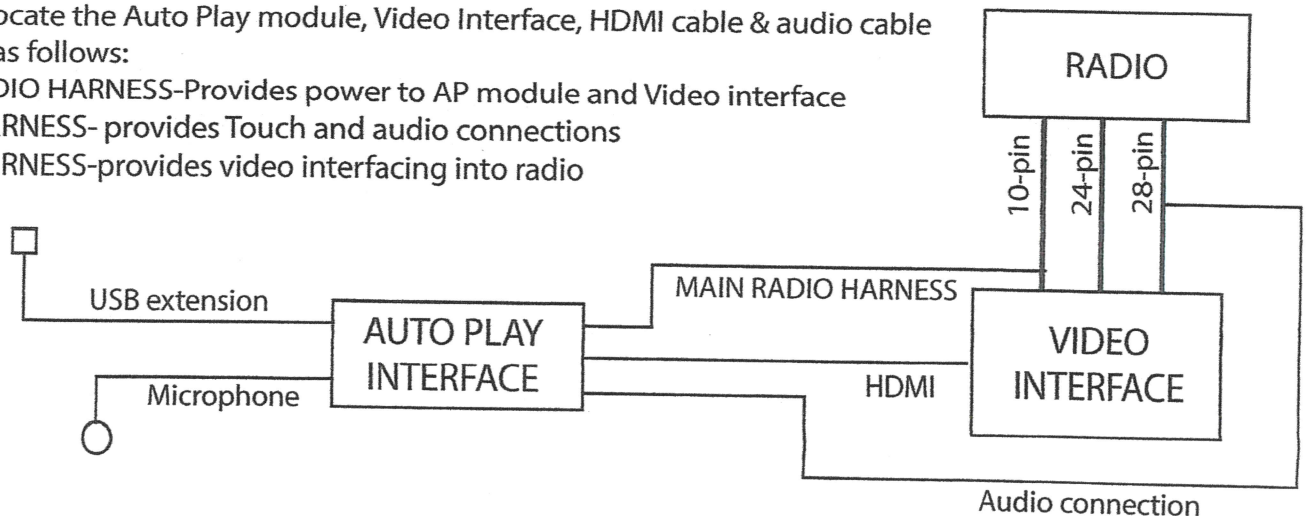


Once all connections are complete, proceed to connect the temporary test kit to the OEM

Auto Play Activation Steps



FOR THESE TOYOTA RADIO TYPES
TO ENTER INTO AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE

TO EXIT AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE

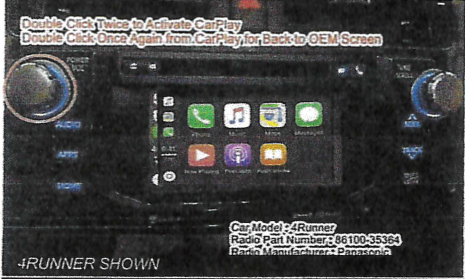

FOR THESE TOYOTA RADIO TYPES
TO ENTER INTO AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE

TO EXIT AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE




FOR THESE TOYOTA RADIO TYPES
TO ENTER INTO AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE

TO EXIT AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE



FOR THESE TOYOTA RADIO TYPES
TO ENTER INTO AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE

TO EXIT AUTO PLAY MODE:
SINGLE CLICK THE AUDIO BUTTON ON RADIO FACE

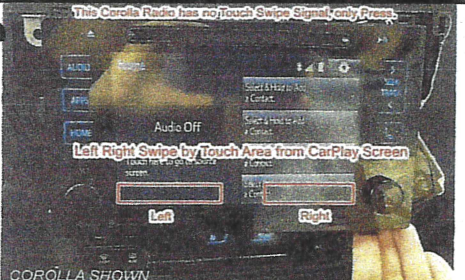


FOR THESE TOYOTA RADIO TYPES
TO ENTER INTO AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE

TO EXIT AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE



FOR THESE TOYOTA RADIO TYPES
TO ENTER INTO AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE


TO EXIT AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE

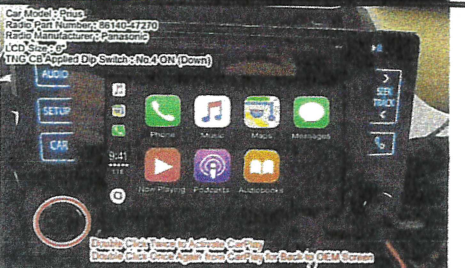


FOR THESE TOYOTA RADIO TYPES
TO ENTER INTO AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE

TO EXIT AUTO PLAY MODE:
DOUBLE CLICK THE VOLUME KNOB TWICE

Auto Play Settings

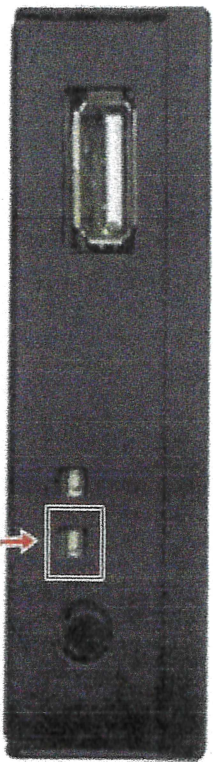

Press 3Seconds One Time

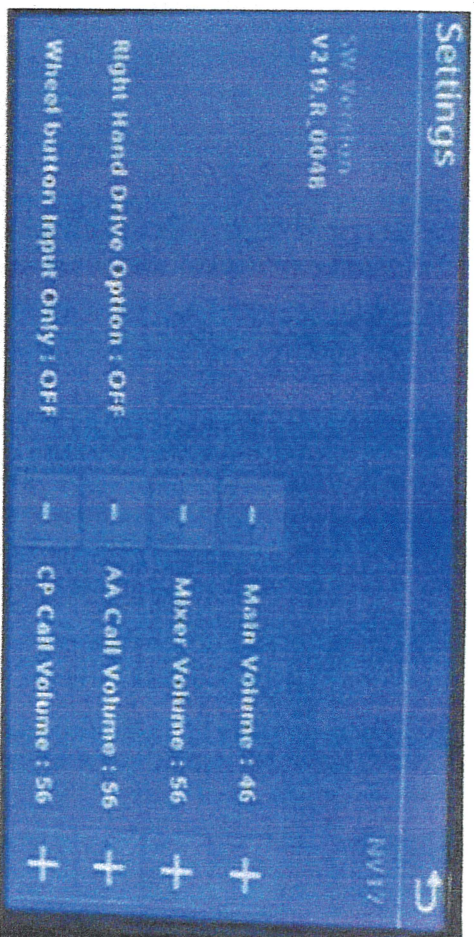

Press 3seconds One More Time on this menu



4pin Resistive Touch Calibration Mode