


Pro2 Side Cooling Fan Cover Installation Instruction

- The steps of replacing both sides of cooling fans are similar with each other. Here we use the right side as reference.

STEP 1: Preparation

Unload the filament from both nozzles.
Turn off the printer after the filament are removed.

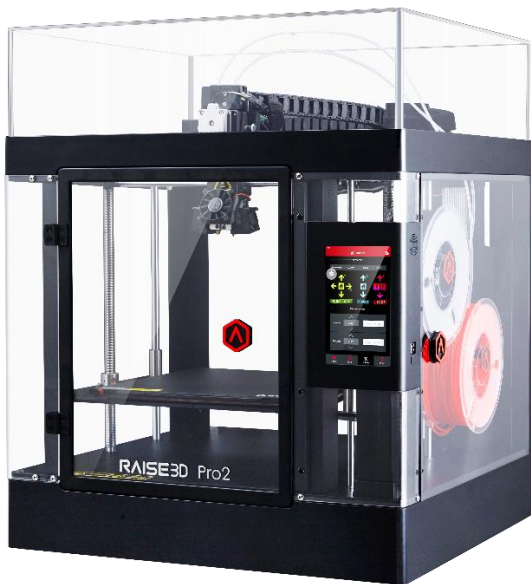


STEP 2: Remove Fan Duct

Remove the screws marked in the picture below and take the Cooling Fan off with Fan Duct.



Remove the screws marked in the picture below and take the Fan Duct off.

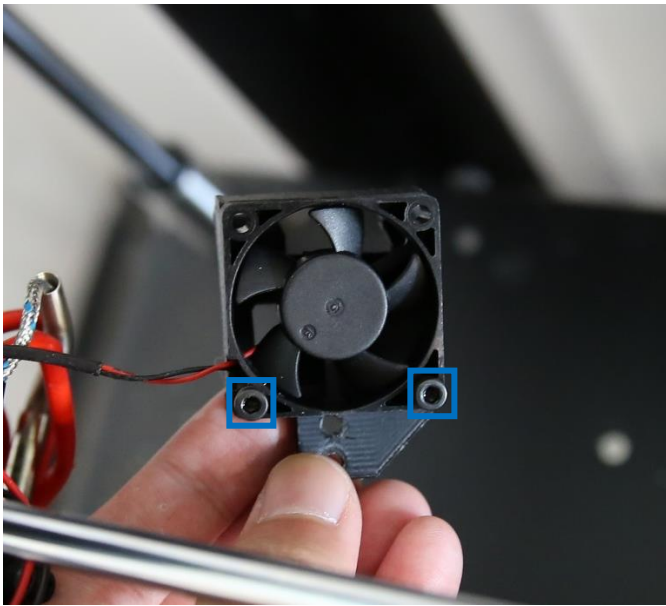

STEP 3: Install the new Fan Duct

Replace with a new Fan Duct.



- Make sure that the surface of fan with tags is facing support.



