Flash to Open Liftmaster/Chamberlain/Craftsman programming chart

Opener Model Numbers	Years Manufactured	Pairing Button	Frequency Code	How to Program your Flash to Open Garage Opener
8365W-267, 8550W, 8587W, 8557W, 8360W, 8355W, 8365-267, 8160, 8165, 8155, 8065, 8550, 8587, 8557, 8360, 8355	2011-Current	Round Yellow	Security+ 2.0 310 MHz 315 MHz 390 MHz	1. Press and release the learn button on your garage door opener 2. Press and hold the button on your Flash to Open PRO or MINI 3. Opener lights will flash 4. Process is complete *if the above steps don't work, follow steps below as if your unit has a purple program button
8500	2013-Current	"Learn"	Security+ 2.0 310 MHz 315 MHz 390 MHz	Please see your 8500 owner's manual to pair a Flash to Open PRO or MINI with a model 8500 garage door opener
1345/1355, 1356, 3220, 3255, 3240, 3265, 3270, 3280, 3800, 3500, 3850, 3585, 3595	2005-2011	Square Purple	Security+ 315 MHz	 Start with your garage door or gate closed. Press and hold the button on the Mini PRO for approximately 15 seconds then release the button. Press and release the Program/Learn button on your garage door. A ladder may be necessary to reach the Program/Learn button on the motor, or there may be a program/Learn button on your garage door wall panel. (Use reasonable caution if using a ladder.) On the Mini PRO, press and release the button twice; the Mini PRO will begin the pairing operation with the garage door opener. Pairing can take up to 60 seconds. When the garage door or gate begins to open, pairing is complete. Press and release the the button on the Mini PRO once to save the pairing and exit programming mode.
1245R/1255R, 1265R, 2220, 2245/2255, 2265, 2280, 2500, 2575, 2585, 2595	1997-2004	Square Orange	Security+ 390 MHz	 Start with your garage door or gate closed. Press and hold the button on the Mini PRO for approximately 15 seconds then release the button. Press and release the Program/Learn button on your garage door. A ladder may be necessary to reach the Program/Learn button on the motor, or there may be a program/Learn button on your garage door wall panel. (Use reasonable caution if using a ladder.) On the Mini PRO, press and release the button twice; the Mini PRO will begin the pairing operation with the garage door opener. Pairing can take up to 60 seconds. When the garage door or gate begins to open, pairing is complete. Press and release the the button on the Mini PRO once to save the pairing and exit programming mode.
1245/1255 1270/1280	1993-1995	Square Green	Billion Code 390 MHz	1. Start with your garage door or gate closed. 2. Press and hold the button on the Mini PRO for approximately 15 seconds then release the button. 3. Press and release the Program/Learn button on your garage door. A ladder may be necessary to reach the Program/Learn button on the motor, or there may be a program/Learn button on your garage door wall panel. (Use reasonable caution if using a ladder.) 4. On the Mini PRO, press and release the button twice; the Mini PRO will begin the pairing operation with the garage door opener. Pairing can take up to 60 seconds. 5. When the garage door or gate begins to open, pairing is complete. Press and release the the button on the Mini PRO once to save the pairing and exit programming mode.