

**Flash to Open Liftmaster/Chamberlain/Craftsman programming chart**

Opener Model Numbers	Years Manufactured	Pairing Button	Frequency Code	How to Program your Flash to Open Garage Opener
Intellicode II compatible models	2005-Current	Intellicode II	315, 390 MHz	<ol style="list-style-type: none"> <li>1. Start with garage door closed</li> <li>2. Locate the Learn Code or Program/Set button and the indicator LED on the powerhead.</li> <li>3. Depending on your opener...               <ol style="list-style-type: none"> <li>a. For openers equipped with Learn Code Button – press &amp; release the Learn Code Button (the LED will blink)</li> <li>b. For openers equipped with Program/Set Button – hold the Program/Set Button until the LED turns on</li> </ol> </li> <li>4. Press &amp; release the button on the Mini PRO (the LED will stop blinking)</li> <li>5. Press &amp; release the button on the Mini PRO again (the LED will go out). Programming is complete.</li> <li>6. Using the Genie Intellicode II remote, press and release the button that is already programmed to the opener</li> <li>7. On the Flash to Open PRO or MINI, press and release the button that you would like to program 3 times</li> <li>8. Programming is complete.</li> </ol>
Intellicode compatible models	1995-Current	Intellicode	390 MHz	<ol style="list-style-type: none"> <li>1. Start with garage door closed</li> <li>2. Locate the Learn Code or Program/Set button and the indicator LED on the powerhead.</li> <li>3. Depending on your opener...               <ol style="list-style-type: none"> <li>3a. For openers equipped with Learn Code Button – press &amp; release the</li> </ol> </li> </ol>