

Instructions for Installing Flash2Pass **TRANSMITTER** On a **MOTORCYCLE**  
 Email [info@flashtoopen.com](mailto:info@flashtoopen.com), watch the **installation video**, or troubleshoot with **TIPS on the Installation Page**



**1. Turn off the motorcycle engine**

**2. Pop out highbeam headlight as if replacing a bulb.**

If only one headlight is a high beam, use the wires on that light.



If the wires are easily accessed in the fairing, access the wires there without removing the headlight (see example as pictured: note Flash2Pass is already successfully installed in this picture)





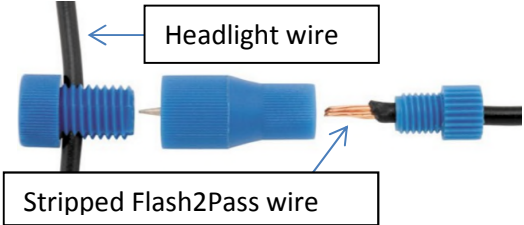
**TIP:** Sometimes wires are taped or wound together. Carefully remove tape or other covering to expose the wires underneath.

**3. Determine which headlight wires to connect to the Flash2Pass transmitter wires**

a. Check which kind of plug you have connected to the headlight

b. If the plug looks like these examples, connect the wires indicated with arrows to the Flash2Pass transmitter wires.

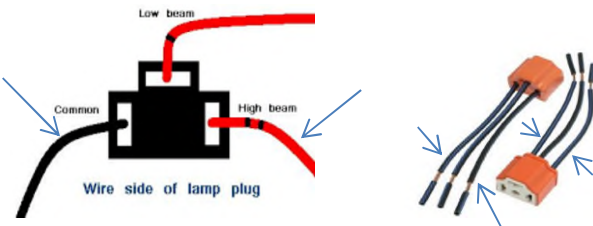

<p>c. If the plug looks like these examples, connect the wires indicated with arrows to the Flash2Pass transmitter wires. If there are only two wires in any configuration, then connect those two wires to the Flash2Pass transmitter wires.</p>	
<p><b>4. Using included Posi-Taps™, attach headlight wires to Flash2Pass transmitter wires (as instructed in the pictures)</b></p>	<p><b>Posi-Tap™ Instructions</b></p> <ol style="list-style-type: none"> <li><b>1. Insert</b> The headlight wire to be tapped.</li> <li><b>2. Tighten</b> The body of the Posi-Tap.</li> <li><b>3. Strip 3/8"</b> Both Flash2Pass transmitter wires.</li> <li><b>4. Insert &amp; Tighten</b> Cap of Posi-Tap with transmitter wires.</li> </ol>
<p><b>TIP:</b> Both Flash2Pass wires are pre-stripped, and you should see cuts in the plastic surrounding the metal wire. Simply pull the plastic ends off the wires to expose the metal. Then thread the stripped wire through the Posi-Tap™ cap and screw into Posi-Tap™ base.</p>	
<p><b>5. Test the transmitter</b></p>	
<p>a. Be SAFE! Move vehicle to a safe place and where you would typically operate the garage door opener. Be sure garage door is always in sight before operating transmitter. Make sure nothing is under the garage door.</p>	
<p>b. Assuming receiver is installed, test the transmitter by flashing high beams twice <u>with vehicle engine running</u>.</p>	
<p>c. If the door does not open/close, trying moving <b>closer to the garage</b>, checking the <b>TIPs</b> on the <b>Installation</b> Webpage, watching the <b>installation video</b>, or emailing <b>info@flashtoopen.com</b>.</p>	

**6. Secure the transmitter to the vehicle (with included plastic tie, if necessary). Attach or nest the transmitter in any convenient location except where there are moving parts or excessive heat (for example, the engine, belts, or radiator hoses).**

