


ATTENTION

You are receiving the most **up to date, newest revision** of our TL6 harness. Some of the installation videos show other connectors being installed that are no longer used on any TL6 application. Do not be alarmed - you did NOT receive the wrong harness. This harness only uses TWO T-harness connectors. One under the steering column (7pin), and the other at the BCM (30pin).

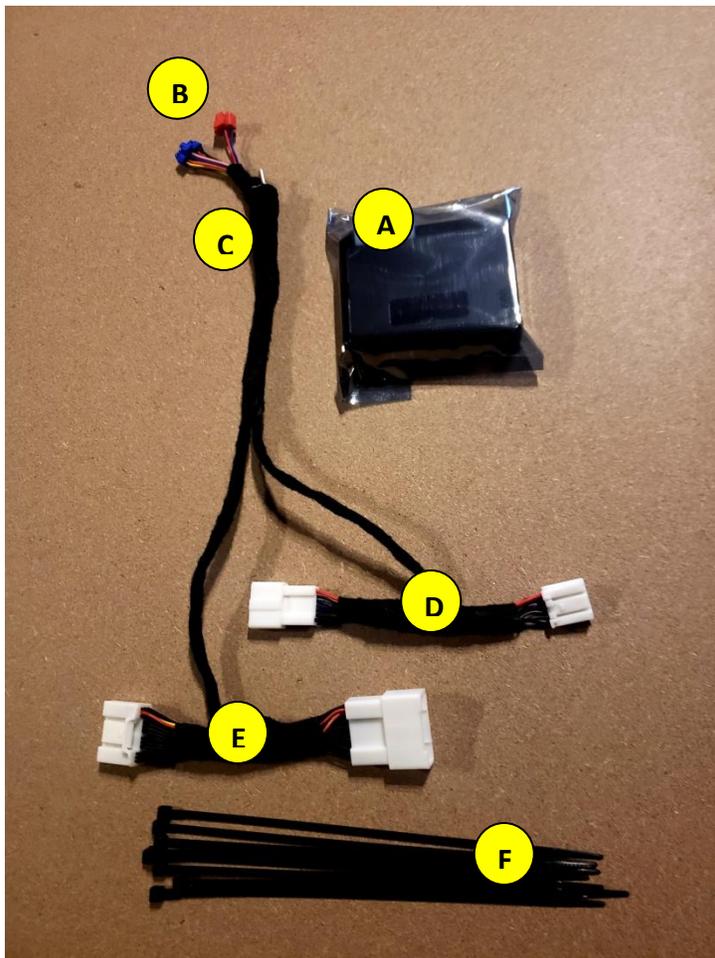

- A** Remote Start Module
- B** Module Connectors
- C** Safety Disable Switch
- D** 7-pin SLP T-Harness
- E** BCM T-Harness
- F** Zip Ties

Installation of Main Harness

1. Remove the lower dash panel and the bottom steering wheel shroud to gain access to the required connectors. (some vehicle require additional panels to be removed)
2. Make sure the connectors are unplugged from the remote start module.
3. Route the 7pin SLP connector to the underside of the steering wheel. Unplug the factory connector and install ours inline.
4. Locate the 30pin BCM connector in the vehicle. Unplug the factory connector and install ours inline. Use **EXTREME CAUTION** with this connection.. the male pins are very fragile. **DO NOT FORCE THIS CONNECTION.** If it doesn't fit with ease, check for bent pins and realign them if necessary. ***There are a few plugs at the BCM, ONLY ONE will fit our harness - You can't screw it up ;)**

SLP Connection Zip Tie Loop

Some of the Toyota clips don't fully lock into our female connector. Use one of the provided zip ties to wrap around the SLP connectors to make sure they stay secure at all times. **DO NOT OVER TIGHTEN!!!!!!**




Programming the Module

***** Before you begin programming, make sure the safety disable switch is in the OFF position and both RED & BLUE connectors are plugged into the module.**

1. Press & HOLD the button on the module - Flip the toggle switch ON - release the button when the light turns ORANGE - It will now turn solid RED
2. Press the Push-to-Start button twice to turn the ignition ON. The LED will turn solid GREEN or ORANGE (if it turns Green, you are done. If it turns Orange, continue with steps)
3. Press the Start/Stop button once to turn the ignition OFF.
4. Press the Start/Stop button twice to turn the ignition ON again. The LED will turn solid GREEN for about 3 seconds then shuts off.
5. Programming is now complete.

Rav4 - Corolla - Scion iM

The BCM connector is located near the fuse box underneath the dash. If you lay on the floor and look up, you will see it.

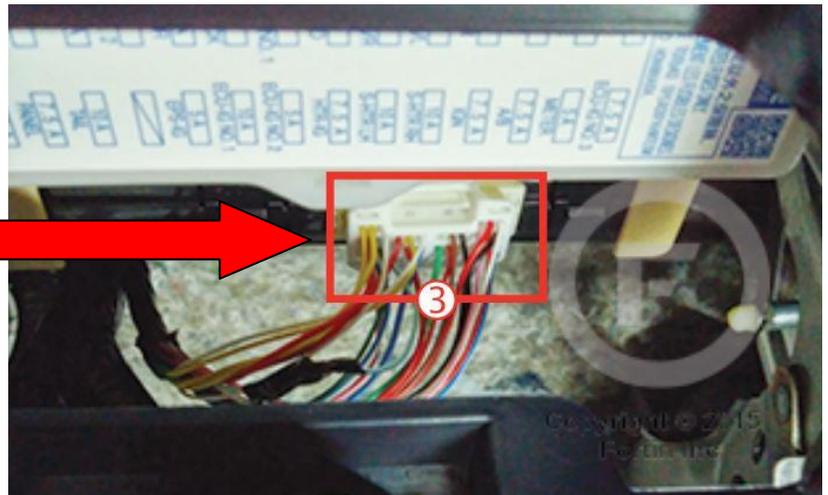

Location of the SLP and BCM connectors are in the same location for all vehicles. (except the BCM in the Rav4, Corolla,

