

# Instruction

## Overview

Smart Locator system web based system for managing your device(s).

Web browsers supported:

- \*Mozilla Firefox
- \*Internet Explorer
- \*Google Chrome
- \*Safari

Distinctive features over similar software products are

 
- \* High data performance.
- \* Designed for the multiple users and tracking units. \* Control access and [user rights](#).
- \* Remote control via internet connection.
- \* Notification for various events such as speeding, entry & exits through a geofence, and SOS alert.
- \* Notifications can be sent by e-mail and SMS, displayed online and stored in the units history to be later included in a report.
- \* Access from any operating systems such as MAC or PC or Linux.

## Login

Enter service URL [www.smart-locator.com](http://www.smart-locator.com) into the address line of your browser.



On the login page key in your username and password that you have. If you are using a private computer, you can put a check mark near [Remember me]. In this case, the next time you enter the system you will not be asked to input your login and password again.

When the username and password are entered, click [Login].

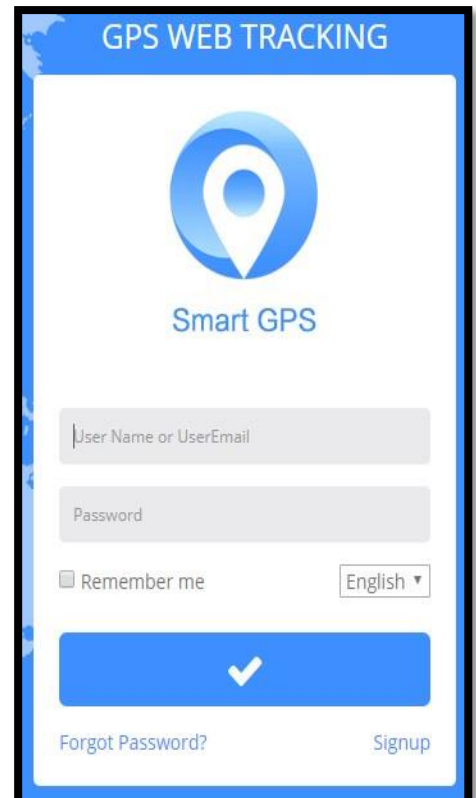

## Adding devices

  Please click on the Add **Tracker** option from the left side list under **Device Manage**. And the following page will be shown.

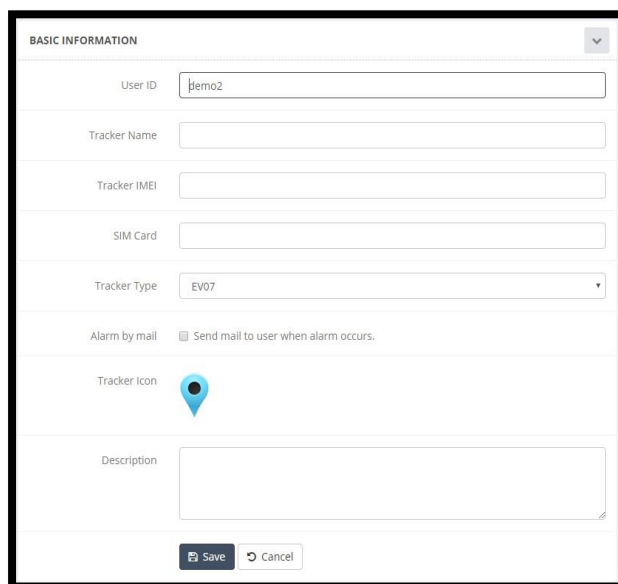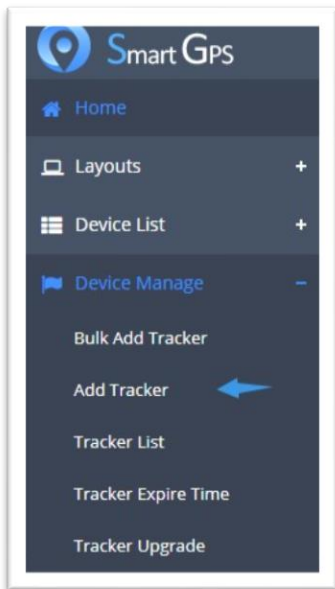A screenshot of the 'BASIC INFORMATION' form for adding a new tracker. The form has a white background and a black border. It contains several input fields: 'User ID' (with 'demo2' entered), 'Tracker Name', 'Tracker IMEI', 'SIM Card', and 'Tracker Type' (a dropdown menu with 'EV07' selected). There is a checkbox for 'Alarm by mail' with the text 'Send mail to user when alarm occurs.' below it. A 'Tracker Icon' field shows a blue location pin icon. A 'Description' field is at the bottom. At the very bottom are 'Save' and 'Cancel' buttons.

**User ID:** It will show the default account that manages the device.

 
Or you can modify it to one of the subaccounts. **Tracker Name:** This is the given name for the device.

**Tracker IMEI:** Please find this from the barcode.

**SIM Card:** This is to record the SIM card number inside the device.

**Tracker Type:** Please select EV07 as the hardware version.

**Alarm by email:** This is to let the alarm(s) to be sent to your email address as well.

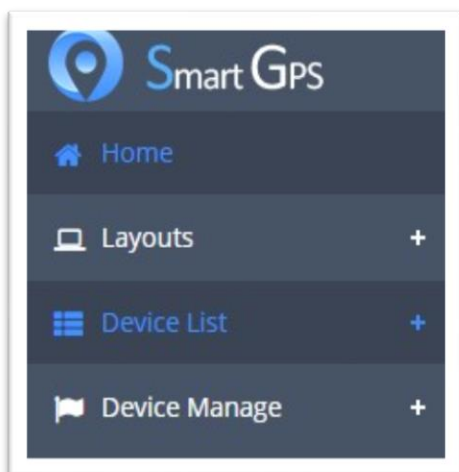

After clicking the Save button, you should go back to the Device List and refresh the page, now you can use your device.


## Interface

 The user interface of the platform is simple.

### Top Panel

At the top-right of the window there are the following elements: User Information, System messages, Alarm messages, Online/Offline numbers.


### Work Area

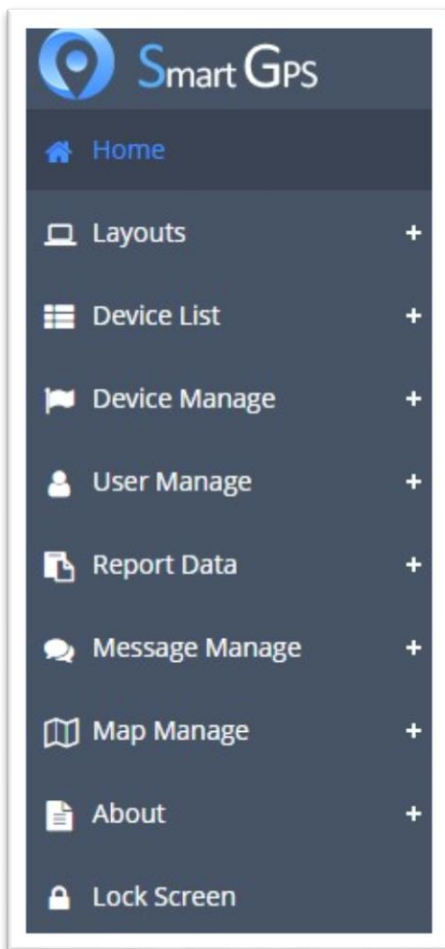


The left side of the screen is the work area. There are several panels which can be selected. They contain the basic instruments to manage the service:

- Layouts (tracking units position, state and movements)
- Device List (controlling units by setting parameters)
- Device Manage (creating, editing, removing geofences)
- User Manage (viewing movement history)
- Report Data (viewing alarming history)
- Message Manage (locate manually with coordinates)
- Map Manage (measuring distance)
- About (grouping units& users in your own way)
- Lock Screen

Panel Hiding

At the left bottom corner there is a button  to hide or show the work area.

### Tracker Settings

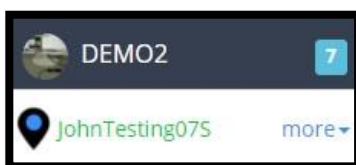 

To view device settings, click on [**More**] on the right side of the tracker name in the Device List. Here you can customize some of the parameters of service functionality.

### Time Interval

To set a time interval of data transmission. The unit is 10 second. For example: 5, means the device sends data every 50 seconds.

Click [Cancel] to make the device disconnect from the server. To reconnect, you will need to send an SMS command(S2) to let the device reconnect again.

### Set number A, B, C

 
In SMS mode, users need to set at least one mobile phone number to send/receive commands, alerts. Mobile phone numbers should be written in international format, that means they start from "+", then follow country code, and the phone number itself. For example: +61 0412 121 212.

### Time Zone

Indicate your time zone accurately because all time values in messages got from devices are displayed in accordance with time zone selected.

### Over speed limit Alarm

This is designed to trigger an SMS and online alarm, when the vehicle exceeds the set point speed programmed.



Request Status

Click [Request] to get all current parameters.

Reboot

Click [Reboot] to reboot the device.




### Movement Alarm

   It's a onetime alarm with a configured radius. The current position of the device will be the center of the circle. You will get alert once the device moves out of this circle.


### Non-Motion Alarm

If there is no motion/vibration detected in the configured period, the device will then send out "Non-motion Alarm" to the preset numbers.

## Geofence

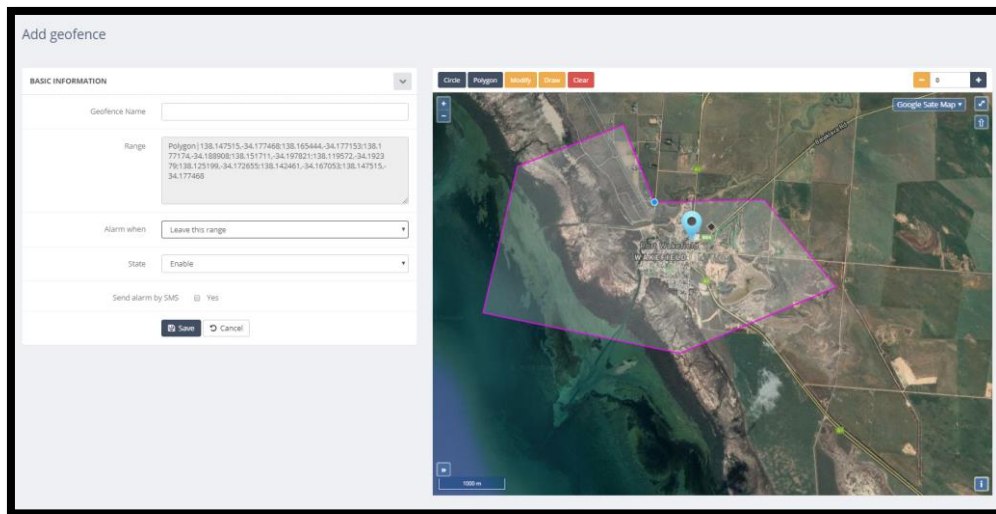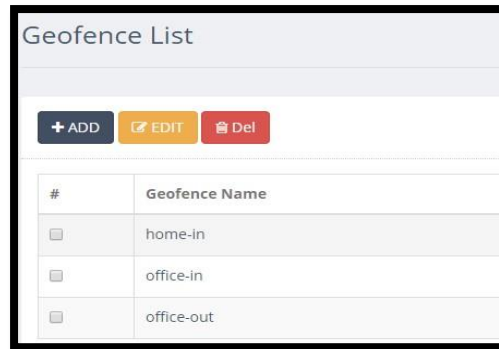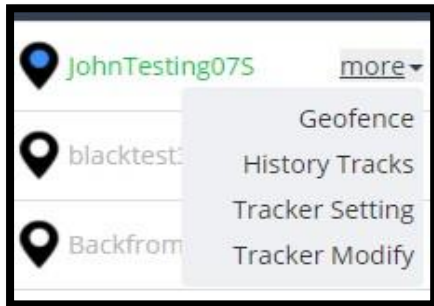


 Geofence, or geographical zone, is a specified area on the map. It can be used for alerts and notifications of device activity, like going into/out this area.

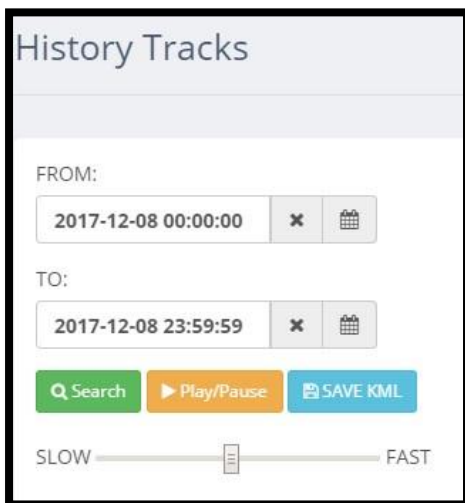


## History Tracks

 To see the movement tracks, form the map in a selected period.

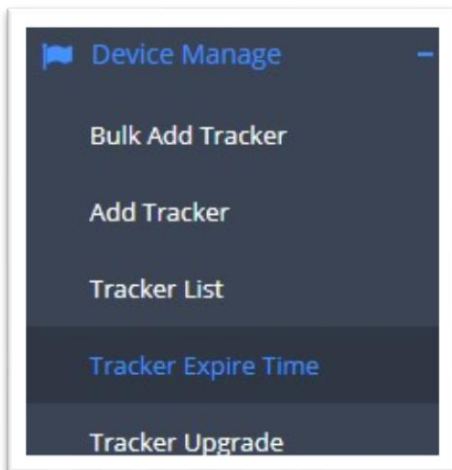

\* Buy the service for devices.

 To make sure they can provide the best service, customers will be charged US\$3 per device per month. Device will be eligible for a 14-day free trial. Then you will need to subscribe to the service. If the payment is delayed the system will suspend the data transmissions.

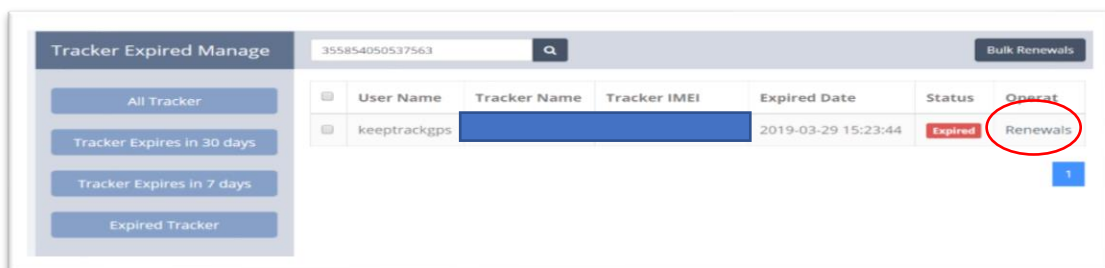

Expired Date

Device Information:

Tracker Name	Tracker IMEI	Expired Date
		2019-03-29 15:23:44

Continuation Time:

A month

Three months

Six months

A year

\$

3.00 USD (Offer: 0 days free/Tracker)

PayPal

[Purchasing Tips] Electronic service products are not subject to the return policy. This product will not be returned once it has been sold.

Cancel

Submit