

**phaiser™**

# TECTON

**BHS-730**



USER MANUAL

The BHS-730 is more than just a Bluetooth headset. While providing best all day wearing comfort it lets you listen to your favorite tunes in premium stereo quality, keeping you connected to the world at all times.

By connecting to your phone or tablet through Bluetooth instead of cables, this headset saves you lots of hassle and supports your active lifestyle wherever you go.

The BHS-730 employs Nanocoating-Technology to safeguard itself against Sweat and Moisture.

The BHS-730 complies with the Bluetooth V4.1 Standard.

**Upper button**

Increase volume, Next, FF

**Middle control button**

On/Off, Play/Pause, Answer/Hang up

**Lower button**

Decrease volume, Previous, REV

## Product Features

1. Lightweight metal earbud design for all-day wearing comfort with strong Bass and HD Stereo Music.
2. Patented wing-shaped earphone tips keep the buds in your ears during even the toughest workout.
3. Magnetic earphone design enables you to securely stow your earphones while not in use.
4. The easily operable buttons offer functions for answering phone calls and controlling audio playback.

## Specifications

**Bluetooth Specification:** Bluetooth 4.1

**Battery:** Lithium Polymer Battery 3,7V

**Standby Time:** UP to 160 hours

**Talk Time:** UP to 5 hours

**Music Playback Time:** UP to 5 hours


**Charging Time:** Less Than 2 hours

**Operating Temperature:** 14°F/-10°C to 140°F/60°C


## First Steps

To ensure best battery performance, it is recommended to charge the headset fully before first use.

Please open the back of the right earphone using your fingernail near the lightning symbol and connect the USB-charging cable. Please follow below illustration to open the chargeport-cover.

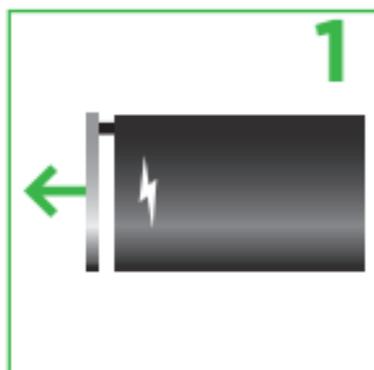


look at the back of the right earphone and find the lightning symbol

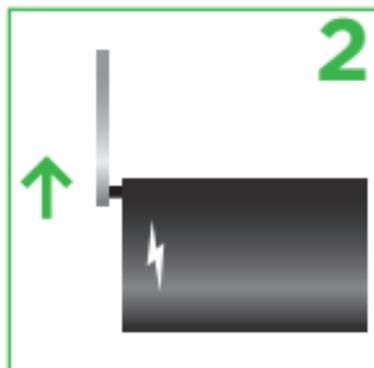

pull the knob near the lightning symbol with your fingernail




rotate the now loose backplate away from the earphone so it allows you to easily plug the USB cable

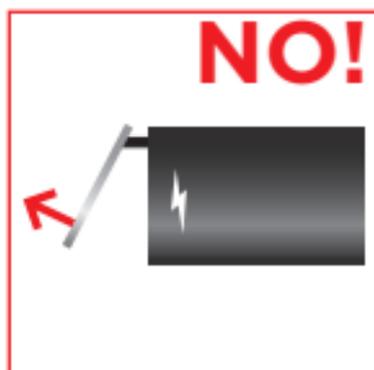

**WARNING:** Do not pull the backplate up to plug the USB cable, this may damage your headset. Always rotate the backplate away from the base to charge.


## Inserting the Comply™ Premium Earphone Tip

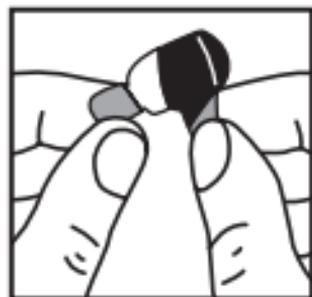

1. Squeeze down the foam tip and roll the tip into a thin, round cylinder.



2. Pull back and up on ear to open the canal. Gently insert the entire tip into the ear.

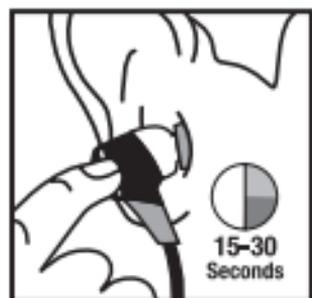

3. Hold the tip in place until it expands

## Installing the Comply Earphone Replacement Tips



- 1.** Remove the silicone tip from the earphone.
- 2.** Clean the earphone nozzle of any debris with a dry cloth.
- 3.** Insert the earphone sound port nozzle into the tip's core at an angle. Then push the rest of the tip onto the earphone's nozzle.
- 4.** Repeat for the other side

Note regarding the functions described in this manual: Not all phones or other connected Bluetooth devices support every function. For further information, please refer to your device's user manual.

## Pairing

Before using the headset for the first time, you must pair it with another Bluetooth-enabled device (for example a phone). The headset will automatically enter pairing mode after you power it on and become visible to other devices.

- 1.** Put the earphones in your ears and keep the middle button on the control unit pressed for 3 seconds. You will hear the audio message "Power On".
- 2.** On your phone find the Bluetooth menu and "search for" or "add" new devices. Select "BHS-730" from the list and pair it.
- 3.** Once the headset is successfully connected to your phone, you will hear the audio message "Connected".

## Additional Pairing Notes

1. If asked for the Pass/PIN code, please enter "0000" or "1234". Newer phones do not require this.
2. Some phones may ask permission to access the phone contact list. If you receive this message on your phone, please select "OK" or "allow access".
3. The headset will automatically turn off if not paired within 15 minutes.

## Manual Pairing, Pairing with a second device or Re-Pairing:

1. Simultaneously press and hold all 3 buttons on the control-unit for 3 seconds while the headset is turned On. You will hear the pairing tones and the audio message "Disconnected" (The original connection will be lost while in pairing mode).
2. Search the Bluetooth menu of your device for "BHS-730" and complete above regular pairing steps until successfully connected.

## Multipoint

This headset is capable of connecting with 2 devices at the same time, enabling you to use the headset with both devices simultaneously.

A common application, for example, is to connect your phone and your tablet-pc. You will be able to enjoy media on your tablet-pc while not missing phone calls from your phone.

Note: The headset can use the middle control button functions only for the primary handset. The second device connected to the headset will be the primary device where the middle control button works.

- 1.** Pair the headset with the device which will NOT be used for calling according to the instructions on under "Pairing" (Turn the headset on and select "BHS-730" in the Bluetooth menu). This device will be the secondary device.
- 2.** Pair the headset with the primary device according to the instructions under "manual pairing" (press and hold all 3 buttons for 3 seconds). This device will be the primary device where all functions for the middle control button work by default.
- 3.** Once you paired and connected the primary device, go back to the secondary

device and connect the headset again through the device's Bluetooth menu. You will hear the voice confirmation "Connected".

Additionally you can use the manual pairing method when you already have 2 devices connected to the headset and like to connect the headset to a third, different device instead.

Of course you can reconnect one of the 2 previously connected devices again through its Bluetooth menu to use Multipoint functions again.

## Auto Reconnect

1. If you turn the headset off, it will be disconnected from your phone. It will automatically attempt to reconnect once turned back on and in range.
2. A secondary device must be reconnected through the Bluetooth-menu by selecting "BHS-730".

## Out Of Range

- 1.** If headset and phone are separated by more than 10 meters (33 feet), they will disconnect. The headset will alert you by playing the out of range tones and then say "Disconnected" once the connection is terminated.
- 2.** In case headset and phone do not automatically reconnect once back in range, briefly press the middle button on the control unit to manually reconnect. You can also use manual reconnect to abort pairing mode and connect to the last connected device.
- 3.** While you are in multi connection mode, a device which goes out of range, will lose connection. The headset will notify you by playing the out of range tones. The headset will keep trying to connect to the lost device and notifying you. You need to turn the headset off and back on to stop the headset from attempting to reconnect to the lost device. Alternatively, you can turn off Bluetooth on the left behind device.
- 4.** In case you intentionally switched off the Bluetooth function on a single connected device and hear the "Disconnected" message, you can immediately go to the Blue-

tooth menu of your other device (phone or tablet) to connect the headset by using the regular pairing steps described earlier. The headset will become visible to other devices as soon as all connections are dropped or it's forced to pairing mode by pressing and holding all 3 control buttons at the same time for 3 seconds.

## ON / OFF-Function

Keep the middle button on the control unit pressed for 3 seconds to turn on the headset. You will hear the audio message "Power On". To turn off the headset, press and hold the middle button on the control unit again for 3 seconds until you hear the "Power Off" message. The indicator LED on the control unit will turn off.

## Charging the Headset

Turn the headset off and plug in the USB charger cable. You can either choose to use a dedicated wall charger with USB ports (like a mobile phone charger), your computers USB ports or basically any powered USB port. Once you start charging the indicator-LED will be constantly ON. After the charge is complete, the LED will turn off.

## Answering Calls

As soon as you have an incoming phone call, the headset will notify you by ringtone and read the phone number of the caller to you. To answer, briefly push the middle button on the control unit or answer the call on your phone. The call will be transferred to your headset if not set differently in your phone.

## Refusing Calls

To refuse a call, double press the middle control button and the call will be rejected. You will hear a confirmation tone.

## Ending Calls

To end a call, press the middle control button briefly or end the call through your phone.

## Last Number Redial

To redial the last number you called, simultaneously press and hold the middle control button and the “-” (lower button) until the phone starts dialing.

## Volume Control

By briefly pressing “+” (upper button) you can increase the volume and by pressing “-” (lower button) you can decrease it. Be careful not to press quickly consecutively as this will trigger next/previous track function. When volume reaches maximum or minimum, you will hear a warning tone. Warning: Listening to music on a high volume over a longer period of time may damage your hearing ability.

## Voice Dialing

Double press the middle control button to activate your phone's Voice-Dial function and say the name of the person you want to call. Please be sure to have an audio sample stored in your phone before using this feature. Also it is necessary that your phone supports this feature and that it is turned on. Please refer to your phone's user manual for further information.

## Play / Pause

During media playback you can press the middle control button briefly to start, pause or resume playback. It is also possible to use your phone's media player to control this function.

## Next / Previous Track

During media playback you can skip between tracks by double pressing the “+” (upper button) for “Next Track” or “-” (lower button) for “Previous Track”.

## Fast Forward / Rewind


During media playback you can fast forward by pressing and holding the “+” (upper button). When you arrive at your desired position, release the button and normal playback will resume.

To rewind a track, use the “-” (lower button) in the same way. It is necessary for your media player to support this feature.

## Equalizer Settings

In case you want to change the way the headset reproduces music from your device, press and hold “+” and “-” at the same time until you hear a beep. This will change the equalizer setting. There are 3 equalizer settings available: “Normal” (default), “Bass” and “Treble”. Try them out to find the most suitable one for your preferred music style.

## Battery Status Notification

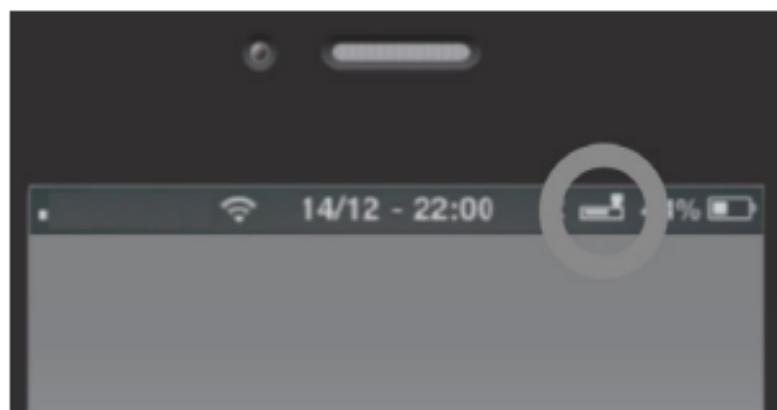

Every time you turn the headset on, you will hear the battery status notification. There are 3 battery levels reported:

**“Battery High”**: 100% to 66% battery life

**“Battery Medium”**: 66% to 33% battery life

**“Battery Low”**: 33% to 0% battery life

While the headset is already turned on, you can trigger the battery status notification manually by briefly pressing “+” and “-” at the same time.

The headset will start to report “Battery Low” automatically, once the battery life reaches 5 to 10 minutes before automatic shutdown.

On iOS and some newer Android devices, you will be able to see the battery level of the headset in the upper right corner near the Bluetooth-symbol.

## Three Way Calling

To answer a second call coming in on either of your connected devices without hanging up the first call (putting the first caller on hold), briefly press the middle button while the second call is ringing.

To answer a second call and hang up the active call, double press the middle control button while the second call is ringing.

To reject a second call, press and hold the middle control button for 1 second while the call is ringing.

To switch between active and held call, putting the active call on hold, press and hold the middle control button for 1 second.

To hang up the active call, briefly press the middle control button.

## Microphone Mute and Unmute

While on a call, press and hold the “-” button for 2 seconds, until you hear the notification tone, to mute the microphone. To unmute the microphone, repeat this procedure.

## Troubleshooting the headset

**Issue:** The headset does not work

**Solution:** Please make sure the headset is turned on and charged.

**Issue:** Phone disconnects with headset

**Solution:** Make sure the phone supports the Bluetooth Hands-Free Profile and is in range.

**Issue:** Headset does not work properly with the phone

**Solution:** Pair phone and headset again, make sure headset is in range (no obstacles like other electronic devices or walls).

## Avoiding Problems

- Please turn the headset off before putting it into your bag or pocket to avoid accidental calls.
- Do not clean the headset with solvents or abrasives.
- Do not expose the headset to extreme temperature (not outside 14°F/-10°C to 140°F/60°C).
- Do not expose the headset to fire, the battery may explode.
- Do not attempt to open the headset.
- Do not put heavy objects on your headset.
- Avoid moisture and dust.
- Do not use the headset while swimming or showering.
- For safe storage, please keep the headset in a dry place.
- If stored longer than 1 month, please recharge the battery before use.

## Additional Information

### Radio Frequency Exposure

This headset is a radio transmitter and receiver. It communicates with Bluetooth equipped devices by receiving and transmitting radio frequency (RF) electromagnetic fields (microwaves) in the frequency range 2.4 to 2.4835 Ghz. The output power of the headset is only 0,001 watt (low). The headset is designed to comply with the RF exposure guidelines and limits set by national and international authorities and health agencies.

### Potentially Explosive Atmosphere

If you enter a potentially explosive atmosphere, please make sure you turn off your headset. Such areas are rare and in most cases, but not always, clearly marked. It is unlikely but possible that your device could generate a spark and cause an explosion or fire resulting in serious injury or death.

### Avoiding Hearing Damage

Serious and permanent hearing damage and even loss of hearing may occur if you use your headset continuously at high volume. Please be sure to set the volume to a safe level. Using high volume continuously may

feel normal after some time but it can still damage your hearing ability. In case you experience ringing or muffled speech, do not continue listening and have your hearing checked. The higher the volume the sooner your hearing may be affected. Hearing experts suggest that you protect your hearing. It is better to use the headset only for a limited time at high volume. It is not suggested to turn up the volume in noisy surroundings to block out the noise. In case you cannot hear people talking to you anymore, please turn down the volume.

Please refer to earlier pages of this manual on how to adjust the volume.

## Headset Safety Information

In some areas it is illegal and generally it is not recommended to use the headset for listening to music while operating a vehicle. You should be careful and attentive while driving. Do not continue using the headset if you find it distracts you while operating any kind of vehicle or during any other activity requiring your full attention.

# TECTON

BHS-730

*Customer Service*  
*support@phaiser.com*



FCC ID: 2ADQABD-122

© 2015 Phaiser  
Gebrüder Frischknecht GmbH  
9540 SW Gemini Dr #96459, Beaverton, OR 97008-7105, USA

© 2015 Liquipel.  
*Liquipel is a registered trademark of Liquipel IP LLC.*

© 2015 Hearing Components.  
*Comply is a registered trademark of Hearing Components.*

*Made in China*