

 
 
 phaiser

TECTON

BHS-730



QUICK START GUIDE

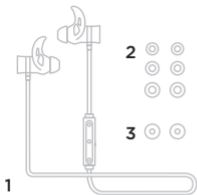

WHAT'S IN THE BOX?

- 1 BHS-730 Headphones
- 2 3 Sizes of Silicon Eartips
- 3 1 Pair of Comply™ Foam Tips*
- 4 3 Winged earphone tips
- 5 Carrying Case
- 6 User Manual
- 7 USB Charging Cable
- 8 2 Collar Clips
- 9 2 Pairs Cable Management Clips

* Only applies to models which include Comply™ Premium Earphone Tips.

HOW TO CONNECT?

Press and hold the Middle control button for about 5s. As soon as you hear the „Power On“ message and the LED indicator turns blue, go to the Bluetooth menu of your phone. Search for new Bluetooth devices and select „BHS-730“. If something doesn't work, try turning your phone's Bluetooth off and on again.



HOW TO CONTROL?



- Vol+
- ▬ Skip forward
- Accept call/Play/Pause
- Voice assistant
- ▬ On/Off
- Vol-
- ▬ Skip backward
- ▬ Mute/Unmute

● single click

▬ long press

●● double click

HOW TO CHARGE?

Although the headphones come with a partially charged battery, it is recommended that you fully charge your BHS-730 before first use.

Open the charging port cover with your fingernail and connect the USB charging cable. The LED indicator will turn red while charging. When the LED turns blue, the headset is fully charged. This takes less than 2h.



HOW TO MAKE THEM FIT?

Make sure you hear the great HD Sound of your BHS-730. Everyone's ears are different, be sure to try all sizes of eartips to find the perfect one for you. Push the earbuds into your ear gently to get a good seal. You will enjoy a great fit and premium sound quality with the right size of eartips.

You find 3 different sizes of Silicon Tips and one pair of Comply™ Premium Earphone Tips* in the box.

Silicon Tips



Comply™ Premium Earphone Tips*



* Only applies to models which include Comply™ Premium Earphone Tips.

HOW TO WEAR FOAMTIPS?



1. Squeeze down the foam tip and roll the tip into a thin, round cylinder.



2. Pull back and up on ear to open the canal. Gently insert the entire tip into the ear.

 


3. Hold the tip in place until it expands.

Only applies to models which include Comply™ Premium Earphone Tips.

HOW TO USE THE WINGS?


When you put the buds into your ears, the pointy end of the wing needs to point forward, towards your face. Hook the wing into your ear so it can get a grip and adjust it to find the most comfortable position.

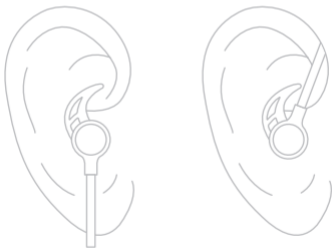

HOW TO MANAGE THE CABLE?

In order to prevent the cable from dangling, use the included cable management clips to tighten the cable behind your head.

 
Insert the cable into your preferred cable management clips as illustrated below and carefully tighten until the cable fits comfortably behind your head.

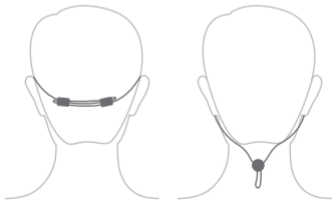

HOW TO CHECK THE BATTERY LEVEL?

Every time you turn the headphones on, you will hear the battery status notification. If the headphones are already turned on, you can trigger the battery status notification manually by briefly pressing “+” and “-” at the same time.

 On iOS and some Android devices, you will be able to see the battery level of the headphones in the phone's status bar at the top.

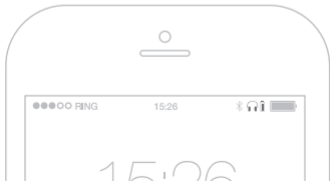

 phaiser

TECTON

BHS-730



FCC ID: 2ADQABD-152

© 2018 Phaiser

Phaiser LLC, 1999 Bryan St, Ste 900
Dallas, TX 75201-3136, United States

© 2018 Liquipel

Liquipel is a registered trademark of Liquipel IP LLC

© 2018 Hearing Components

Comply is a registered trademark of Hearing Components

Made in China

www.phaiser.com