

Car MP3 Player

Car Wireless FM Transmitter User Manual

Product Features

- Plugging the device into car cigarette lighter, then it will turn on automatically; when it is in working state, the screen will display the voltage of car battery and monitor the car battery in any time.
- 2. Noise and wind suppressed by CVC technology to create full duplex sound quality 3. Support mobile's A2DP function. Music can be played
- directly while the mobile phone is connected.
- 4 Mobile phone can be connected automatically when the device turns on 5. Support an external TF card, which can play music files
- in MP3/WMA format
- 6. Integrated car charger function and its output is 5V/2.1A. which is available for charging handheld device.

Operation Instructions

- 1. Power-On (1) Device turns on automatically when plugging it into
- cigarette lighter.
- (2) Select a blank channel.
- (3) Turn on car FM stereo and adjust the frequency same as that of the device.

2. Frequency and Volume Adjustment (1) The frequency of this device is available from 87.5 -

108.0 MHz, which can be adjusted by CH+ and CH- button

3. Playing Music from TF Card

(2) Adjust the volume by rotating

- (1) Insert the TF card into the device, it will automatically detect and play the MP3/WMA/WAV format music in the TF
- (2) Music selection; press and button to switch to

4. Connection to Wireless Devices

next/previous song.

click to connect it.

- (1) This device is equipped with build-in Wireless chip. which can connect to other handheld. Wireless, devices (2) The pairing state will be activated automatically when the device is powered on with the blue light flashes. Then
- you can search wireless model "T10" with your phone and
- (3) This device has memory function. It will automatically connect to the previous connected devices when power on
- (4) If you want to remove the memorized devices, please press and hold the Frequency button to remove

- 5. Playing Music from Mobile Phone (1) Once it connects successfully, music can be transferred from phone to the car stereo.
- (2) You can control Volume +/ , Play/Pause,

Previous/Next song through both your phone and the

6. Switching Music File Sources

(1) It can play the music from TF card and the device with Wireless function: you can switch the file source between TF card and device with Wireless by long press

7. Making a Call


- (1) You can make and answer a call through this device after connecting with Wireless
- (2) Double click (a) to redial the last number.
- (3)Reject a call: Long press (a) for about 5 seconds to reject a call.

8. AUX Input/Output

- 1) AUX Input: This device supports Line-in function, which can play music from MP4. CD. etc. via the 3.5mm AUX
- (2) AUX Output: It can output audio to speaker, car stereo and portable earphone through the 3.5mm AUX port by a

AUX cable

9. Part Description

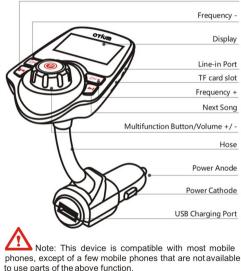

Product features will be upgraded without any notice.

1. How to pair mobile Previous Sona 2. How to play and pause Display 3. How to adjust volume

Operation

Instruction

set Adjust the volume by rotatong 🔕 4. How to set Press CH+ and CH - to frequency adjust frequency Press button to play next

6. How to answer

5. How to select Press | button to play music previous sona

FM Transmitter

lighterpower

Plug the device to cigarette

Press 🔕 button to play,

press again to pause

Press **(S)** button shortly to answer an incoming call.

Press (6) button to shortly stop the call during call answering and stop a call Press (6) button longer during calling to refuse call double Press button to recall last phone No. during no calling

7. Switching mode long tap | last for 5s, then it will switch to TF card or Bluetooth mode.

Wireless Version: V3.0 + EDR

Wireless

Sensitivity: -42db+ / 3 db 360 Voltage: 5 v + / -0.5 Working Current: 45mA (Max) Stand-by Current: 25mA (Max) Frequency: 2.4 GHz Effective Range: 5 Meters Sensitivity: -92 dBm RF Output: 4 dBm

Frequency: 87.5MHz -108.0MHz Transmitted Power: 87 dBuy / 107 dBuy Effective Range: 2 Meters

 
voltage damage

1 First of all, a blank FM channel must be chosen for car radio, then the frequency of T10 should be adjusted as the 2. After a long time use, vour car speaker may have some

same as the frequency of car radio.

troubles. Therefore, please don't turn up car speaker's

volume to maximum to avoid static and distortion effectively 3. When the device is out of use for a long time, please pull it out of cigarette lighter. When using again, it should be





((C) C € F(C) 💉