

PULLMAN[®]

QUALITY CLEANING SOLUTIONS

IDEAL FOR:

- Offices
- Garages
- Restaurants
- Gymnasiums & Schools

**30L WET & DRY
CANISTER**

1200W MOTOR



WD30BV1



IMPORTANT



Always switch off the cleaner and remove the plug from the electricity power supply before cleaning your appliance, when not in use or attempting any maintenance task. The cleaner must only be connected to an AC power supply at the voltage shown on the rating label. This cleaner should only be used for its intended purpose as described in this instruction manual.

Never operate the vacuum cleaner without filters.

SAFETY PRECAUTIONS AND WARNING:

WHEN USING YOUR VACUUM CLEANER, BASIC PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING;

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent electrical shock, do not immerse the top cover of the appliance, power cord or power plug into water or other liquids.
4. To prevent electric shock, do not use the vacuum cleaner outdoors.
5. Always check the power cord before use, the power cord and the plug should be in a good condition and must not be damaged. If the power supply cord is damaged or defective, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Do not unplug by pulling on the power cord. To unplug, grasp the plug not the power cord. Use only Australian and New Zealand electrical safety approved extension cords.
7. Do not pull or carry the appliance by the power cable, use the power cable as a handle or pull the power cable around shaft edges or corners. Avoid running the appliance over the power cable.
8. Ensure the appliance is switched off before unplugging.
9. Do not handle or operate the appliance with wet hands and follow electrical safety precautions at all times.
10. Extreme caution should be exercised when using the appliance on stairs.
11. Do not attempt to change the attachments while the appliance is plugged in to Mains power supply. Switch off and remove plug from Mains power supply. Use only manufacturer's recommended accessories.
12. Do not operate the vacuum cleaner too close to the heaters, radiators and other hot surfaces.
13. Do not use the appliance to pick up flammable items or combustible liquids (i.e. gasoline, hot ashes cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
14. Do not use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
15. Ensure the appliance is disconnected from the Mains power supply before connecting the hose to the unit.
16. Before vacuuming, remove any large or shaft objects from the floor or cleaning surface in order to prevent damage to the filter.

17. If the air inlet, floor head or the telescopic tube is blocked, switch off the cleaner straight away and remove from the Mains power. First clear the blocked object before attempting to start the cleaner vacuum again.
18. Do not leave the appliance unattended when it is connected to a Mains power supply.
19. Before carrying out any maintenance service or cleaning the filters, always switch off the vacuum cleaner and disconnect the plug from power supply.
20. Keep ends of the hose, telescopic tube and other openings away from your face and body.
21. Do not use the vacuum cleaner if it is damaged or breaks down. Check the electrical regularly for defects. If connection cables, electrical hoses, electrical contacts and electrical tubes are damaged, have them replaced immediately.
22. Never clean any of the electrical parts, especially the electrical connections with water or liquid cleaners.
23. Never attempt to make any modifications electrically to the vacuum cleaner.
24. Always store the appliance indoors in a cool and dry place.
25. For indoors use only.
26. Damage caused by improper use or by not observing the instructions in this manual will void warranty.

BEFORE YOU BEGIN



1. **Do not** operate the vacuum cleaner too close to heaters, radiators, or other hot surfaces.



2. Before inserting the plug into the wall, make sure your hand is dry.



3. Before turning on the vacuum cleaner, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.



4. When you want to pull the plug from the wall, **do not** use the power cable, gently pull the plug from the power socket.

5. If the hose inlet or telescopic chrome tube are blocked, you should switch off the cleaner straight away and remove from mains power. Clear the blockage before attempting to start the vacuum cleaner again.

THIS MACHINE IS EQUIPPED WITH A CORD AND PLUG. IN THE EVENT THAT EITHER OF THESE PARTS GET DAMAGED, IT MUST BE REPAIRED BY A QUALIFIED TECHNICIAN.

KNOW YOUR PRODUCT

- | | | |
|-----------------------------|--------------------------------|-------------------------------|
| 1. Air Inlet | 8. Latches | 15. Upholstery Tool |
| 2. 2 Piece Chrome Tube | 9. Hose Inlet | 16. Dust Bags x 1 |
| 3. Hose | 10. Tank | 17. Crevice Tool |
| 4. Cord Holder | 11. Wheels | 18. Gulper Advance Floor Tool |
| 5. Filter Auto Clean Button | 12. Drain Cap | 19. Wet and Dry Floor Tool |
| 6. Cord Connection | 13. Universal Accessory Holder | |
| 7. On/Off Button | 14. Brush Tool | |

Technical Information

Model: WD30BV1

220-240V~ 50Hz

Pmax: 1200W

Pmax: 2200W

(including power socket)

Power socket Pmax: 1000W

Net weight: 9.6kg

Noise Level: 78.5dBA



IPX4



ASSEMBLY

Assembling the Hose and Floor Tools

PLEASE FOLLOW THE BELOW INSTRUCTIONS WHEN USING THIS MACHINE WITH THE HOSE ASSEMBLY AND FLOOR TOOLS.



1. Connect the hose handle to the first tube.



2. Connect the first tube to the second tube.



3. Connect the tube to the desired cleaning accessory.

ASSEMBLY (CONTINUED)



4. Insert the rear wheel housing set into the correct side.



5. Secure with screws and a screw driver.



6. Insert the small castor wheels by pushing down firmly.

ASSEMBLY (CONTINUED)



7. Insert the hose end into the hose inlet.



8. Start the cleaner by pressing the on/off switch.

ACCESSORIES



Gulper Advance Floor Tool

Gulper Advance with ball bearings in the wheels delivers a smoother glide across any surface; the lip seal in the pivot joint ensures no loss of suction & better pick up while the rubber bumper bar protects skirting boards from marks.



Wet and Dry Floor Tool

Ideal for cleaning up messy spills involving liquids.



Crevice Tool

Eliminate dust from hard-to-reach places like radiators, crevices, corners, baseboards or between cushions with this easy-to-use crevice tool.



Upholstery Brush

Ideal for cleaning blinds, bookshelves and lampshades.



Dusting Brush

Ideal for cleaning blinds, bookshelves and lampshades.

OPERATION



Variable Suction Control

Slide the regulator on the handle to adjust the suction power. For higher suction on hard floors, slide it closed.

For lower suction on long pile carpets or rugs, slide it open.



Dry Vacuum Cleaning

1. Ensure the filter is always fitted before the cleaner is used.
2. This cleaner should be used with a dust bag.
3. Please ensure the dust bag is fitted properly before use.
4. Once the dust bag is full, we recommend a new dust bag be fitted.
5. Turn the switch of the vacuum cleaner to position "I" or "II" if using the Power Outlet.
6. Empty the dust tank and remove the dust bag when it's full or after each use.



OPERATION



Wet Vacuum Cleaning

1. Ensure the HEPA filter is fitted and the dust bag is removed before the cleaner is used.

NOTE: DO NOT USE A DUST BAG FOR WET VACUUMING!



2. After cleaning, unplug the cleaner from the mains power supply, empty the tank by using the drain port. Avoid leaving dust or dirty water in the tank.
3. Wipe the machine inside and out from time to time, using only luke warm water. Before use always examine the power cable for cuts and/or damage.
4. Wet pick up accessories should be washed periodically.



Blower Function

Cleaning hard to reach locations or, where vacuuming is not possible, like leaves from a garden bed.

1. Connect the suction hose to the blower connection, this will activate the blower function.



Power Outlet

240V power outlet allows you to attach a power tool and then use the vacuum as an extractor while you work.

To use the power outlet, turn the switch of the vacuum cleaner to the "II" position. The vacuum will power on after the power tool is turned on.

Max output of the Power Outlet is 1000W.

MAINTENANCE



ATTENTION: DISCONNECT FROM MAINS POWER SUPPLY BEFORE DOING ANY MAINTENANCE WORK. IF PROPER CARE IS TAKEN TO MAINTAIN YOUR CLEANER, MOTOR MAINTENANCE IS UNNECESSARY. HOWEVER WE RECOMMEND THAT YOUR CLEANER IS SERVICED ONCE A YEAR.



1. Release the locking latches to remove the canister lid.



2. Unlock the locking knob and remove the HEPA filter.



3. Remove the dust bag.
4. Empty the tank and clean the inside of it thoroughly, use luke warm water only.



MAINTENANCE (CONTINUED)

IF PROPER CARE IS TAKEN TO MAINTAIN YOUR CLEANER, MOTOR MAINTENANCE IS UNNECESSARY. HOWEVER WE RECOMMEND THAT YOUR CLEANER IS SERVICED ONCE A YEAR.



5. Wash and clean the HEPA filter carefully using lukewarm water.
6. Dry by airing for at least 24 hours.
7. Re-fit the HEPA filter and dust bag into the machine.



8. Replace the exhaust filter every six months.



Auto Clean Button

1. While the vacuum is powered, block the Hose Inlet and make sure it is completely blocked.
2. Press the Filter Auto Clean Button 2-3 times while still blocking the Hose Inlet.

TROUBLESHOOTING

| TROUBLE | POSSIBLE CAUSE | REMEDY |
|-------------------------------------|-----------------------------------|---|
| Suction weakens or cleaner runs hot | Clogged filter | Brush dirt from filter. If condition continues, change filter. |
| | Air leak | Check all fittings for tight fit (floor tool, hoses, etc.). Check that tank cover is sealed properly. |
| | Obstruction in hose or floor tool | Check floor tool, hose, etc. for obstructions, and remove if present. |
| Misting in the exhaust air | Saturated filter | Remove saturated filter and the filter mesh. |



SPARE PARTS

FOR CUSTOMER SERVICE OR PRODUCT ENQUIRIES PLEASE CONTACT 1800 815 270

| PRODUCT DESCRIPTION | PRODUCT SKU |
|---|-------------|
| Small Castor Wheels | 33157780 |
| Rear Wheels | 33157779 |
| Rear Wheel Housing Set (Left And Right) | 33157778 |
| Top Handle And Cord Hook | 33157775 |
| HEPA Filter | 32201890 |
| Exhaust Filter | 32201892 |
| Exhaust Filter Cover | 33157781 |
| Wet Pick-Up Floor Tool | 31155724 |
| Gulper Advance Floor Tool | 31155723 |
| Hose | 31221051 |
| Water Drain Cap | 33157783 |
| Rod Assembly + Accessory Holder | 31300853 |

NOTES

Conditions of warranty



Your Pullman Wet and Dry Vacuum Cleaner has a 1 Year warranty against defects and failures when the Product is used in accordance with the terms and conditions of this warranty (1 Year) and the operations manual for the Product. This Warranty

is subject to the provision of the Product Specific Provisions (if any). The Terms of the Product Specific Provisions prevail over the terms of this Warranty to the extent of any inconsistency.

This Warranty is provided by Electrical Home-Aids Pty Limited ABN 62 007 539 577. This Warranty commences from the original date of purchase and is not transferable. You are required to retain your original proof of purchase for any claims under this Warranty. This Warranty is valid only in the country where the cleaner is purchased.

The Product must be operated in accordance with any instructions provided and used only for reasonable commercial cleaning activities. Reasonable use includes the removal of dry dirt and dust from carpets, flooring and fabrics. The Product is designed to be used as a general commercial cleaner and should not be used for the collection of vitreous building material including particle board, construction products and similar products such as wood/fibres, cement, fillers, fibre glass etc or excessive or frequent sand. Unless otherwise expressly stated in the Product Specific Provision, the pick-up of these materials using the Product will void this Warranty.

Accessories and consumables including dust bags and filters, unless defective in manufacture, are not subject to this warranty. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended. The use of unapproved or non-recommended consumables will void this Warranty.

Refer to the instruction manual for further regarding the use and care of the Product. Misuse or failure to follow the instructions will void this Warranty.

In the event of service or advice being needed, or if you would like to make a claim under this Warranty, please immediately stop using the Product and contact Electrical Home-Aids Pty. Limited, Brandon

Office Park, Building 3, First Floor, 530-540 Springvale Road, Glen Waverley Victoria 3150, or on 1800 815 270 (AUS) or 0800 282 288 (NZ), Monday-Friday 9am-5pm AEST.

The decision to repair or replace a Product under this Warranty is at the discretion of Electrical Home-Aids Pty. Limited depending on the circumstances and requirements of any applicable law. If Electrical Home-Aids Pty. Limited decide to repair or replace the Product, it will do so at its own cost. Any transportation costs involved in a claim under this Warranty shall be borne by the claimant.

Electrical Home-Aids Pty. Limited will not accept responsibility under this Warranty for any repair work not carried out by an authorised Service Agent, or any defect arising from or in connection with the use of non-genuine parts. If a part is no longer available or manufactured, Electrical Home-Aids Pty. Limited will replace it with a genuine functional replacement part. This Warranty does not apply to the cost of replacing any parts of the Product due to normal wear and tear, alterations, improper installation, physical abuse, misuse, or accidental damage.

If proof of purchase cannot be provided at the time of a warranty claim or service, any work carried out on the Product will be at claimant's cost.

The repair of the Product under this Warranty does not extend the original period of this Warranty. If the Product is replaced under this Warranty, the replacement will be covered by this Warranty for the remainder of the original Warranty period. However, you may still have statutory rights after this time.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product as outlined under the Competition and Consumer Act 2010 (Cth) and other State and Territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



QUALITY CLEANING SOLUTIONS

Electrical Home-Aids Pty. Ltd.

ABN 62 007 539 577

Brandon Office Park, Building 3, First Floor,
530-540 Springvale Road, Glen Waverley, Victoria 3150

Pullman is a registered trademark.

Contact Electrical Home-Aids Pty. Ltd. for your nearest authorised service centre on 1800 815 270 (AU) or 0800 282 288 (NZ).

customerservice@godfreys.com.au