

Operating Instructions


To use massager independently:

1. This item comes with a travel lock feature. To turn product on, press and hold the power button on the base of massager for 3 seconds; solid LED lights will indicate the product is on.
2. On the top of the product, press motor 1 button to turn on vibrations for motor 1. Press the button repeatedly until the desired function is reached.
3. To turn off vibrations for this motor at any time, press and hold the button for 3 seconds. To resume vibrations on the last function, single press the button again.
4. To turn on vibrations for the motor 2, press the motor 2 button. Press the button repeatedly until the desired function is reached.
5. To turn off vibrations for this motor at any time, press and hold the button for 3 seconds. To resume vibrations on the last function, single press the button again.
6. To turn product off, repeat step 1. LEDs will turn off.

To use with a remote:

1. This item comes with a travel lock feature. To turn on and activate product, press and hold the power button on the base of massager for 3 seconds; solid LED lights will indicate the product is activated.
2. Press the O button on the remote to turn on motor 1. Press the button repeatedly until the desired function is reached.
3. To turn off vibrations for this motor at any time, press and hold the O button for 3 seconds. To resume vibrations on the last function, single press the button again.
4. To turn on vibrations for the motor 2, press the X button on the remote. Press the button repeatedly until the desired function is reached.
5. To turn off vibrations for this motor at any time, press and hold the X button for 3 seconds. To resume vibrations on the last function, single press the button again.
6. To turn off and deactivate product, repeat step 1. LEDs will turn off.

The massager must be activated to pair with the remote. Flashing LED lights will indicate the massager is activated. Ensure the massager is deactivated after each use to preserve battery life. Massager will automatically deactivate after 30 minutes of inactivity. Product has a memory chip feature and will resume on the last function used.

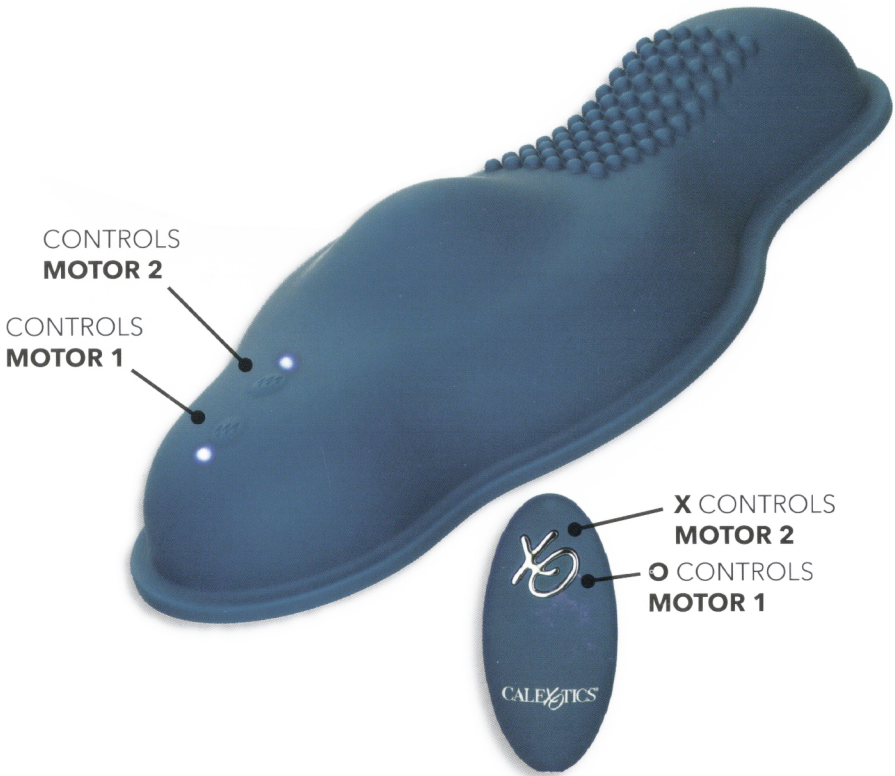

CONTROLS
MOTOR 2

CONTROLS
MOTOR 1

X CONTROLS
MOTOR 2

O CONTROLS
MOTOR 1

CALEXJICS