

WINE COOLER

home™
homelabs.com

18 Bottle Capacity


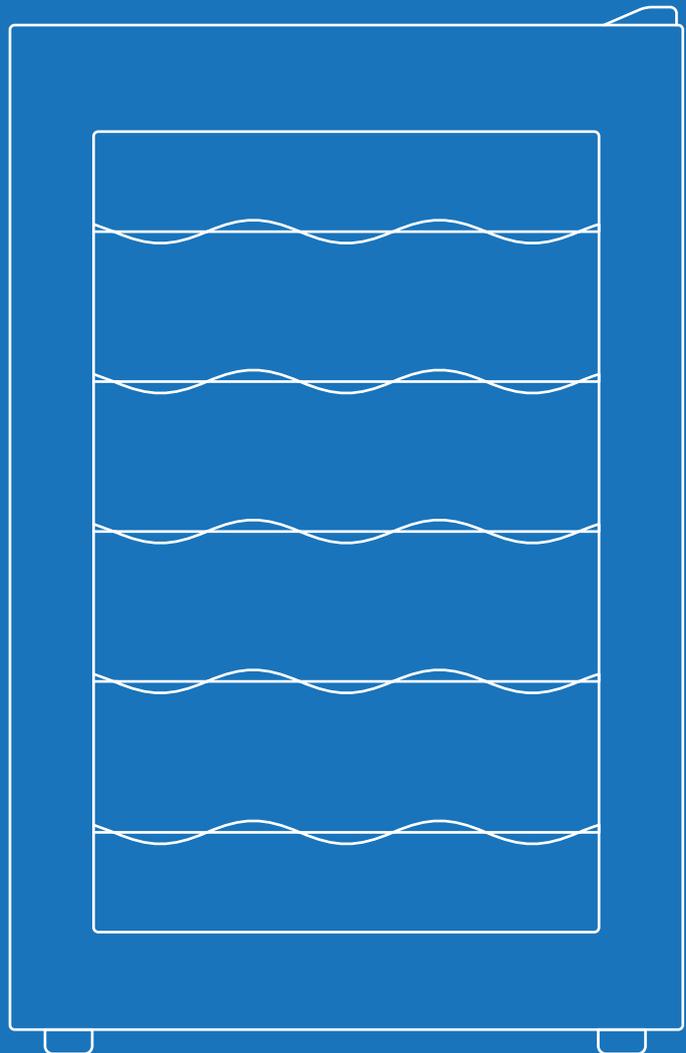


TABLE OF CONTENTS

Important Safety Instructions	6
Parts Description	7
Operation	8
Cleaning	9
Troubleshooting	9
Warranty	10
Manufacturing Info	11
Warning	11
Contact Us	11

Congratulations

on bringing home your new appliance!

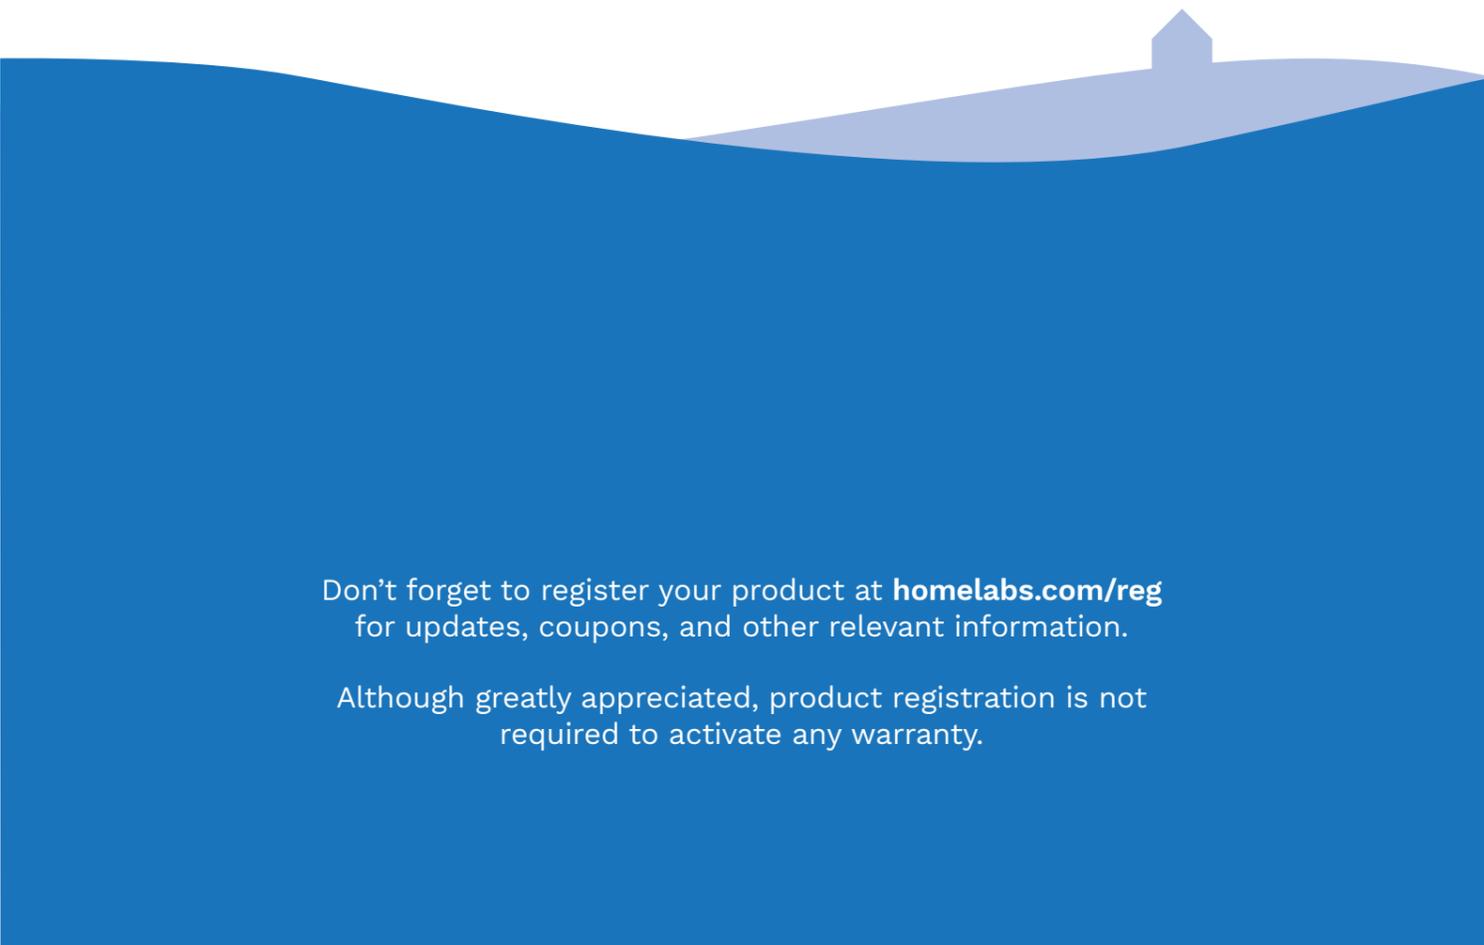

Don't forget to register your product at homelabs.com/reg
for updates, coupons, and other relevant information.

Although greatly appreciated, product registration is not
required to activate any warranty.

IMPORTANT SAFETY INSTRUCTIONS

- Keep ventilation openings, in and around the appliance, clear of any obstructions.
- Do not store explosive substances, such as aerosol cans with flammable propellant, in this appliance.
- Do not use extension cords or ungrounded (two-prong) adapters.
- This appliance is intended to be used in households and similar applications.
- Do not pull the power cord when pulling the power plug of the wine cooler. Please firmly grasp the plug and pull it out from the socket directly.
- Do not store food in your wine cooler, as the temperature may not be cool enough for food storage.

WARNINGS RELATED TO ELECTRICITY

- Do not damage the power cord under any condition.
- Please use a dedicated three-hole power socket.
- Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.
- The wine cooler uses an AC power supply of 100-120V/60 Hz.
- In case of leaking gas, turn off the leaking valve and open your doors and windows. Do not unplug the cooler yourself, as it may cause a fire. Contact customer support immediately.
- For your safety, don't place electric devices on top of the cooler, like microwaves or electric kettles.

WARNINGS RELATED TO USE

- Make sure the cooler is placed in a well-ventilated, indoor environment on flat, sturdy ground (rotate left or right to adjust the wheel to level if unstable).
- Be careful not to get fingers or dangling accessories caught in the cooler door.
- This cooler and its packaging are not intended to be played with or used by children. If a child is using the cooler, it must be with adult supervision to avoid injury.
- Keep the cooler out of moist, damp, or humid environments and situations, so as not to damage the electrical insulation.
- Do not use a base, cooler door, etc. as a pedal or support.
- Do not place heavy objects on top of the cooler to prevent accidental damage or injury.


WARNINGS RELATED TO PLACING ITEMS

- Do not place flammable items near the cooler to avoid a fire hazard.
- This product is for household refrigeration appliances, mainly used for the storage of wine. It's not to be used for other purposes, such as storage of blood, drugs, and biological products.
- Do not cover or close ventilation and exhaust holes.

SAVE THESE INSTRUCTIONS


For Household Use Only

PARTS DESCRIPTION

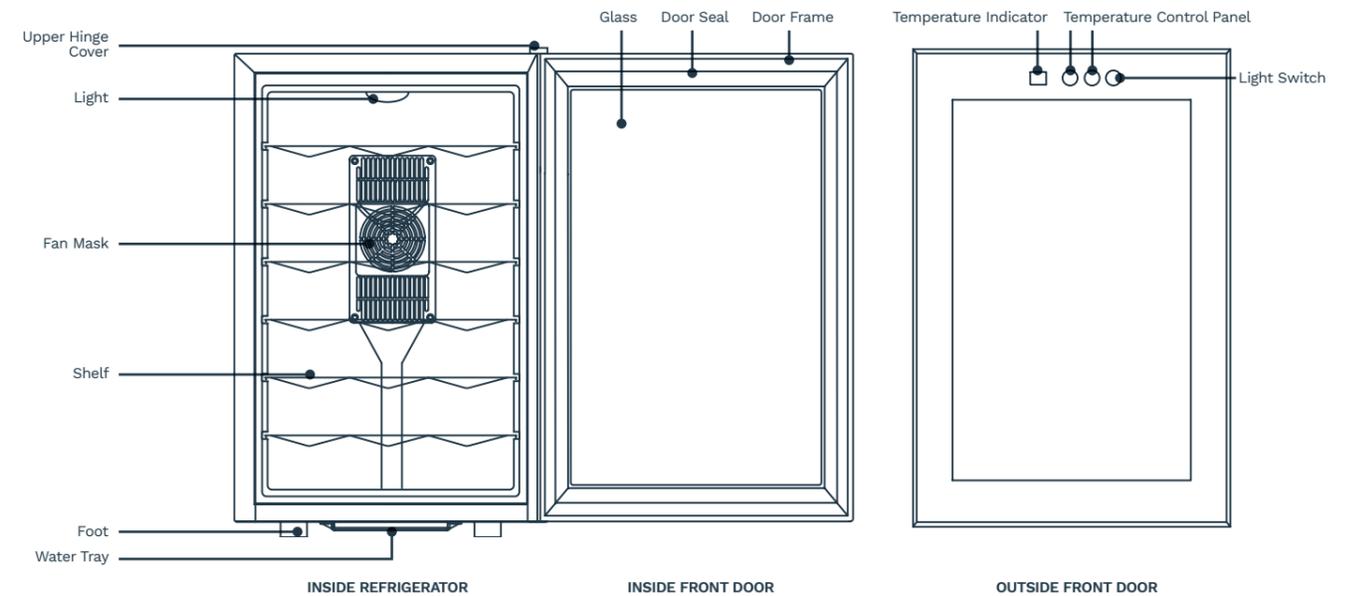

PLACEMENT

- Before using the cooler, remove all packaging materials, including bottom cushions, foam pads, and tape inside the cooler. Tear off the protective film on the door and the cooler body.
- Make sure the cooler is placed in a well-ventilated, indoor environment on flat, sturdy ground (rotate left or right to adjust the wheel to level if unstable).
- Avoid putting the cooler in direct sunlight or too close to a heat source. Keep a safe distance of at least 30 cm between the cooler and a stove or furnace if it can't be avoided. We also advise applying an insulation board in that case.
- Keep a circulation space of at least 5 cm on both sides of the cooler and 10 cm on the back of the cooler.

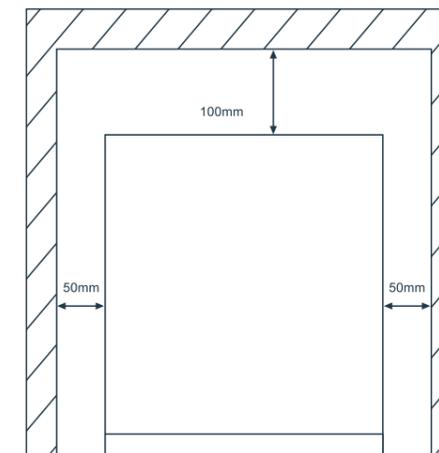

OPERATION

PROPER USE OF WINE COOLER

Energy Conservation

- The cooler should be placed in a room that is dry and ventilated. The cooler cannot be placed under direct sunlight or next to a heat source (such as a radiator, stove, etc.), and a suitable insulation board must be applied if necessary.
- Try to shorten the opening time of cooler's door.

Operation Notes

- Let the wine cooler operate for 1 hour before placing wine bottles in.
- Once temperature is set, allow 1-2 hours to reach desired temperature.
- The minimum temperature for this unit is 54°F, which means it is not designed to achieve proper serving temperatures for Champagne or other sparkling wines.
- This unit is not recommended for use in spaces that get warmer than 80°.

INTRODUCTION TO THE WINE COOLER'S FUNCTIONS

-Lighting

Press the light switch to turn the light on or off.

-Temperature Control

The temperature range for the wine cooler is 54°F - 66°F.


Press the increase temperature button to increase the temperature one degree at a time.

Press the decrease temperature button to decrease the temperature one degree at a time.

The selected set temperature will flash a few times, then the control panel will display the current temperature inside the wine cooler.

When the set temperature is reached, the automatic temperature control system will start to work.

To control the Wine Cooler temperature, adjust the temperature control buttons as shown below.

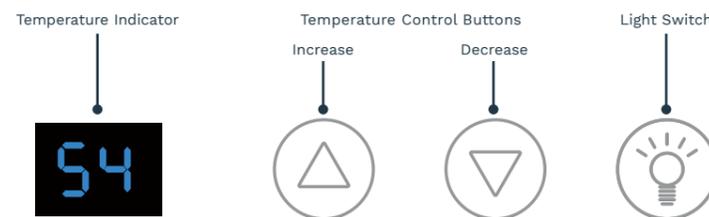

Control Panel

CLEANING

DISCONNECTING THE WINE COOLER

Unplug the power plug from the socket to disconnect the cooler.

CLEANING YOUR WINE COOLER

Follow the cleaning procedure below:

1. Wash the magnetic door seals with warm, soapy water and dry.
2. Wipe exterior with a damp, soapy cloth to rinse and dry with a towel. For stubborn stains, use silicon wax.
3. Wash shelves and other removable parts in warm soapy water to rinse and then dry. Wash interior with baking soda (3 tablespoons to a liter of water) or warm soapy water to rinse and then dry.
4. Reconnect to power when the cooler is clean and dry.

NOTE: Do not use hard brushes, wire brushes, abrasives, organic solvents, boiling water, acid, or alkaline items as this may damage the cooler surface and interior.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	POSSIBLE CAUSES
The Wine Cooler is not reaching the desired temperature.	The cooler is too close to a heat source. There isn't sufficient ventilation at the back or sides. The door is opened too frequently or for too long.	Reduce the frequency of opening the door. Keep the cooler away from sunlight or other heat sources. Place the wine cooler in a more open space for ventilation.
The Wine Cooler does not work.	There is a power failure. A house fuse has blown.	Make sure the cooler is plugged in and the power socket is turned on. Replace the broken fuse in your meter box.
Frost has formed inside the cooler.	There may be too much humidity. The ambient temperature might be too low.	Unplug to defrost. Plug in again after defrosting is completed. Set at a slightly higher temperature.

WARRANTY

hOme™ offers a limited two-year warranty (“warranty period”) on all of our products purchased new and unused from hOme Technologies, LLC or an authorized reseller, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts or workmanship during the warranty period. The warranty does not apply where damage is caused by other factors, including but without limitation: (a) normal wear and tear; (b) abuse, mishandling, accident, or failure to follow operating instructions; (c) exposure to liquid or infiltration of foreign particles; (d) servicing or modifications of the product other than by hOme™; (e) commercial or non-household use.

The hOme™ warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications.

A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place. We recommend that you register your product on our website, homelabs.com/reg. Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase.

The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by hOme™, are used.

You may also arrange for service after the warranty expires at an additional cost.

These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you have an issue with a hOme™ product, please contact us at 1-800-898-3002, and we will do our best to resolve it for you.

This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state, country to country or province to province. The customer may assert any such rights at their sole discretion.

MANUFACTURING INFO

This manual is to be used with all items with the model number

HME030222N

SKU# : HME030222N
PART#: HME030222MNL

RATING: 100-120 V, 60 Hz, 70 WATTS, AC ONLY

WARNING

Keep all plastic bags away from children.

Prop. 65 Warning for California Residents
WARNING: Cancer and reproductive harm.
www.P65Warnings.ca.gov

Manufacturer, distributor, importer, and seller are not liable for ANY damage caused by improper use, storage, care or failure to follow warnings associated with this product.

CONTACT US

 CHAT WITH US

homelabs.com/chat

 CALL US

1-(800)-898-3002

 EMAIL US

help@homelabs.com



For Household
Use Only

1-800-898-3002
help@homelabs.com
homelabs.com/help

© 2016 hOme Technologies, LLC
37 East 18 Street, 7th Floor
New York, NY 10003