 


home®
homelabs.com

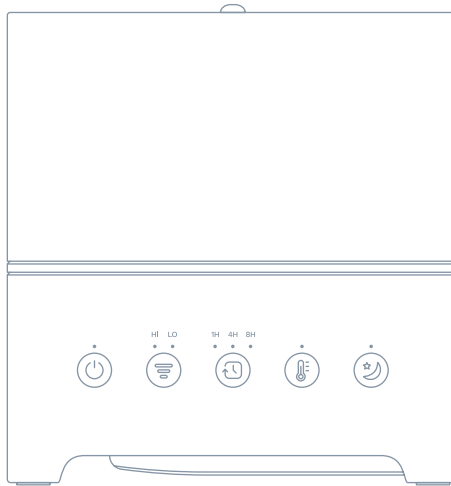

ULTRASONIC HUMIDIFIER
Cool & Warm Mist

Before using your Ultrasonic Humidifier, please read this manual.
This manual is to be used with hOme®'s Ultrasonic Humidifier, SKU# HME020005N

USER MANUAL TABLE OF CONTENTS

Important Safety Instructions	4
Parts Description	5
How to use	6-8
Maintenance & Cleaning	9
Suggestions	9
Troubleshooting	10
Warranty	11

Congratulations

on bringing home your new appliance!

Don't forget to register your product at homelabs.com/reg for updates, coupons, and other relevant information.


Although greatly appreciated, product registration is not required to activate any warranty.

SAVE THESE INSTRUCTIONS / FOR HOUSEHOLD USE ONLY


When using your Ultrasonic Humidifier (“humidifier”), basic safety precautions should always be followed to reduce the risk of fire, electric hazard and injury to persons, including the following:

1. Read all instructions carefully and keep this manual for future reference.
2. Please fix the cord properly to prevent falls, trips or breakage of the humidifier.
3. Do not let the humidifier touch any hot surface.
4. To avoid electric shock, do not place the cord, plug or humidifier in water or any other liquid.
5. Unplug the humidifier before you transport it to fill water, clean, perform maintenance, and/or when the humidifier is not in use.
6. Do not operate the humidifier with a damaged cord or plug after the humidifier malfunctioned or has been damaged in any manner. Please contact hOme® customer service for product repair or replacement.
7. Please make sure there is water in the tank before turning on the humidifier.
8. Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Do not place the humidifier on an unsteady or cloth-covered surface.
9. Please first check the power cord & the plug for any damage, and check the body for any cracks or damages. If any damage is found, please call hOme® customer service hotline at 1.800.898.3002 for assistance.
10. Do not touch the water or parts in the gutter while the humidifier is in use. Injury could occur.
11. Do not touch the transducer (circular disc) with sharp or hard objects.
12. Do not pour water directly into the gutter.
13. Do not spray any harsh chemicals or spray cleaner chemicals to clean the humidifier. These chemicals may cause damage to the humidifier. Please use filtered water for cleaning the humidifier instead of any cleansers.
14. The humidifier is for household, indoor use only. Do not use outdoors or for any commercial or industrial purpose.
15. The humidifier is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the humidifier by a person responsible for their safety.
16. Children should be supervised to ensure that they do not play with the humidifier and/or packaging materials.
17. Do not disassemble the humidifier.
18. When not in use or if not in use for long periods of time, please unplug the humidifier.
19. Do not pour out the remaining water in the tank while the humidifier is plugged in. Damage to the humidifier may occur.
20. You can use the humidifier for 5-6 hours without stopping when the water is full at the beginning. During this time, no additional water needs to be added to the humidifier.
21. Do not pour water over 100°F (40°C) into the tank, otherwise the color, and/or shape might be changed.
22. To make sure the humidifier works well, and avoids accidents, please follow the below suggestions for placement of the humidifier in your home:
 - a) It should be placed on a hard surface, and both the surface and humidifier should be left uncovered.
 - b) It should be far from any heat source or direct sunlight.
 - c) It should be far from furniture, walls, curtains and other home appliances, otherwise they may be affected by the humidifier output.
 - d) It should be in a normal temperature area of 50°F (5°C) - 80°F (40°C). The humidifier could be damaged in a cold environment.
23. Drain water from the gutter and tank when the room temperature is under 32°F (0°C), water may freeze and the humidifier may be destroyed by ice.
24. Do not let water flow into the main body from the airflow outlet. Wipe with a dry towel when there is water on the outside of the main body of the humidifier.
25. Do not put metal, chemical or cleaning mixtures into the gutter of the humidifier.
26. Do not move the humidifier when the gutter is full of water, else the water could flow into the main body of the humidifier, which could cause damage.

PARTS DESCRIPTION

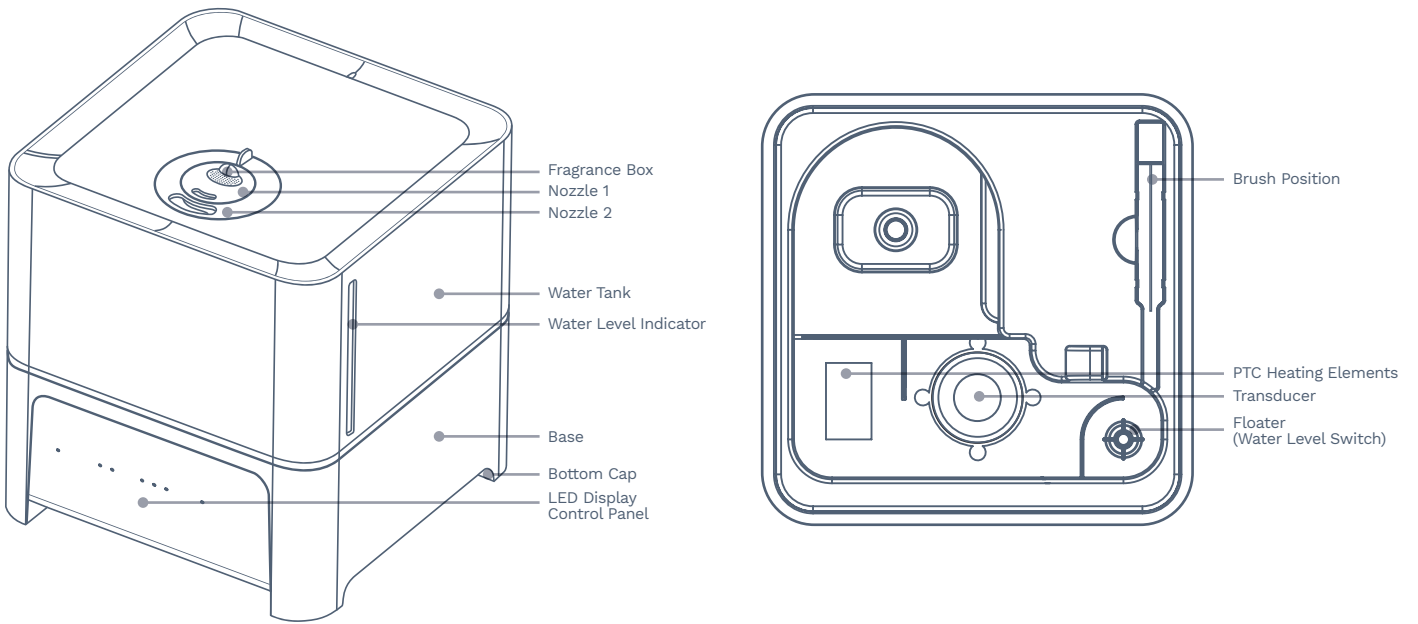

CONTROL PANEL TOUCH ICONS

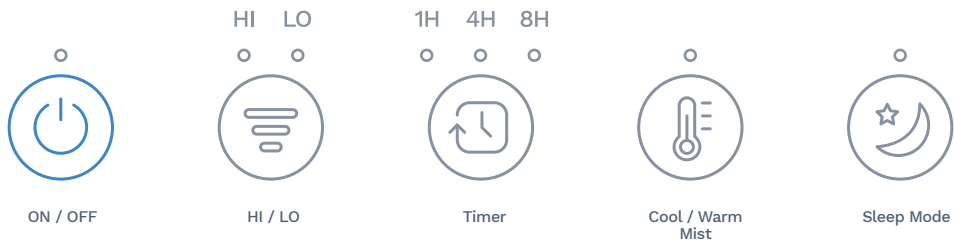

FEATURES OF THE ULTRASONIC HUMIDIFIER

1. Touch Control.
2. Cool and Warm Mist Optional.
3. HI and LO Modes for Mist Control(LO 0.21L/h±30%)(HI 0.35L/h±20%)
4. Timer (1h ~ 8h).
5. Low Water Level Protection.
6. Sleep Mode.
7. Automatic Water Supply Function.

THE INSTALLATION OF WATER TANK

The top removable water tank should install and uninstall easily from the body of the humidifier. Please note that the water tank is not attached to the bottom body of the humidifier.

WARNING: When moving the humidifier, please make sure to use both hands to move the humidifier lift up from the bottom and place hands on both sides. Do not carry the humidifier by the top removable tank area. Carrying from the top may cause damage to the humidifier as the body and top water tank are not attached.

ADDING WATER TO THE TANK

Add water from the bottom:

1. Put the humidifier on a flat surface. Take the tank off of the top of the humidifier.

NOTE: Do not add water to the base directly.



- 2. Turn the tank upside down. Unscrew the cover anti-clockwise. Fill the tank with clean tap water or distilled water within 40°F (5°C) to 80°F (40°C) until water reaches the stated line.
- 3. Screw the cover on clockwise. Dry any water on the outer part of the humidifier tank.
- 4. Put the tank back on to the humidifier. There will be “gurgling” sounds and air bubbles will appear once the tank is placed correctly into the humidifier. When there are no more air bubbles, there is sufficient water in the gutter and the humidifier is now ready.

WARNING: Do not use any other water or liquid except tap water (drinking water). Any other liquid may contain impurities, which may be harmful. We recommend using purified water.

SETTING UP THE FRAGRANCE BOX

To scent the air from your humidifier, follow the instructions below to set up the Fragrance Box.

- 1. Pull up on the Diffuser to detach it from the Fragrance Box (illustration #1).
- 2. Place the Diffuser on the vent and remove the Fragrance Sponge (illustration #2).
- 3. Add a couple drops of your favorite essential oil to the Fragrance Sponge (illustration #2).
- 4. Place the Fragrance Sponge on top of the Diffuser (illustration #3).
- 5. When finished, place the Fragrance Sponge and Diffuser back into their respective spaces on the Fragrance Box.

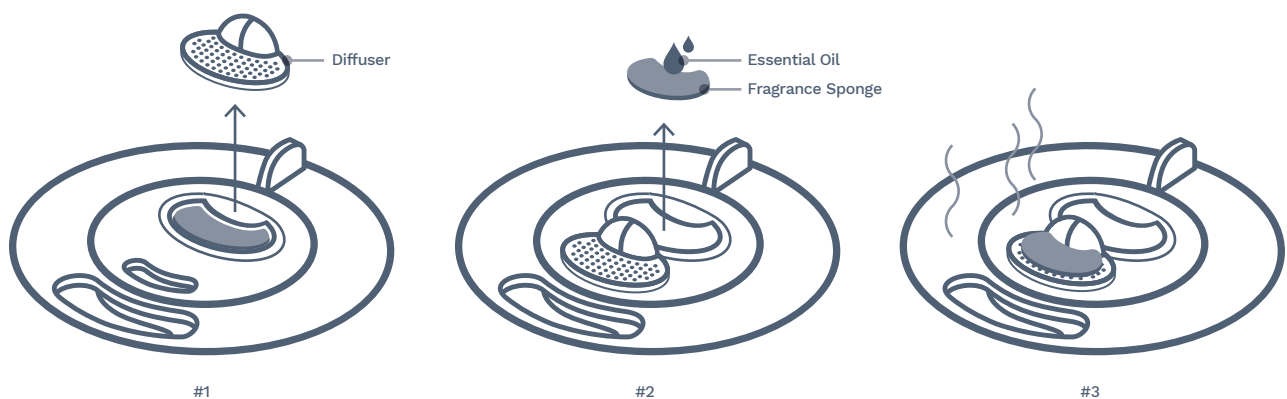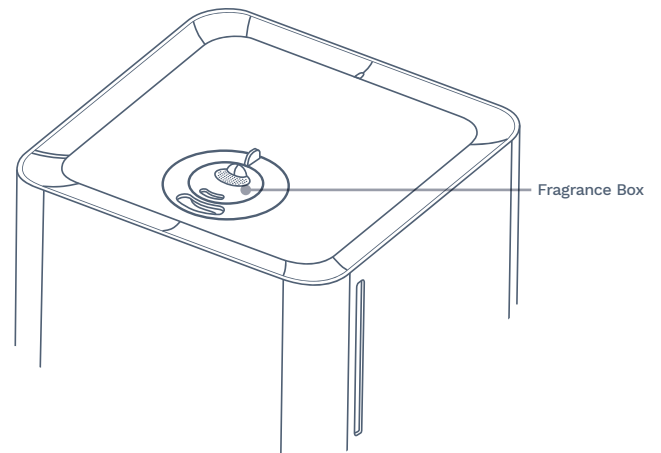

(1) ON / OFF:

1. To turn ON the humidifier: Press the ON/OFF icon to start the humidifier. The on/off LED and HI LED will turn on for 1 (one) second and start to detect the water level. After 1 (one) second, if there is water, the humidifier will start to work. (If there is no water, refer to POINT 7.)

NOTE: The default mode for this humidifier is:

- a) The humidity setting will be on continuously;
- b) Timer is OFF;
- c) DC fan is ON;
- d) Cool mist is ON;
- e) The humidifying level is HI;

2. To turn OFF the humidifier: Press the ON/OFF icon again. The buzzer will sound and then go into standby mode:

- a) DC fan is OFF;
- b) PTC is OFF;

(2) HI / LO Mode Setting:

- a) The humidifier will start in HI mode automatically
- b) Press the HI/LO icon on the control panel once, the humidifier will change to LO mode and the humidity will decrease.
- c) Press the HI/LO icon on the control panel again to change to HI mode and the humidity will increase.
- d) Below details the differences in humidity when in LO and HI mode.

MODE	PWM MODULATION DEGREE	HUMIDITY LEVEL
HI	100%	0.35L/hour (11.8oz)
LO	60%	0.21L/hour (6.7oz)

(3) Cool and warm mist:

- a) The humidifier will be producing cool mist automatically when it is started.
- b) Press the cool/warm mist icon on the control panel, the humidifier will shift to warm mist. PTC will be ON, the cool/warm mist LED will turn on.
- c) Press the cool/warm mist icon again, the humidifier will shift to cool mist. PTC will be OFF, the cool/warm mist LED will turn off.
- d) Please note that when using the warm mist function w/ a large amount of water you may need to press the warm/cool mist icon several times to properly heat all water.

(4) Timer (1 - 8h):

- a) Press the timer icon on the control panel, the time will change from 1h, 4h, 8h. When no time LED is lite, then timer is not set. If the timer is set, the humidifier will count down. When the count down finishes, the humidifier will automatically turn off. When the timer is set and counting down, you can add additional time by pressing the timer icon. Press once to add 4h. (Max time is 8h.)
- b) The LED display will show the time remaining.

(5) Sleep Mode:

1. Press the sleep mode icon once to enter sleep mode. In sleep mode, the buzzer will sound and all LED lights will turn off. The humidifier will continue working in Low mode. The other functions remain the same as selected prior to going into sleep mode. There will be no sound when water level is running low in sleep mode. Except for the ON/OFF icon and the sleep mode icon, all other icons can not be used.
2. Press the sleep mode icon once to exit sleep mode. The buzzer will be on, all other functions will remain the same. The humidifier will go to the usual display, showing all functions settings selected prior to going into sleep mode.

(6) Low Water Level Protection:

1. One (1) second after the humidifier is plugged in, if the humidifier detects a low water level, it will enter protection mode.
2. When the humidifier is on and running normally, the low water level detection will last for 6 (six) seconds, then enter protection mode.
3. In low water level protection mode:
 - a) The fan, transducer (circular disc) and PTC will turn off, and the automatic water supply function will turn on.
 - b) The buzzer will sound three times “BI-BI-BI”. The first buzzer sounds when low water level is first detected. The second buzzer will sound when the low water level lasts for 30 (thirty) seconds, and the third one will sound when the lack of water lasts for 1 (one) minute. After 1 (one) minute, if the humidifier still detects low water, it will go into stand-by mode.
 - c) After turning on the automatic water supply function, the humidifier will check the water level every 6 (six) seconds. Within 10 (ten) times of checking the water level, if water is found, the humidifier will start to work as normal. If the water is not refilled, the humidifier will go into standby mode.

(7) Automatic Water Supply Function:

When the automatic water supply function is turned ON, the AC solenoid valve will automatically add water to the tank when the water level becomes lower than the minimum limit. Once the water level reaches the maximum level again, the AC electromagnetic valve will automatically stop adding water.

REMINDER:

- This ultrasonic humidifier uses a metal diaphragm to vibrate at an ultrasonic frequency, creating water droplets that silently exit the humidifier in the form of a cool mist.
- The “gurgling” sound is normal as the water flows into the gutter.
- The intensity of the mist is affected by the relative humidity and temperature of the environment. It is more difficult to generate mist when the room environment is cold and wet.
- The water used to fill the tank should be clean tap or distilled filtered water between 40°F (5°C) and 80°F (40°C).

MAINTENANCE & WASH

- Please unplug the humidifier before washing or cleaning.
- Wash the water tank with mild, soaped water once every two (2) weeks for optimal performance and to avoid damage to the humidifier.

MAINTENANCE FOR THE SURFACE OF HUMIDIFIER

Wipe the body surface of the humidifier with a water-dampened cloth. Do not pour water directly onto the humidifier.

MAINTENANCE FOR THE WATER CHANNEL

1. Remove the water tank from the humidifier.
2. If there is dirt in the gutter, remove the dirt with the brush provided, and then rinse the gutter with water.

NOTE: For optimal performance, clean the water channel every time you fill the humidifier water tank.

MAINTENANCE FOR WATER TANK

1. Remove the tank from the humidifier, drain the remaining water out of the water tank.
2. Add one third of the recommended water to the tank, screw the tank cover on, shake the tank with the water, and pour out the water. Alternating you may dip a brush or cloth into the tank to clean, wash and rinse again.
3. Add potable water to the water tank and put the water tank back onto the humidifier.

WARNING:

- When washing the humidifier, avoid splashing water into the inner or spare parts of the humidifier to prevent damage.
- Do not take apart the humidifier.

SUGGESTIONS

- Use humidifier with distilled water only.
- Clean the transducer (circular disk), tank, and main body of the humidifier weekly.
- Replace water in the humidifier frequently.
- Do not remove the water tank once it has been set in it's position, unless to refill the water.
- Whenever you need to pour water out of the water trough, unscrew it from the bottom of the main body (the outlet) of the humidifier, then let the water flow out.
- Keep the tank and gutter dry if the humidifier is unused for a long period of time.
- Dry all parts of humidifier before storage.
- Do not to touch the transducer (circular disk) with hard objects. Clean the transducer (circular disk) with a wet a cloth; filtered water works best.

TROUBLE SHOOTING

Before calling hOme® Customer Service, review this list. It may save you time and expense. This list includes the most common occurrences that are not the result of defective workmanship or materials in this humidifier.

PROBLEM	CAUSE	SOLUTION
Power light is off; no mist	<p>The transducer (circular disk) is dirty and/or overheated.</p> <p>The humidifier is not plugged in and the power is off.</p> <p>The humidifier is placed directly on a carpet or rug flooring.</p>	<p>Clean the transducer (circular disk)</p> <p>Put the plug in socket correctly and turn the humidifier on.</p> <p>Elevate the humidifier onto a hard surface.</p>
Power light is on and air is generating, but no mist.	The lid of the water level floater is loose.	Fill the tank with water; tighten the lid.
Mist has an odor	The humidifier or water is not clean.	Open the water tank and place it aside for 12 hours. Wash the tank and/or change the water.
Low Mist	The humidifier may have scale buildup, water is dirty or has not been changed in a long time.	Wash the humidifier thoroughly and fill with clean water.
No Mist	There might be too much water in the water trough.	Pour out all the water in the water trough and put the tank back properly with the correct amount of water.
Water is leaking from the humidifier	Floater is loose and/or the water lid is dirty. Water lid is loose	Tighten the lid of the floater and wash the lid of the knob.
Warm mist coming out of the humidifier is not warm enough	The humidifier has been filled with a large amount of water which is hard for the water heater to fully heat in one cycle.	Press the warm/cool icon multiple times until the mist is at your warm preferred temperature.



DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

WARRANTY

hOme® offers a limited two-year warranty (“warranty period”) on all of our products purchased new and unused from hOme Technologies, LLC or an authorized reseller, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts or workmanship during the warranty period. The warranty does not apply where damage is caused by other factors, including without limitation: (a) normal wear and tear; (b) abuse, mishandling, accident, or failure to follow operating instructions; (c) exposure to liquid or infiltration of foreign particles; (d) servicing or modifications of the product other than by hOme®; (e) commercial or non-household use.

The hOme® warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. H0me®’s exclusive obligation under this warranty is limited to such repair or replacement.

A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place. We recommend that you register your product on our website, homelabs.com/reg. Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase.

The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by hOme®, are used.

You may also arrange for service after the warranty expires at an additional cost.

These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you have an issue with a hOme® product, please contact us at 1-800-898-3002, and we will do our best to resolve it for you.

This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state, country to country or province to province. The customer may assert any such rights at their sole discretion.

WARNING

This manual is to be used with all items with the model number

HME020005N

WARNING: Keep all plastic bags away from children.

State of California Proposition 65 Warnings:

WARNING: THIS PRODUCT COULD CONTAINS ONE OR MORE CHEMICALS WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.

Manufacturer, distributor, importer and seller are not liable for ANY damage caused by improper use, storage, care or failure to follow warnings associated with this product.

CONTACT US

1-800-898-3002
help@homelabs.com
homelabs.com/help

home®
homelabs.com



For Household Use Only

SKU# : HME020005N
PART#: HME020005MNL

RATING: 120 V, 60 Hz, 95 WATTS, AC ONLY

© 2016 hOme Technologies, LLC
37 East 18 Street, 7th Floor. | New York, NY 10003
All rights reserved, hOme®.
Printed in China.