


home®

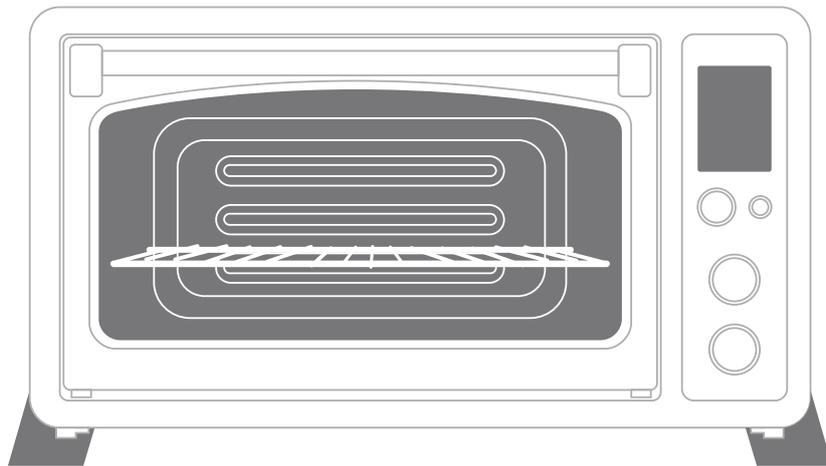

**Digital Convection Toaster Oven Appliance**  
**6 Slice Capacity**

Before using your Digital Convection Toaster Oven, please read this manual.  
This manual is to be used with hOme®'s Toaster Oven SKU:HME010004N (Model:AC25CEW-R).

USER MANUAL  
TABLE OF CONTENTS

Important Safety Instructions	5
Before First Use	6
How to Use	7
Operation	7-9
Rotisserie Function	10
Using the Rotisserie Forks	10
Care and Cleaning	10
Warranty	11



**SAVE THESE INSTRUCTIONS / FOR HOUSEHOLD USE ONLY**

WARNING - To reduce the risk of burns, electric shock, fire, or injury to persons.


When using electrical appliances basic safety precautions should be followed, including the following:

1. Read all instructions before using the Digital Convection Toaster Oven (“appliance”).
2. To protect against any electrical hazards, DO NOT place the unit or the cord in water or any other liquids.
3. Do not touch any hot surfaces. Use oven mitts for removing or touching any hot parts. Always place appliance on heat protected surface.
4. Leave about 4-6 inches of open space all around the exterior of this appliance. Place the appliance on a dry, horizontal surface.
5. Unplug the appliance from outlet when not in use and before cleaning. Always allow to cool before attaching or removing any parts.
6. The use of accessory attachments is not recommended by hOme® and may cause injuries.
7. Plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
8. Do not let cord hang over edge of table or counter, or touch hot surface.
9. Do not place the appliance inside a heated oven or near a hot gas or electric burner.
10. Do not use outdoors.
11. If the electric circuit is overloaded with other appliances, this appliance may not operate properly. The appliance should be operated on a separate electrical circuit from other operating appliances.
12. The temperature of accessible surfaces may be high when the appliance is operating.
13. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to hOme® customer service for examination, repair, or adjustment.
14. Store only the accessories provided with this appliance inside the oven when not in use. Do not store any other materials.
15. A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not put any items on top of the appliance when in operation.
16. Do not place any cardboard, paper or plastic inside the appliance.
17. All containers placed inside the oven must not be airtight. They should have enough room to allow for expansion of fluids.
18. Clean this appliance regularly as buildup of grease may cause a fire. Make sure that this appliance is not placed near curtains, any drapery, or other flammable material.
19. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
20. In order to prevent accidental burns, always use the handle and knobs to operate this appliance.
21. The temperature of the door or outer surface may be high when the appliance operating.
22. Oversize foods or metal utensils must not be inserted in this appliance as they may create a fire or risk of electric shock.
23. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
24. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Use extreme caution when removing tray or disposing of hot grease.
25. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. Or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
26. Children should be supervised to ensure that they do not play with the appliance.
27. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
28. The rear surface of appliance shall be placed against a wall.
  - a) A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
  - b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
  - c) If a longer detachable power-supply cord or extension cord is used:
    - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
    - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
    - 3) If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.
29. Do not use appliance for other than intended use.
30. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
31. Extreme caution should be exercised when using containers constructed of other than metal or glass.
32. Not responsible for any damage or harm caused by improper use or care.

## BEFORE FIRST USE

1. Remove all accessories and shipping materials packed inside the appliance. Keep all packaging material out of the reach of children. Danger of asphyxiation or injury.
2. Wash the Rack and Pan in warm soapy water. Wipe the inside of the appliance with a damp cloth or sponge. Blot dry with paper towels to be sure the unit is dry before using.
3. Place appliance on a flat counter or other stable surface DO NOT OPERATE ON THE SAME CIRCUIT WITH ANOTHER APPLIANCE.
4. Make sure the Crumb Tray is properly installed before using.
5. For the first time only, Set the Temperature Knob to MAX, the function setting on toast and the timer to 15 minutes. This will burn off any oils still on the appliance.

NOTE: The oven may smoke during this process. This is normal for a new appliance and will not last more than 10-15 minutes.

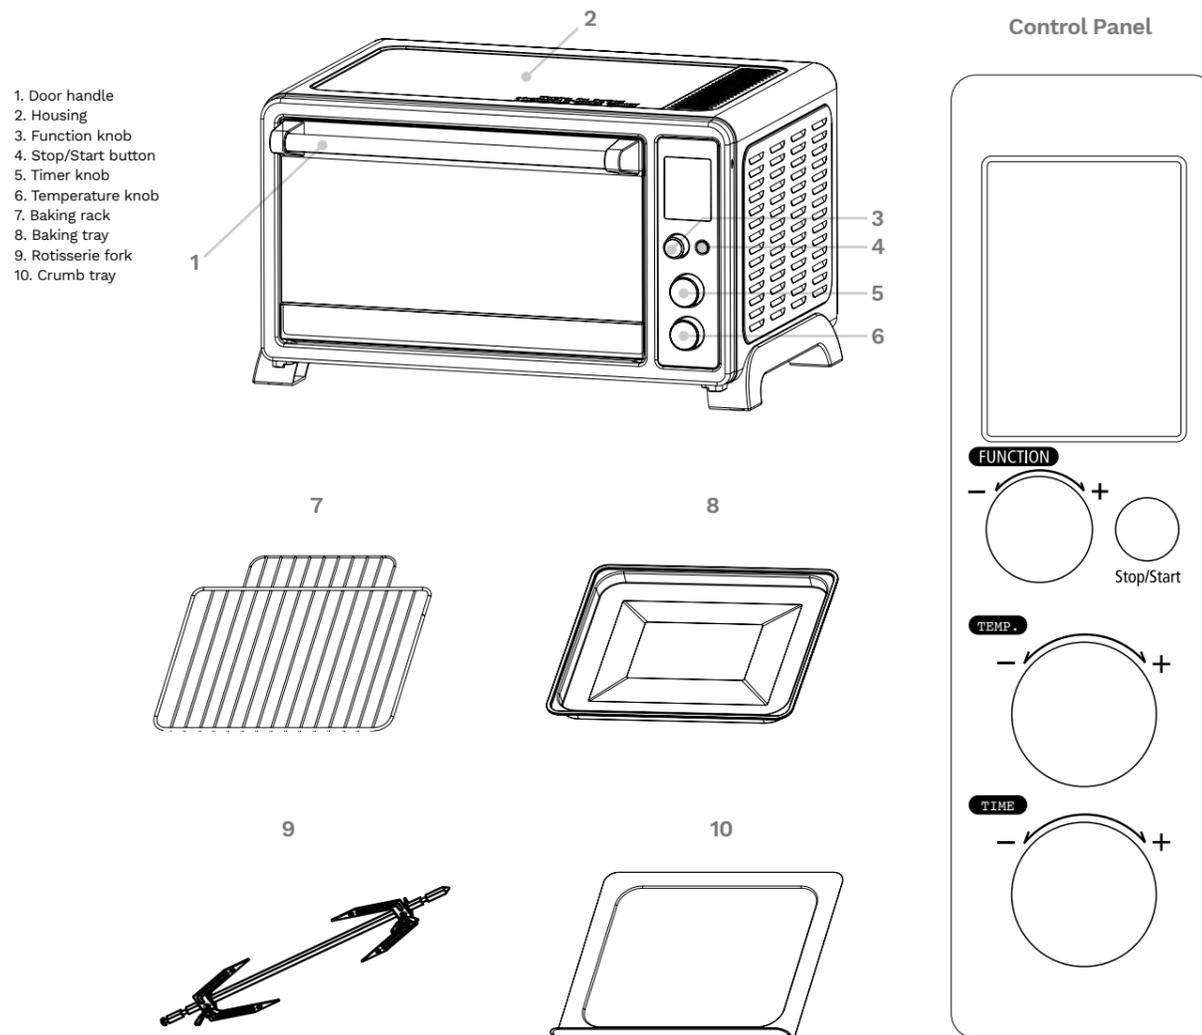

## HOW TO USE

**CAUTION: THE OVEN SURFACES ARE HOT DURING AND AFTER USE**

### GENERAL INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

WARNING - To reduce the risk of burns, electric shock, fire, or injury to persons:

1. Read all instructions before using.
2. To protect against any electrical hazards, DO NOT place appliance or cord in water or any other liquids.
3. Do not touch any hot surfaces. Use oven mitts for removing or touching any hot parts. Always place appliance on heat protected surface.
4. Leave about 4-6 inches of open space all around the exterior of this appliance. Place the appliance on a dry, horizontal surface.
5. Unplug the appliance from outlet when not in use and before cleaning. Always allow to cool before attaching or removing any parts.

## OPERATION

When the appliance is electrified, the buzzer will ring once. The default function is **TOAST**. In the process of cooking, pressing "**Stop/Start**" can stop cooking.

### 1) TOAST FUNCTION

Use the Toast function for foods such as corn, bread, cookies and heating food.

1. Place the baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen display "**TOAST**".
3. Rotate the **TEMP.** knob to set the power level from 1-6.
4. Rotate the **TIME** knob to set the quantity of bread from 1-6. The default quantity is 4 slices.
5. Press "**Stop/Start**" button to start cooking. The default temperature is 450°F and it cannot be changed.
6. The buzzer will sound 3 times to remind you when cooking is finished.
7. Always remove food with oven mitts. Food and appliance are very hot.

### 2) BAKE FUNCTION

Use the Bake function for foods such as less tender cuts of meat, soups and stews.

1. Place the baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen display "**BAKE**".
3. Rotate the **TIME** knob to set the length of cooking time. The default time is 30 minutes.
4. Rotate the **TEMP.** knob to set temperature. The default temperature is 450°F.
5. Press "**Stop/Start**" button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the appliance will turn back to **TOAST** function.
7. Always remove food with oven mitts. Food and appliance are very hot.

### 3) BROIL FUNCTION

**NOTE: Do not preheat when using this function.**

The Broil Function is ideal for fish, beef, steak, vegetables, etc.

1. Place the baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen display "**BROIL**".
3. Rotate the **TIME** knob to set the length of cooking time. The default time is 30 minutes.
4. Rotate the **TEMP.** knob to set temperature. The default temperature is 350°F.
5. Press "**Stop/Start**" button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the appliance will turn back to **TOAST** function.
7. Always remove food with oven mitts. Food and appliance are very hot.

## OPERATION (CONT.)

---

### 4 ) PIZZA FUNCTION

**NOTE: Do not preheat when using this function.**

Use the Pizza function is ideal for pizza.

1. Place the baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen display **“PIZZA”**.
3. Rotate the **TIME** knob to set the size of pizza (6 inches, 9 inches, 12 inches). The default size is 9 inches.
4. Rotate the **TEMP.** knob to set temperature. The default temperature is 450°F.
5. Press **“Stop/Start”** button to start cooking. The default cooking time is 13 minutes and it cannot be changed.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the appliance will turn back to **TOAST** function.
7. Always remove food with oven mitts. Food and appliance are very hot.

### 5 ) COOKIES FUNCTION

**NOTE: Do not preheat when using this function.**

The Cookies Function is ideal for cookies.

1. Place the baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen display **“COOKIES”**.
3. Rotate the **TIME** knob to set the length of cooking time. The default time is 30 minutes.
4. Rotate the **TEMP.** knob to set temperature. The default temperature is 350°F.
5. Press **“Stop/Start”** button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the appliance will turn back to **TOAST** function.
7. Always remove food with oven mitts. Food and appliance are very hot.

### 6 ) DEFROST FUNCTION

Use the Defrost Function for defrosting food.

1. Place the baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen display **“DEFROST”**.
3. Rotate the **TIME** knob to set the length of cooking time. The default time is 30 minutes.
4. Rotate the **TEMP.** knob to set temperature. The default temperature is 180°F.
5. Press **“Stop/Start”** button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the appliance will turn back to **TOAST** function.
7. Always remove food with oven mitts. Food and appliance are very hot.

### 7 ) REHEAT FUNCTION

Use the Defrost Function for defrosting food.

1. Place the baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen display **“REHEAT”**.
3. Rotate the **TIME** knob to set the length of cooking time. The default time is 1 hour and 30 minutes.
4. Rotate the **TEMP.** knob to set temperature. The default temperature is 350°F.
5. Press **“Stop/Start”** button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the appliance will turn back to **TOAST** function.
7. Always remove food with oven mitts. Food and appliance are very hot.

### 8 ) ROTISSERIE FUNCTION

The Rotisserie Function is ideal for roasting chicken

1. Place the baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen display **“ROTISSERIE”**.
3. Rotate the **TIME** knob to set the length of cooking time. The default time is 1 hour.
4. Rotate the **TEMP.** knob to set temperature. The default temperature is 350°F.
5. Press **“Stop/Start”** button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the appliance will turn back to **TOAST** function.
7. Always remove food with oven mitts. Food and appliance are very hot.

## OPERATION (CONT.)

---

### 9 ) KEEP WARM FUNCTION

Use the Keep warm function for keeping food warm.

1. Place the baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen display **“KEEP WARM”**.
3. Rotate the **TIME** knob to set the length of cooking time. The default time is 1 hour and 30 minutes.
4. Rotate the **TEMP.** knob to set temperature from 100°F to 180°F. The default temperature is 180°F.
5. Press **“Stop/Start”** button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the appliance will turn back to **TOAST** function.
7. Always remove food with oven mitts. Food and appliance are very hot.

### 10 ) CONVECTION FUNCTION

Use the Convection function for toasts, steaks, baking pizza and bread.

1. Place the baking rack to the desired height.
2. Rotate the **FUNCTION** Knob until the screen display **“CONVECTION”**.
3. Rotate the **TIME** knob to set the length of cooking time. The default time is 30 minutes.
4. Rotate the **TEMP.** knob to set temperature. The default temperature is 450°F.
5. Press **“Stop/Start”** button to start cooking.
6. The buzzer will sound 3 times to remind you when cooking is finished. And the appliance will turn back to **TOAST** function.
7. Always remove food with oven mitts. Food and appliance are very hot.

## ROTISSERIE FUNCTION

1. Remove the Baking Rack from the appliance and set aside.
2. Place the Baking Pan in the lowest level of the appliance. This will catch all the drippings from the food that is on the Rotisserie Forks as it cooks. **DO NOT** attempt to use the Rotisserie Function without placing the Baking Pan in the correct position of the appliance.
3. Set the Function knob to **“ROTIS”**.
4. Select the length of time you want to Rotisserie the food.
5. Rotate the Temperature knob clockwise to desired temperature.

## ROTISSERIE FUNCTION USING THE ROTISSERIE FORKS

1. Secure the food with weight centered on the forks.
2. Slide the Holding Forks onto each of the forks and press firmly into the food, piercing the food to hold in place on the forks. Insert the Holding Forks at different angles to hold the food more firmly. Tighten the screws, turning clockwise so that the holding forks will stay in place during the Rotisserie cooking session.
3. Insert the pointed end of the Rotisserie forks into the Rotisserie Socket on the inside right side of the appliance.
4. Lift the Rotisserie Forks on the left side just a bit to allow the notch to fit into the Rotisserie Bracket on the left side of the appliance.
5. Set the Temperature knob and the Time knob to begin operating the appliance.
6. Once the cooking time has been complete and you have checked the internal temperature of the food to ensure that it has cooked properly, you can remove the Rotisserie Forks with the Rotisserie Helper Handle.
7. Hold the handle in your right hand and support handle in your left hand.
8. Place the hooks on the Helper Hander underneath the Rotisserie Forks.
9. Lift the left side of the Rotisserie Forks out of the Bracket first and pull slightly toward you.
10. Gently remove the right pointed side of the Rotisserie Forks from the Rotisserie Socket and remove the food on the forks out of the appliance.
11. Place the food on a heat safe plate or dish when you have removed from the appliance. Let it cool slightly before attempting to remove the holding forks and Rotisserie Forks from the food
12. To remove the Holding Forks, turn the screws counterclockwise and pull the Holding.

**WARNING: HOT SURFACE**

## CARE AND CLEANING

1. Before cleaning unplug the appliance and allow it to cool completely.
2. Wash all the attachments with mild, soaped water including the rack and the baking tray.
3. Do not use abrasive cleansers, scrubbing brushes and chemical cleaner as this will cause damage to the non-stick coating of baking tray.
4. Using a wet cloth to wipe the inner of the appliance.
5. Clean the door by using a wet cloth saturated with detergent or soap.
6. Never immerse the appliance in water or other liquid.

## WARRANTY

hOme® offers a limited two-year warranty (“warranty period”) on all of our products purchased new and unused from hOme Technologies, LLC or an authorized reseller, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts or workmanship during the warranty period. The warranty does not apply where damage is caused by other factors, including without limitation: (a) normal wear and tear; (b) abuse, mishandling, accident, or failure to follow operating instructions; (c) exposure to liquid or infiltration of foreign particles; (d) servicing or modifications of the product other than by hOme®; (e) commercial or non-household use.

The hOme® warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. hOme®’s exclusive obligation under this warranty is limited to such repair or replacement.

A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place. We recommend that you register your product on our website, [www.home.family/reg](http://www.home.family/reg). Although greatly appreciated, the product registration is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase.

The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by hOme®, are used.

You may also arrange for service after the warranty expires at an additional cost.

These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you have an issue with a hOme® product, please contact us at 1-800-898-3002, and we will do our best to resolve it for you.

This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state, country to country or province to province. The customer may assert any such rights at their sole discretion.

## WARNING

This manual is to be used with all items with the following SKU and model numbers:

SKU: HME010004N  
Model: AC25CEW-R

WARNING: Keep all plastic bags away from children.

State of California Proposition 65 Warnings:

WARNING: THIS PRODUCT COULD CONTAINS ONE OR MORE CHEMICALS WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.

Manufacturer, distributor, importer and seller are not liable for ANY damage caused by improper use, storage, care or failure to follow warnings associated with this product.

## CONTACT US

home®

Customer Service

Phone: 1-800-898-3002

Email: [help@home.family](mailto:help@home.family)

Website: [www.home.family/help](http://www.home.family/help)



HOUSEHOLD USE ONLY

SKU: HME010004N  
PART: HME010004MNL  
Model: AC25CEW-R

RATING: 120V, 60Hz, 1500 WATTS, AC ONLY

© 2016 hOme Technologies, LLC  
37 East 18 Street, 7th Floor. | New York, NY 10003  
All rights reserved, hOme®.  
Printed in China.