



*Pellet Stoves
Wood Stoves
Multi-Fuel Stoves
Pellet Grills*

P.O. Box 206

Monroe, VA 24574

www.heatredefined.com

Phone: (800) 516-3636

Fax: (434) 929-4810

Hopper Lid Gasket Replacement

***WARNING: BE SURE TO READ YOUR OWNER'S MANUAL BEFORE INSTALLING OR OPERATING YOUR STOVE.
ALWAYS FOLLOW ALL CODES.***

Be sure the stove is unplugged and cooled before performing any maintenance/component replacement.

NOTE: These instructions are also included on the service DVD that came with your unit.

An airtight seal around the gaskets is crucial to proper stove performance and safety. The hopper lid gasket should be replaced when it becomes frayed or no longer forms an airtight seal with the lid.

Start by opening the hopper lid. Take note of how the factory-installed gasket is cut and routed around the top of the hopper. Remove the old gasket and scrape off any adhesive that is left over. Then, starting in one of the rear corners of the hopper, peel the paper off the back side of the new 'tape' gasket and extend it down to the front edge of the hopper (for example, if it was originally routed that way), placing the new gasket where the old gasket was.

Cut and then continue this around each side of the hopper, being sure to butt the ends to make a complete seal. Cut off any ends that may be frayed. Discard any leftover gasket and the paper backing that was removed. You can now shut your hopper lid.



Hopper Lid Gasket



See your owner's manual and service DVD for your specific part number and for more information on checking and replacing gaskets.

Call Technical Support at (800) 245-6489 with any questions.