

Setup, Usage Tips, and Care & Safety Guide

Please read before setting up or using your Stay-N-Play Ball XL.

TOOLS NEEDED

 Stay-N-Play Ball XL pump (you may want to use a bicycle pump or compressor for initial inflation).

SETUP


- Remove Stay-N-Play Ball XL from box and check for shipping damage. (Note: it is normal for balls to have slight creases or fold marks when first inflated.)
- 2. Allow ball to reach room temperature before inflating.
- Insert tip of pump into hole in Stay-N-Play Ball XL. Inflate ball to the desired height and firmness. DO NOT overinflate.
- Remove pump from ball and immediately insert plug into hole (so head is flush with surface of ball). DO NOT overinflate.
- 5. Your Stay-N-Play Ball XL is now ready for use.

INFLATION NOTICE

- · Inflate ball and plug.
- Ball may not inflate to 100% of size on initial inflation.
- Wait 24 hrs.
- Deflate 50% and inflate again.
- Due to the ball's material, the ball will increase to proper size with second inflation.

RECOMMENDATION

Recommended for children ages 8 - 11 ranging in heights from 51" - 56".

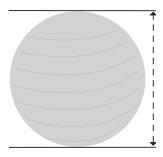

SIZE

52cm Balance Ball with four built-in prongs so it wont roll away.



Setup, Usage Tips, and Care & Safety Guide

Please read before setting up or using your Stay-N-Play Ball XL.

IMPORTANT SAFETY CAUTIONS!

Please read before setting up or using your Stay-N-Play Ball XL.

- Always use the Stay-N-Play Ball XL in an open area free of furniture or other items that could get in the way during use.
- Use Stay-N-Play Ball XL only on smooth surfaces. Do not use ball if deep scratches or gouges exist.
- 3. Stop and rest if you feel dizzy or short of breath.
- This product is sold without any warranties or guarantees of any kind and manufacturer and distributor disclaim any liability, loss or damage caused by its use.
- 5. Intended for sitting, DO NOT stand or kneel on ball.
- 6. Do not leave child unattended while using the Stay-N-Play Ball XL.
- 7. Use is for one person at a time. Do not exceed recommended weight.

CARE

- Clear play area of sharp objects that may puncture ball. Use only on a smooth surface.
- It is not necessary to deflate ball after use; however, slight leakage may occur over time. Re-inflate when necessary.
- 3. Hand wash ball with a soft cloth and warm soapy water. Do not use harsh or abrasive chemicals or cleaning tools that may scratch or damage ball.
- Always check the ball for nicks or scratches before each use. If damaged in any way, do not use.
- Avoid placing or rolling ball on newspaper, photocopies or other materials printed in ink as ink may permanently mark ball.
- Avoid exposing ball to rough, sharp or abrasive surfaces, or to heat or excessive sunlight.

CAUTION: DO NOT place Stay-N-Play Ball XL in contact with woodwork, wood furniture or painted walls for any period of time. Damage to finish may occur.

SEE MORE AT WWW.GAIAM.COM