

assembly

Please read these instructions before assembly or use of this Rollator. This Rollator must always be assembled and fitted for the user by a qualified Drive Medical Authorized dealer. Before using your new Rollator please ensure that your weight is within the weight capacity of this unit. This Rollator will require very little assembly and the assembly can be completed without tools.



assembly instructions



1. To open your rollator, pull both side frames outward. Push the folding hinge with the black handle until straight to secure the unit in the proper position.
2. Place a handle bar in each handle bar receptacle and adjust to the desired height. The brake cable should remain on the same side as the corresponding wheel. Do not cross cables. Insert locking knobs into adjustment holes and tighten to secure handle in place, making sure both handles are at equal height.
3. Slide wheels back until push pins pops through the adjustment hole located on the bottom section of the wheel frame. Lock wheels in place by inserting the locking knobs into the top section of the wheel frame and tightening until secure (figures 1 & 2).



4. Test and adjust the loop lock mechanism tension to ensure proper and secure locking before use.
5. Mount the basket in the proper location above the rollator pouch, between the handle bars.



NOTE: To assemble basket, see next section on basket assembly.

basket assembly

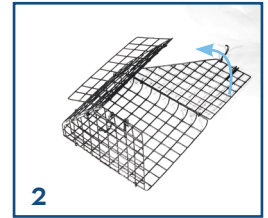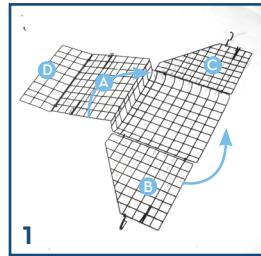

1. Fold back of basket (A) forward and attach to first side (B) using the small assembly hook located on the side of A. Hook should be on the INSIDE to assure proper assembly.

2. Fold second side (C) upward and attach it to back of basket (A) using the small hook located on the side of A.

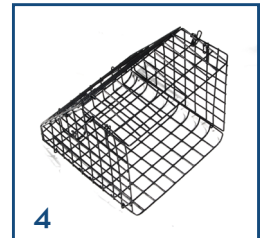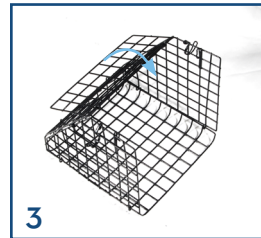

3. Slide side D past the 2 small hooks located on B and C and secure in place by sliding D backward to fit into the 2 hooks. This should be done simultaneously.

folding

1. Remove basket.
 2. Stand behind rollator and pull back on black locking handle until folding hinge is disengaged.
 3. Push sides of frame together until rollator is flat.
- NOTE: It is not recommended to adjust the wheel length when folding.

loop lock

This new generation loop lock handle has been designed to offer maximum comfort and safety. Two functions are incorporated: a normal loop lock and a parking loop lock. Those functions are fully separated, to avoid misunderstandings. Contact areas are wide, to limit pressure on the fingers.

Normal loop lock function may be applied, while walking with the Rollator, e.g. as a help to make a corner, or as a help to get up or off the side walk. Activating the Locks is performed by pulling the loop lock handle up, similar to operating the brakes of a bicycle.

The parking loop lock will be applied at standstill. When the user wants to sit down on the seat, the parking loop lock must be applied first, for safety reasons. If the user has to reach away from the Rollator, e.g. for taking something from the self in a shop, it will be safe to apply the parking loop lock first.

The way of activating the parking loop lock is by pushing the handle down. This way is convenient for people who cannot easily pinch the handle, because of certain disabilities of their hands. Releasing the parking loop lock can be done by moving the handle up. For operation the parking loop lock, the loop lock handle is provided with a wider section at the end.

operation

The Rollator loop lock handle has been designed for operating the loop locks of a Rollator or walker and incorporates two functions: operating of normal loop lock and operating the parking loop lock. Normal loop lock will be used during walking, e.g. as help to make a corner. The parking loop lock function will be used at a standstill, e.g. to keep the Rollator at its place, when using the seat to sit down.

CHARACTERISTICS OF THE LOOP LOCK HANDLE ARE:

1. Normal loop lock function
2. Parking loop lock function
3. Operation of the normal loop lock and operation of parking loop lock are fully separated, to avoid misunderstandings.



Normal loop lock is activated by pulling the handle UP, similar to operating the brakes of a bicycle. Once the handle is released, the lock will release as well.

Release the parking loop lock by pulling the handle UP. The handle will return to its basic position; the parking loop lock is OFF.



maintenance

Keep the loop lock handle free from dirt etc. to keep it operating properly. In case the loop locks are locking too little, the cable might be too loose. The cable can be adjusted by means of the adjuster screw, located where the cable is connected to the loop lock handle. If the loop lock cable wire is broken, it has to be replaced.

CAUTION:

Don't use the loop lock handle for other functions than locking a Rollator or walker. Take care that the loop lock handle is in good condition, fully assembled (no loose parts) and fixed, for safety reasons. Please read all cautions and warning labels before using this Rollator.

This unit is designed to be used as a mobility aid, creating a natural gait as the user walks securely with their primary weight distribution between the handlebars with the unit in front of the user.

If the Rollator has a seat, always engage the locking mechanism on the loop lock before using the seat. At no time can this unit be used to transport individuals while seated for risk of bodily injury.

drive