




REPLACING THE NOMAD® BATTERY PACK (P/N 600-200-400)

FOR NOMAD® NOW, N32, AND N56 | APPROXIMATELY 4 MINS

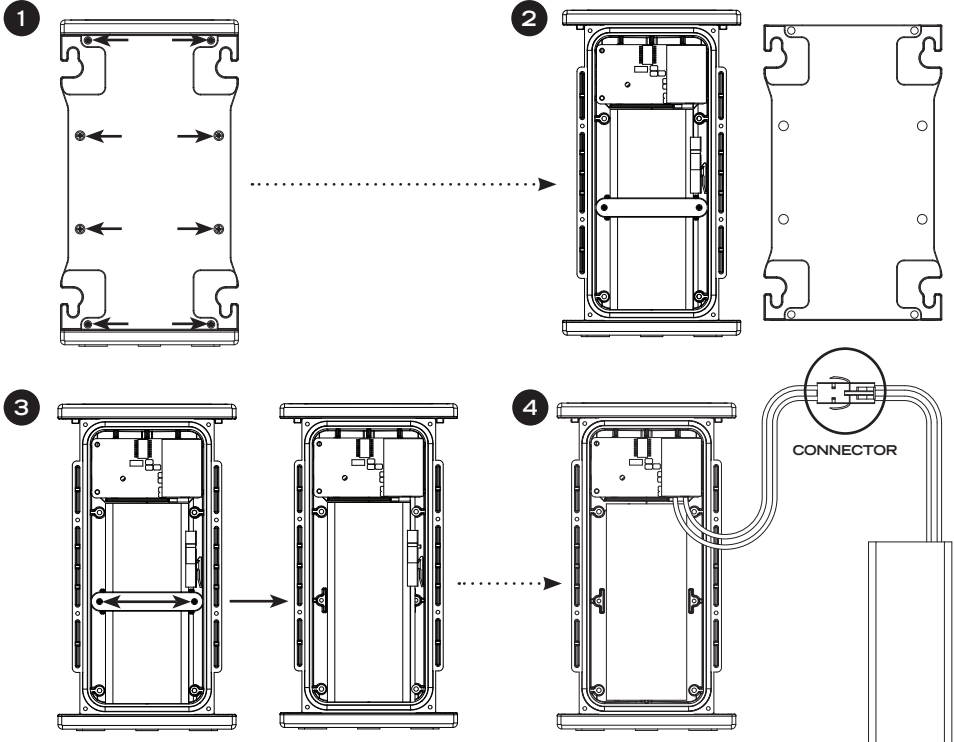

Make sure the Nomad® is turned OFF before starting.

- 1 Begin with the back of the Nomad® facing you. Locate the eight (8) screws on the rear panel.
- 2 Use a Phillips Head screwdriver to unscrew and remove the eight (8) screws. Then, remove the rear panel.
- 3 Once the rear panel is removed, notice a black strap, which holds the Battery Pack in place. There is one (1) screw on each side of the strap. Remove both using the same Phillips Head screwdriver. This will then release the Battery Pack strap.
- 4 Pull the Battery Pack out of the Nomad® Body. Then, detach it from the light by unclipping the Connector.

FOR RE-INSTALLATION: Repeat steps 1-4 in reverse order.

WARRANTY

LIMITED WARRANTY

FoxFury, LLC ("FoxFury") warrants to the purchaser of this product ("Buyer") that for a period of two years following purchase, this product will be free from defects in material and workmanship and will function in substantial compliance with FoxFury's written specifications for this product as specified in the instruction manual or on FoxFury's website located at www.FoxFury.com. Buyer's exclusive remedy shall, in any case, be limited, at FoxFury's election, to: A) repair or replacement of the defective product; or B) refund of the purchase price for this product.

THE FOREGOING WARRANTY IS THE ONLY WARRANTY MADE BY FOXFURY WITH RESPECT TO THIS PRODUCT. TO THE EXTENT ALLOWED BY APPLICABLE LAW, THERE ARE NO REPRESENTATIONS OR WARRANTIES OF ANY KIND BY THE FOXFURY, EXPRESS OR IMPLIED, WITH RESPECT TO THE CONDITION OR PERFORMANCE OF THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

THIS LIMITED WARRANTY SHALL NOT APPLY IF THIS PRODUCT IS NOT STORED, HANDLED, INSTALLED OR USED IN STRICT ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS AND INSTRUCTION MANUALS, OR WHICH HAS BEEN SUBJECT TO MISUSE, ALTERATION, NEGLIGENCE OR ACCIDENT.

1. The damaged part or product must be returned to FoxFury PRIOR TO any repair or replacement. Shipping costs are the responsibility of the claimant.
2. You must obtain a return authorization (RMA) number from FoxFury prior to returning products. FoxFury is not responsible for any damage incurred while in transit.
3. Buyer will be required to show proof of purchase—NO EXCEPTIONS.

4. Any modifications to light, cable or battery pack automatically voids all warranties on this product.

All warranty inquiries should be directed to FoxFury's Customer Service Department at Service@FoxFury.com to handle all warranty/repair-related inquiries.

TO THE EXTENT ALLOWED BY APPLICABLE LAW: (A) IN NO EVENT, WHETHER DUE TO BREACH OF WARRANTY HEREUNDER OR ANY OTHER CAUSE WHATSOEVER, SHALL FOXFURY BE LIABLE FOR OR OBLIGATED IN ANY MANNER TO PAY CONSEQUENTIAL, INCIDENTAL OR INDIRECT DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS, COST OF SUBSTITUTE PRODUCTS AND PERSONAL INJURY OR PROPERTY DAMAGE, WHETHER SUCH CLAIM IS BASED ON CONTRACT OR TORT OR ANY OTHER THEORY OF LAW, AND (B) FOXFURY'S ONLY DUTIES IN CONNECTION WITH THE SALE OF THIS PRODUCT SHALL BE TO HONOR THE LIMITED WARRANTY SET FORTH HEREIN. TO THE EXTENT THAT THIS LIMITED WARRANTY IS INCONSISTENT WITH APPLICABLE LAW, THIS STATEMENT SHALL BE DEEMED MODIFIED TO BE CONSISTENT WITH SUCH APPLICABLE LAW.

CONTACT FOXFURY

FoxFury, LLC
Oceanside, CA 92056 USA
Toll-Free: 844-FOXFURY
Tel: 760.945.4231
Fax: 760.433.3650
Email: Service@FoxFury.com
Web: FoxFury.com

All FoxFury products are designed in Oceanside, CA. All FoxFury products are manufactured with the highest quality USA and foreign parts. Products are assembled in either FoxFury's controlled plant in Asia or the USA, under strict quality control.