# **4 Button Bath Control**

# Stand-alone Blower, Light, Speed Buttons



#### Power Up

 Upon power up, the LEDs flash as the bath control goes through a self diagnostic check. Once the LEDs stop flashing, you may use the control.

#### **Session Timer**

- Turning on a device starts a Session Timer that lasts for 30 minutes.
- When all devices are turned off, either manually or when Session Timer expires, the previous state can be restored by pressing the Blower button within 5 seconds.

#### **Optional Heated Quite-Flo Blower**

 Any time the blower turns on, the heater turns on with it.

### Blower

#### Speed

- If the Blower is off, press the Blower button once to turn the Blower On at its highest speed, or
- Press and hold the Blower button. If off, the Blower starts up at low speed, ramps up to highest speed, then ramps down to lowest speed. The action then repeats. Release on the desired speed. If you press and hold the Blower button again, it continues to ramp repeatedly.
- If the Blower is on, press the Blower button once to turn the Blower Off. **Modes**

### Press the Blower button twice to put the Blower in Pulse mode, or


Press the Blower button three times to put the Blower in Wave mode.

#### Light

- If you have a light installed, the light can be controlled independently of all other features.
- Some lighting options have unique operation for color changes.
- See the manual for any special light system that may be installed.

#### Increase/Reduce Speed

Press and hold the + or - button to increase or decrease the speed smoothly.

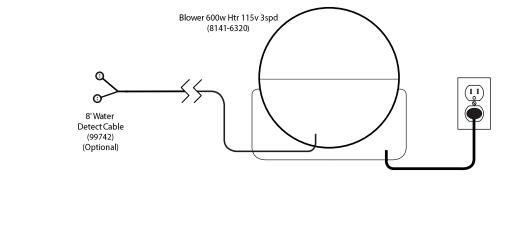

Bulb Holder withLight Adapter CableCable Bath 8 Pin2"Bath Light7 LED Bulb Cluster2 pin Amp plug4 Pin Din to 2 pin Amp plugMini Din 6ftControl Panel(59200, Front Access)(59007-V)(59102)(25750)(25569)(90013)

# **LED** Definition



#### Session Timer On

Tells you a device button has been pressed and a Session Timer is running.

#### Water Level Detected

Tells you there is still water in the tub. (Sensor required.)

#### Error

Tells you that your system needs servicing. (See System Error Detection.)

## Purge Cycle

- A Purge Cycle removes standing water from the plumbing and dries the air delivery system. This helps maintain a sanitary plumbing system.
- Once the bath control thinks you're finished using the bath, it schedules a Purge Cycle. The Session Timer LED flashes periodically to indicate that a Purge Cycle will soon begin.
- Certain actions may cancel the planned Purge Cycle. This is normal. Otherwise, after a number of minutes, the 2-minute Purge Cycle will begin. At that point, the Session Timer LED will light continuously.
- When the Purge Cycle ends, all equipment turns off and the Session Timer LED turns off.

## LED Messages

#### System Error Detection

- If an error occurs in the bath system, the red ERROR LED will flash.
- In addition, the three remaining LEDs stay lit in a specific on/off pattern that reveals a diagnostic code of the error. If this should occur, take note which of the three lights are on or off. This information will help technical support in diagnosing the error.

#### System Reset

Press and hold the two top buttons for 10 seconds to turn all equipment off.
Continue to hold the two top buttons 10 seconds longer to restart the system.