

Thank you for purchasing the PROSCALE™ LC digital scale. Please read all operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service. For more information please visit www.proscale.net.

Never load the scale with more than the maximal capacity. Although the PROSCALE™ LC is designed to be extremely durable with extra overload protection built into the case, overloading will permanently damage it! Avoid any exposure to extreme heat or cold, your scale works better when operated at normal room temperature. Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents and/or a close proximity to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale. Handle with care. Gently apply all items to be weighed onto tray top. Avoid shaking, dropping or otherwise shocking the scale. Scales are delicate instruments and unlike cellular phones, scales have delicate sensors that determine how much an item weighs. If you drop or shock your scale, these sensors "feel" the shock and are sometimes destroyed. This happens with all digital scales. We design our scales to be as resistant to shock or drops as possible, however there is no way for us to protect 100% against load cell or sensor damage.

Failure to follow these instructions will void your warranty.

Always allow the scale to acclimate to normal room temperature for at least one hour before use. Give your scale sufficient warm up time. Usually 30-60 seconds before calibration to give the internal components a chance to stabilize.

## **OPERATION**

- Place scale on a horizontal flat surface, press [ON/OFF] key to turn on the scale.
- 2. Wait until "0.0" is displayed.
- 3. Put the object(s) on the weighing platform.
- 4. Using the [MODE] key, you can change the weighing units.
- 5.Press [LIGHT] to turn on or off backlight.

## **TARE**

- 1. Turn on scale as described above.
- 2. Place the "tare item" on the platform.
- 3. Press [TARE] and wait until "0.0" is displayed.
- 4. Add the "net-weight-item".

## **CALIBARATION**

- 1. Ensure the scale is off and place on a stable surface.
- 2. Press and hold [MODE] button turn on the scale. Release [MODE] when the display shows "CAL".
- Press [MODE] again, the LCD display will show the required calibration weight.
- Gently place the required weight on the scale and and wait 3 seconds.
- 5. The display will show "PASS" when calibration is complete and return to the normal weighing mode.

SPECIFICATIONS	
Tare Range	Full capacity
Auto Off	60 seconds off
Op. Temp	15 to 30 °C
Display	LCD 5 digits
Power	2 x AAA
Scale Dim.	120mm x 72mm x 11m
Tray Dim.	62mm x 62mm

Proscale LC 100 / LC 300	
Capacity	100g / 300g
Readability	0.01g / 0.1g
Modes	g/oz/ozt, dwt

DISPLAY ERROR MESSAGES	
Lo	Change the batteries
O_LD	Overload
UnST	Use the scale in a
	more stable position
OUT2	Calibration Required

www.proscale.net