



## Installation, Operating and Servicing Instructions

### Panther Light Duty Hot Cupboards PLH36, PLH45, PLH60, PLH90

Please make a note of your product details for  
future use:

Date Purchased: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Dealer: \_\_\_\_\_

\_\_\_\_\_

The word "PANTHER" in a bold, blue, sans-serif font. The letters are all uppercase and have a slight shadow effect.

# CONTENTS

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	3
Installation and Commissioning	3-4
Operating Instructions	4
Cleaning	4
Servicing, Maintenance and Component Replacement	4
Fault Finding	5
Spare Parts List	5
Service Information and Guarantee	6

## IMPORTANT INFORMATION



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.



 
### **WARNING!**

This symbol is used whenever there is a risk of personal injury.



### **CAUTION!**

This symbol is used whenever there is a risk of damaging your Lincat product.



### **NOTE:**

This symbol is used to provide additional information, hints and tips.

**KEEP THIS MANUAL FOR FUTURE REFERENCE**

## WARNINGS AND PRECAUTIONS



This appliance must be installed, commissioned and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Strip plastic coating and clean the appliance before use.

During operation parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance or cleaning.

## TECHNICAL DATA

Model	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
PLH36	900	360	600	28
PLH45		450		37
PLH60		600		45
PLH90		900		61

## CHECK LIST OF ENCLOSURES

Warranty card
Instructions Manual
Shelves

## INSTALLATION AND COMMISSIONING

This appliance must be earthed.



An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:

Green and Yellow wire	Earth	E
Blue wire	Neutral	N
Brown wire	Live	L

Install this appliance on a level surface ensuring all vents are unobstructed.

Model	Power (kW)
PLH36	0.75
PLH45	0.75
PLH60	1.5
PLH90	2.0

## OPERATING INSTRUCTIONS

Only qualified or trained personnel should use this appliance.

Connect the appliance to an electrical supply using the attached plug and lead.

Power to the appliance is indicated by illumination of the green neon.

Turn the control knob to the desired setting; this will illuminate the amber neon. When the amber neon goes out, the appliance has attained temperature. Periodic illumination of the amber neon indicates the thermostat controlling the element to maintain a constant temperature.

## CLEANING



Do not use a water jet or steam cleaner, and do not immerse this appliance.

Clean all panels with warm water and mild detergent; do not use abrasive materials. Dry with a soft cloth.

## SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT

All servicing, maintenance and component replacement on these appliances should be carried out by one of our recommended service engineers.

## FAULT FINDING

Please refer to the Service Helpdesk number on the final page of this manual.

## SPARE PARTS LIST

Part Number	Description	Used on	
EL170	Element 750W	PLH36, PLH45	
EL171	Element 1500W	PLH60	
EL172	Element 2000W	PLH90	
FE10	Adjustable foot	All	
HA106	Door handle		
HI24	Door hinge		
HI25	Door hinge plate		
KN54	Control knob		
NE37	Amber neon		
NE38	Green neon		
PL143	Cable & plug		
SH120	Shelf 310 x 530		PLH36
SH121	Shelf 400 x 530		PLH45
SH123	Shelf 850 x 530	PLH90	
SH124	Shelf 550 x 530	PLH60	
SS06	Shelf support	PLH36	
SS07		PLH45	
SS08		PLH60	
SS09		PLH90	
TH106	Thermostat	All	

# SERVICE INFORMATION

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

**☎ UK: 01522 875520**

For non-UK customers, please contact your local Lincat dealer

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
  - Product code
  - Type number
  - Serial number
- } All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

## GUARANTEE

This unit carries a comprehensive UK mainland 2 year warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.