



## Installation, Operating and Servicing Instructions

### Silverlink 600 Electric Ovens V6, V6/F, V6/D, V6/FD, V7, V7/4

Please make a note of your product details for  
future use:

Date Purchased: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Dealer: \_\_\_\_\_

\_\_\_\_\_

**SILVERLINK 600**

# CONTENTS

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	3
Installation and Commissioning	3-5
Operating Instructions	5
Cleaning	5
Servicing, Maintenance and Component Replacement	6
Fault Finding	6
Spare Parts List	6
Accessories	6
Service Information and Guarantee	7

## IMPORTANT INFORMATION

---



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.

---



### **WARNING!**

This symbol is used whenever there is a risk of personal injury.

---



### **CAUTION!**

This symbol is used whenever there is a risk of damaging your Lincat product.

---



### **NOTE:**

This symbol is used to provide additional information, hints and tips.

---

**KEEP THIS MANUAL FOR FUTURE REFERENCE**

## WARNINGS AND PRECAUTIONS



This appliance must be installed, commissioned and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Strip plastic coating and clean the appliance before use.

During operation parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance or cleaning.

## TECHNICAL DATA

Model	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
V6	650-670	600	600	46.0
V6/F				47.0
V6/D		750		53.0
V6/FD				
V7				
V7/4				

## CHECK LIST OF ENCLOSURES

Warranty card

Instructions manual

Shelves x 2

## INSTALLATION AND COMMISSIONING

This appliance must be earthed.



An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:

Green and Yellow wire	Earth	E
Blue wire	Neutral	N
Brown wire	Live	L

Means of isolation with at least 3mm contact separation in all poles must be incorporated into the fixed wiring of this appliance.

The fixed wiring insulation must be protected by insulated sleeving having a temperature rating of at least 60 Deg C.

Supply cords shall be oil resistant, sheathed flexible cable not lighter than ordinary polychloroprene or equivalent elastomer sheathed cord (code 60245 IEC 57)

Install this appliance on a level surface ensuring all vents are unobstructed. Any partitions, walls or furniture must be of non-combustible material. Minimum distances A 100mm B 500mm – see Fig 1.

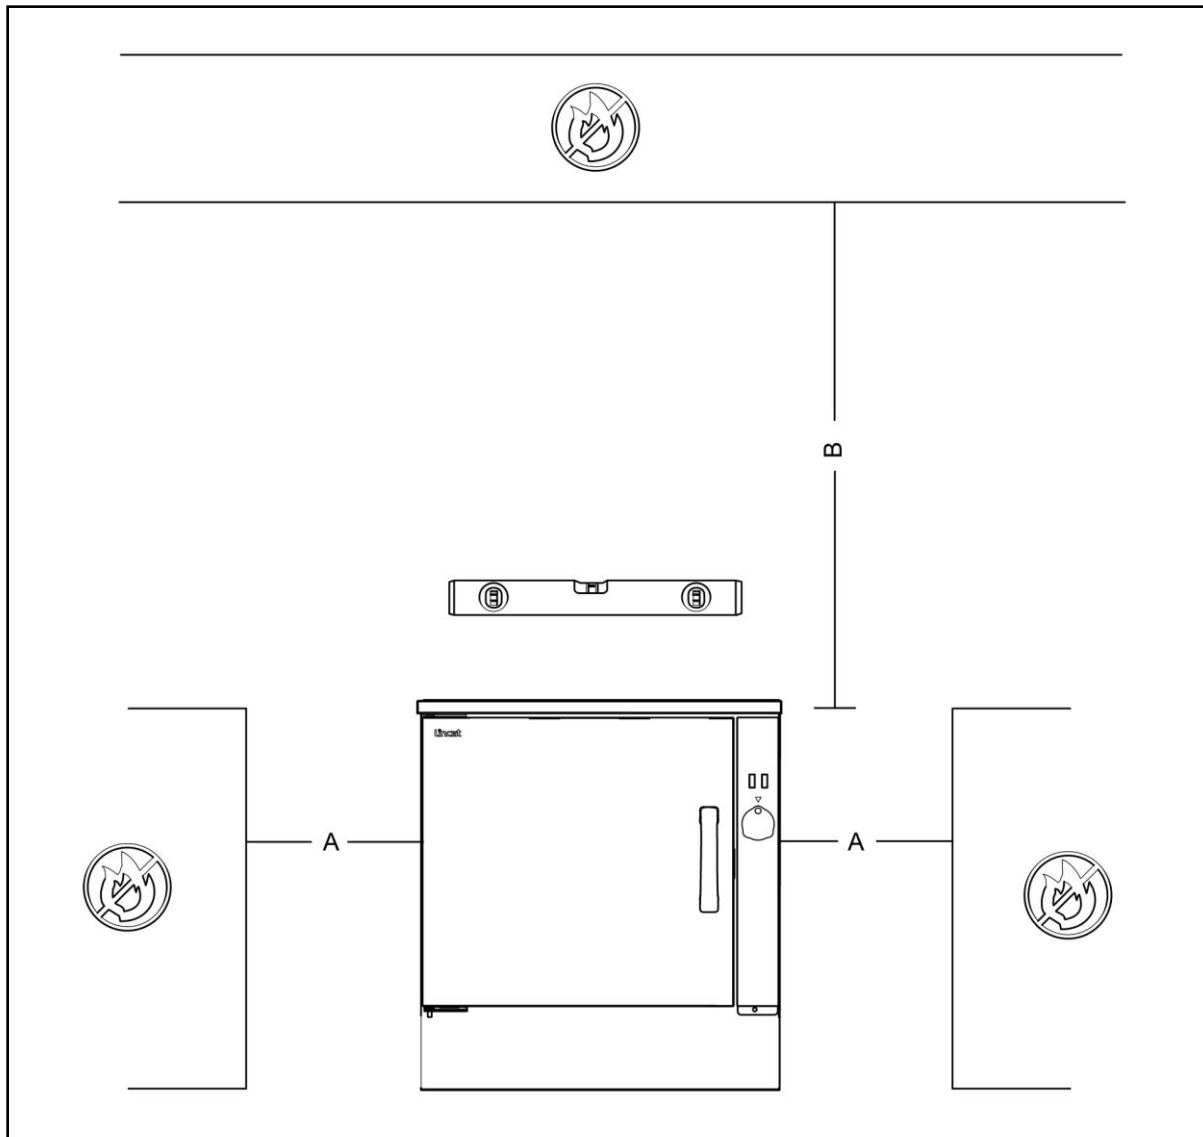


Fig 1

The fitting of a fryer above this appliance is not recommended.

### Power Ratings

Model	kW	Amps
V6	3.0	13.0
V6/F		
V6/D		
V6/FD		
V7		
V7/4	4.0	17.0

## OPERATING INSTRUCTIONS

Only qualified or trained personnel should use this appliance.

Connect the appliance to the supply. For V6 and V6/F the green neon will illuminate. For other models, turn on at the green switch, which will illuminate.

Set the oven temperature using the thermostat control knob – the amber neon will illuminate.

When the amber neon extinguishes, temperature is reached and product may be loaded into the oven. The amber neon will cycle as the element operates to maintain a constant oven temperature.

After use, switch off at the thermostat, then the green switch and then the electrical supply.

For fan assisted models, switching off at the thermostat and allowing the fan to keep running before switching off at the green switch and supply will allow the oven to cool more quickly.

## CLEANING



Do not use a water jet or steam cleaner, and do not immerse this appliance.

Clean all panels with warm water and mild detergent, do not use abrasive materials. Dry with a soft cloth.

Shelves and side racks may be removed for cleaning.

# SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT

All servicing, maintenance and component replacement on this appliance should be carried out by one of our recommended service engineers.

## FAULT FINDING

Please refer to the Service Help Desk number on the final page of this manual.

## SPARE PARTS LIST

Part Number	Description	Used on
EL30	Element 2kW	V6, V6/D
EL31	Element 1kW	
EL103	Element 3kW	V6/F, V6/FD, V7
EL110	Element 4kW	V7/4
FA12	Fan	V6/F, V6/FD, V7, V7/4
FE10	Foot	All
GL48	Glass	V6/D, V6/FD
HA92	Handle	All
KN189	Control knob	
NE34	Green neon	V6, V6/D
NE41	Amber neon	All
PL202	Mains cable	V6, V6/F, V6/D, V6/FD, V7
RE28	Relay	V6/F, V6/FD, V7, V7/4
SE22	Side door seal	All
SE23	Top door seal	V7, V7/4
SH03	Shelf	V6, V6/F, V6/D, V6/FD
SH63	Shelf	V7, V7/4
SR1	Side rack	All
SW53	Switch - green	V6/F, V6/FD, V7, V7/4
TH46	Thermostat	All

## ACCESSORIES

Part Number	Description	Used on
V6/T	Top to convert to counter top unit	V6 models
SLS6/V	Floor stand for converted V6 model	
V7/T	Top to convert to counter top unit	V7 models
SLS7/V	Floor stand for converted V7 model	

# SERVICE INFORMATION

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

**☎ UK: 01522 875520**

For non-UK customers, please contact your local Lincat dealer

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
  - Product code
  - Type number
  - Serial number
- } All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

## GUARANTEE

This unit carries a comprehensive UK mainland 2 year warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.