


User manual

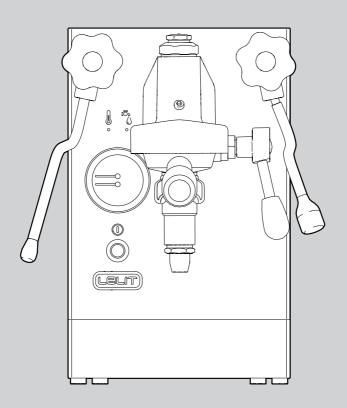

Pro Line MaraX PL62X



### THANK YOU FOR CHOOSING A LELIT PRO LINE PRODUCT

# Register your product on care.lelit.com

Download the complete guide to get the most of your coffee machine PL62X and visit our Lelit Espresso YouTube channel for insights, tutorials, tips and tricks.



# Save the box and all the packing material!

LELIT has studied the external and internal packing of your coffee machine to help you re-use it in case of maintenance or repair need.



## Index


Product overview	5	
Factory settings	5	3
Equipment box	6	
Packaging	7	
First start-up	7	
How to install the resin water filter	8	
Espresso and coffee	9	
Steam and hot water	10	
Stand-by mode	10	
Limestone prevention	11	
Daily cleaning	12	
Weekly cleaning	12	
Annual cleaning	14	
Lights and states of the machine	14	



#### **ATTENTION:**

Read the safety notes carefully before using this product.

#### Pic 1

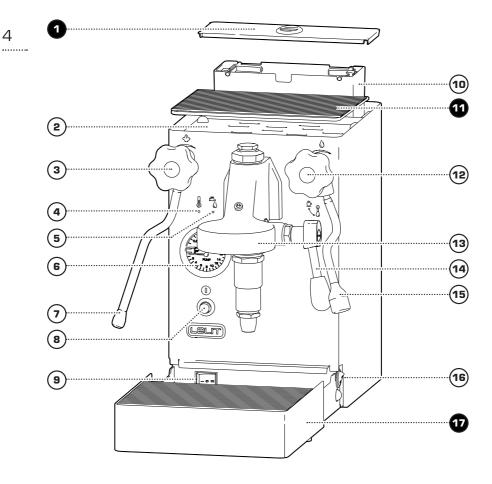







#### 1. Product overview

- 1. Mobile water tank cover
- 2. Heated surface for cup grate
- **3.** Steam dispensing knob
- **4.** Pilot light machine ready
- 5. Pilot light water tank full of water
- **6.** Manometer for steam and pump pressure during extraction
- 7. Multi-directional, anti-burn steam wand
- 8. ON/OFF main switch (with lighted frame)

- **9.** Temperature mode switch
- **10.** Water tank (2,6L)
- 11. Grate for heated surface
- **12.** Hot water dispensing knob
- **13.** Brewing group
- 14. Coffee group lever
- 15. Multi-directional, anti-burn hot water wand
- 16. Use mode switch
- 17. Removable water drainage tray, complete with grate

## 2. Factory settings



Use mode (16) ModeX (pre-set value)





Temperature mode (9) Warm (pre-set value)




To use the machine with different settings, download the complete guide. The complete guide contains the instructions on how to set other functioning profiles.

#### 3. Equipment box

- A. 1 dose (9-11g) coffee filter
- B. 2 doses PLUS (18-21g) coffee filter
- C. Blind filter for backflushing
- **D.** Tamper in stainless steel with red wood handle (PLA481R)
- E. Raiser for espresso cups
- **F.** First cleaning kit (with 3 detergent powder single-dose bags and 1 single-dose bottle)
- **G.** Filterholder complete with 2 doses (14-18g) coffee filter

- H. LELIT 35L water resin filter
- I. Brush for group head cleaning
- J. Plastic spoon for coffee powder
- K. Power cord

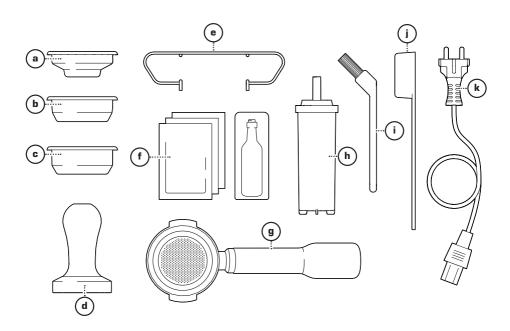


6




### 4. Packing

The packing of your coffee machine has been studied and produced to be re-used. Use the original box and all the packing elements in case you need to send the machine back to your reseller or to an authorized service centre, for ordinary or extraordinary maintenance. The complete guide contains the instructions to help you pack the machine easily.

#### 5. First start-up

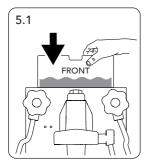



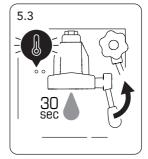

**!! Attention.** Remove the machine from its packing and follow the instructions printed on the box.

Place the machine on a solid, flat and dry surface and make sure the appliance is stable; if needed, screw/unscrew the feet to adjust the position of the machine.

From the equipment box, take out the water drainage tray (17), the grate (11), the mobile cover (1) and position them as indicated in Pic. 1.

Fill the water tank (10) with room temperature water up to the indicated maximum level and insert it in its seating (Pic 5.1).

Use the power cord (K) to connect the machine to the electrical mains and turn ON the machine by pressing the ON/OFF (8) switch. If the water tank (10) is full of water and properly inserted in its seating, the pilot light (5) goes ON (Pic 5.2).

The hydraulic circuit will need maximum 4 minutes from the 1st turn on to get

filled with water. Once the waiting time is over, the pilot light (4) will start flashing. Lift the group lever (14) completely. The brewing group (13) will start dispensing water (within 30 seconds). Let the water come out for about 30 seconds and then return the group lever to its initial position (Pic 5.3).


Now the hydraulic circuit is filled up. The machine will start heating the water to reach the pre-set values. This operation requires maximum 24 minutes: the pilot light (5) remains firmly on, while the pilot light (4) flashes.


The machine is ready for use when the 2 pilot lights (4 & 5) and the lighted frame of the ON/OFF (8) switch are firmly on.

**Attention.** During the heating phase, a small quantity of water will drain in the tray (17). This is normal and confirms the machine correct functioning (functions check).

#### 6. How to install the water resin filter



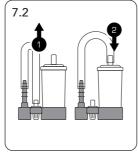

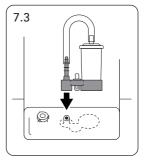


Before installing the resin filter (H) in the water tank (10), immerse the resin filter in a jug full of water for about 3 minutes, to eliminate the air inside the filter that may cause a machine malfunction (Pic 7.1).


Take out the water tank (10) and remove the black rubber support placed on the bottom of the tank. Insert the resin filter (H) in the bigger hole of the rubber support, remove the charge tube from the small plastic filter and fix it on the nozzle of the resin filter (H) (Pic 7.2).


Re-place the support in its seating on the bottom of the tank (Pic 7.3), fill the tank (10) with water and insert the tank (10) in its seating.



#### 7. Espresso and coffee

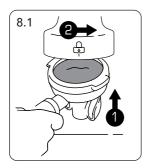

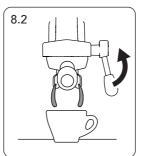

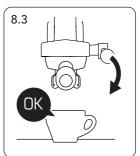

Choose you r coffee filter, insert it into the portafilter (G) and fill it with the adequate quantity of ground coffee. Use the tamper (D) to press the coffee powder in the portafilter (G). Fix the portafilter (G) into the brewing group (13) and make sure the handle is aligned with padlock symbol present on the group (Fig 8.1).

Place the cup/s under the portafilter and lift the group lever (14) to start the coffee extraction (Pic 8.2).

During the extraction phase, the lighted frame of the ON/OFF switch (8) flashes to indicate that the pump works. Return the group lever (14) to its initial position to stop the extraction (Pic 8.3).

Take out the portafilter (G) and empty the filter after every coffee extraction.

Note. During the normal functioning the pilot lights of the machine may flash or go off to indicate various states of the machine. See the chapter 14 "Pilot lights and states of the machine" for more details.


**Note.** We suggest you leave the portafilter (G) inserted into the brewing group (13) to help harmonize the temperature between the group and the portafilter complete of the filter.

**Attention.** Do not remove or loosen the portafilter (G) from the brewing group (13) during the coffee extraction to avoid burn risks caused by hot water leaks.

#### 8. Steam and hot water

To obtain an optimal performance of the machine, lift the group lever (14) completely and return it to its initial position about 30 seconds before using the steam wand or the hot water wand (7 or 15).

10

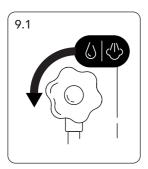



Turn the knobs (3 or 12) anticlockwise to dispense steam or hot water (Pic 9.1).


Vary the rotation of the knob to adjust the steam or hot water quantity/intensity.

Turn the knobs (3 or 12) clockwise to stop the function.

### 9. Stand-by mode

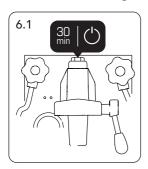

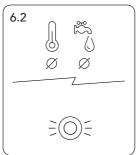

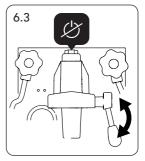

After 30 minutes of inactivity, the machine will go automatically in stand-by mode (Pic 6.1).

The lighted frame of the ON/OFF switch (8) flashes while the pilot lights (4 and 5) remain firmly off (Pic 6.2).

To re-start the machine, you must lift the group lever (14) completely and return it to its initial position (Pic 6.3).


Wait until all the pilot lights are firmly on before using the machine.

.......



Note. The Stand-by function can be disabled. For more details download the complete guide.

#### 10. Limestone prevention

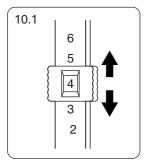


To prevent limestone deposits and grant a better result in the cup, use the water resin filter (H). The filter found in the equipment box has an autonomy tested for 35 I of water.


Use the slides put on the handles of the water tank (10) to remember the complete fillings of the tank and replace the resin filter once exhausted (Pic 10.1).


**Note.** The resin filter must be replaced every 14 complete fillings, or after 4 months of use. If the machine remains unused for 1 month, the resin filter must be replaced with a new one.

**Note.** Sea chapter 6 "How to install the water resin filter" to replace the filter correctly.

#### 11. Daily cleaning

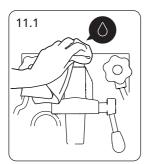

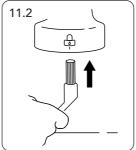

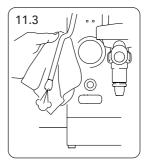

**Note.** For an optimal result we suggest you use our kit PLA9101 (not included) that contains a microfiber cloth with embroidered LELIT logo, a paintbrush with bristles in natural fibres and a brush with nylon bristles.

**General cleaning.** Use a soft cloth, preferably in microfiber, and moisten it with tap water to clean the stainless-steel appliance body of the machine (Pic 11.1).

**Group cleaning.** After each extraction empty the coffee filter, wash the portafilter (G) and the relative filter with tap water and use the brush (I) to eliminate the coffee residues from the group gasket (Pic 11.2).


**Steam wand cleaning.** After frothing the milk, clean the nozzle of the steam wand (7) using a soft cloth and dispense a small quantity of steam to eliminate every possible milk rest in the holes (Pic 11.3).

#### 12. Weekly cleaning

**Note.** In the equipment box you'll find the detergents (F) for the first cleaning cycle of the machine. Afterwards, we suggest you use our accessories PLA9201 and PLA9203 (not included).

**Filters and portafilter cleaning.** It's necessary to clean the portafilter to eliminate the coffee oils that affect the taste of your drinks negatively. Place a jug under the hot water wand (15), turn the knob (12) anti-clockwise and take out about 1 l of water.



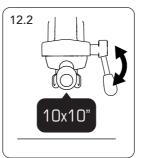




Insert the portafilter (G) and the used filters into the jug but pay attention not to immerse the portafilter handle (Pic. 12.1). Add 2 bags of detergent powder (F or PLA9201). After 15 minutes, empty the jug and rinse the portafilter (G) and the filters with plenty of tap water.

**Backflushing.** Insert the blind filter (C) into the portafilter and pour 1 bag of detergent powder (F or PLA9201) into the filter. Insert the portafilter (G) in the group (13) and lift the lever (14) for 10 seconds. Stop the function and wait for 10 seconds. Repeat the procedure 10 times (Fig 12.2).

Remove the portafilter (G) from the group and rinse it with hot water from the brewing group (Pic 12.3).

Re-insert the portafilter (G) in the group and repeat the previous operation 5 times for 10 seconds each time, without detergent powder.

Remove the portafilter (G) and take out the blind filter (C). Empty the drainage tray (17) and rinse the portafilter (G), the filters and the tray (17) with plenty of tap water.

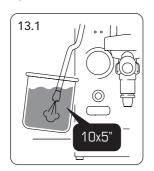

**Steam wand cleaning.** Fill a jug with 500 ml of cold water, add the content of 1 bottle of detergent liquid (F or PLA9203) and immerse the steam wand (7) in this solution.

Open the knob (3) and dispense steam for 5 seconds. Stop the function and wait for 5 seconds. Repeat the operation 10 times (Pic 13.1).

Repeat the entire procedure using 1 l of fresh water to rinse the steam wand (7) properly.

The descaling of the hydraulic circuit of the machine must be done every year to ensure longevity and constant performances. This operation must be done by a specialized technician. You can see the centres authorized to run this procedure on our website: care.lelit.com.


### 14. Lights and states of the machine

Pilot light is on; OF Pilot light flashes; Pilot light is off

	<b>\$</b>	0	State of the machine
<u>;</u> @;	<b>©</b>	<b>©</b>	Machine in heating phase Wait until the machine is ready for use
Ø	<u>;</u> @:	<b>©</b>	Water tank is missing or water tank is empty Fill the water tank (10) with water and insert it in its seating
<b>©</b>	<b>©</b>	<b>©</b>	Machine ready for use You can start using the machine
Ø	Ø	<u>;</u> @;	Machine in Stand-by mode Lift the group lever (14) completely and return it in its initial position to activate the machine. Wait until all the pilot lights are firmly on before using the machine.

14



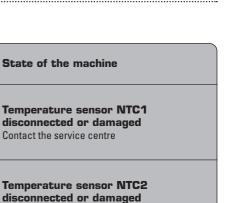

<u>;</u> ⊚:	<u>-</u> ;⊚:	<u>;©</u> :

<u>:</u>@:

<u>-</u>:@:

<u>-</u>:@:

<u>-</u>:@:

0

Ø

Boiler filling phase has exceeded the maximum time

Contact the service centre

Check the correct position of the water tank (10) and remove eventual blockages. Re-start the machine with the main switch. If the problem persists, contact the service centre.



# C € ERI

IT/7800052, REV 00, dated 20/03/20 Art. PL62X

©2020 Gemme Italian Producers Srl. All Rights Reserved

.....