

# PinkPower®

POWERFUL TOOLS FOR POWERFUL WOMEN

## 4-VOLT ELECTRIC SCISSORS



**HG2043**

## Thank you for your purchase!

Ever since we started back in 2011, our mission has been to give YOU the confidence to tackle something new. Whether you're building a deck or just hanging a picture, we'll be there along the way. We stand behind every product, which is why they come with a full 3-year warranty. Our contact information is listed below and you can reach out to us any time. From the entire Pink Power family, we wish you all the best on your next project!

Thank you!

*Michael Wilson*

## Need to get in touch?

Register Your Warranty and sign up for free coupons:  
[Pinkpowerdrill.com/warranty](https://pinkpowerdrill.com/warranty)

## Questions?

📞 Call or Text Us: **813.304.2224**

✉️ Email Us: [customerservice@pinkpowerdrill.com](mailto:customerservice@pinkpowerdrill.com)

## Love your items so much that you want to be a Brand Ambassador?

Join the Pink Power Army by sending your request to:  
[affiliate@pinkpowerdrill.com](mailto:affiliate@pinkpowerdrill.com)

## Follow us for discounts and fun!



@shoppinkpower

 [pinkpowerdrill.com/blog](https://pinkpowerdrill.com/blog)

# 4-VOLT ELECTRIC SCISSORS

## FEATURES:

- 1 **Style O scissor head for soft, flexible materials. This blade has a circle in the middle.**
- 2 **Style D scissor head for hard, rigid materials. This blade has a half circle in the middle.**
- 3 **Blade release button (one on each side)**
- 4 **Blade safety button**
- 5 **ON/OFF switch.**
- 6 **External 1500 mAH battery pack.**
- 7 **Battery release tabs.**



## OPERATING INSTRUCTIONS:

### CHARGING THE BATTERY PACK

Your scissors come equipped with a 90 minute fast charger. The battery back for this tool has been shipped in a low charge condition to extend battery life. The battery should be fully charged prior to first use. Batteries will not reach full charge the first time they are charged. Please allow several cycles for the battery to reach full charge. Do not charge the battery in areas of extreme heat or cold.

### CHARGING INDICATION

Connect the charger base to the DC adapter and plug the adapter into a power source. Place the battery in the charger and the light on the back of the charger will illuminate RED. When the battery is fully charged the light will turn off.

### INSERTING & REMOVING THE BATTERY

Once you have removed the battery from the charging base, grasp the battery release tabs and slide into the back of the scissors. You should hear a clicking sound. To remove the battery, grasp the battery release tabs, squeeze and pull away from the tool.

### ON/OFF TRIGGER

Before using your scissors for the first time, practice turning them on and off using the ON/OFF switch. To turn on, push the back of the switch FORWARD. To turn your scissors off, push the back of the switch DOWN, Once the switch is turned on, you do not need to continue holding the switch.



## CHANGING BLADES

To remove a blade, hold the blade release buttons on each side of the scissors head with one hand and slide the blade release safety button back with the other hand. To insert a blade, hold in the blade release buttons on each side of the scissor head and slide it into place.



**WARNING:** DO NOT insert the battery while the ON/OFF Switch is set to the "ON" position, as this could result in serious injury.

Prefer video tips instead? Go to [Pinkpowerdrill.com/Videos](https://Pinkpowerdrill.com/Videos)



## TOOL SAFETY:

### SAFETY

Do not use power tools under the influence of medication, drugs, or alcohol as this could result in serious injury. Keep hair, clothing, jewelry, and other loose objects away from moving parts. Use the proper safety equipment when operating power tools.

Never modify your tools as this could increase the risk of electric shock or malfunction. Make sure to always ensure proper balance when using power tools. If your tool is damaged stop use immediately.

### WORKING AREA

Keep your working area clean and well lit. Cluttered and dark areas can lead to accidents. Do not operate power tools in explosive atmospheres such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite fumes and dust.

### CLEANING & MAINTENANCE

Always remove the battery before cleaning. Remove dust and dirt with a slightly damp cloth. Ensure that no water gets into the inner parts of your tools, battery, and charger. Your tool is permanently lubricated and does not require oil.

### BATTERY USE & CARE

Only use the included charger to charge your battery. Using the incorrect charger could result in injury or damage to your battery. Do not leave battery and charger unattended when charging. Once the battery is fully charged, remove it from the charger. Abuse of the tool can lead to battery leakage. Avoid contact with battery fluid. If contact occurs, seek medical help immediately. Never attempt to open the battery for any reason. Do not expose your battery to rain or wet conditions. Do not store your battery in temperatures below 39°F or above 70°F.

### DISPOSAL OF BATTERY

To preserve natural resources please recycle or dispose of the battery properly. This product contains lithium batteries. Consult your local waste authority for information regarding available recycling and/or disposal options.

## TECHNICAL DATA:

**Battery:** 4-Volt Lithium-ion  
**Battery capacity:** 1.5Ah  
**No-load speed:** 10,000rpm  
**Charge time:** 90 minutes  
**Charge rating input:** 100-240AC  
50/60Hz 0.5A  
**Charge rating output:** 6.5V, 1.3A

### MAXIMUM THICKNESS CHART FOR STYLE O BLADE:

Cotton Fabric	2.5mm
Leather	3.5mm
Vinyl	3.5mm
Corrugated Cardboard	5.0mm
Solid Cardboard	1.8mm

### MAXIMUM THICKNESS CHART FOR STYLE D BLADE:

Vinyl	3.5mm
Corrugated Cardboard	5.0mm
Solid Cardboard	1.8mm
Plastic Strapping	1.5mm
Plastic Sheets	1.0mm
Tin Aluminium	0.35mm