

Pink *W* Power®

POWERFUL TOOLS FOR POWERFUL WOMEN

20-VOLT LITHIUM-ION VACUUM KIT



PP201

Thank you for your purchase!

Ever since we started back in 2011, our mission has been to give YOU the confidence to tackle something new. Whether you're building a deck or just hanging a picture, we'll be there along the way. We stand behind every product, which is why they come with a full 3-year warranty. Our contact information is listed below and you can reach out to us any time. From the entire Pink Power family, we wish you all the best on your next project!

Thank you!

Michael Wilson

Need to get in touch?

Register Your Warranty and sign up for free coupons:
[Pinkpowerdrill.com/warranty](https://pinkpowerdrill.com/warranty)

Questions?

📞 Call or Text Us: **813.304.2224**

✉️ Email Us: customerservice@pinkpowerdrill.com


Love your items so much that you want to be a Brand Ambassador?

Join the Pink Power Army by sending your request to:
affiliate@pinkpowerdrill.com

Follow us for discounts and fun!



@shoppinkpower

 pinkpowerdrill.com/blog

20-VOLT LITHIUM-ION VACUUM KIT

FEATURES:

- 1 Power Switch
- 2 LED Light
- 3 Dust Bin Release Switch
- 4 600ML Dust Bin
- 5 Dust Filter
- 6 Extension Tube
- 7 Crevice Tool
- 8 Floor Brush
- 9 Battery Pack



OPERATING INSTRUCTIONS:

CHARGING THE BATTERY PACK

Your vacuum comes with a fast charger. The battery pack for this tool has been shipped in a low charge condition to extend battery life. Remove your charger and plug it into a power source. A red light on the charger will illuminate. Place the battery in the charger and a green light will flash. Do not charge batteries in extreme heat or cold. Make sure to fully charge and discharge the batteries on the first few uses to help the battery reach full charge. Please reference the table on the next page for battery charge status. *(See Table 1)*

INSERTING AND REMOVING THE BATTERY

Slide the battery into the back of the vacuum until you hear a "Click" noise. To remove the battery, press the button on the front of the battery down and pull away from the vacuum. This will release the battery.

USING YOUR VACUUM AND ATTACHMENTS

To use as a handheld vacuum you can connect the Crevice Tool directly to the Dust Bin. For hard to reach areas, connect the Crevice Tool directly to the Extension Tube. If using to clean floors, connect the Floor Brush to the Extension Tube. Your vacuum includes a Power Switch that must be held down to power the unit. This will prolong the life of the battery when not in use.

EMPTYING YOUR DUST BIN

For optimal suction, your Dust Bin should be emptied when it reaches 30% capacity. Make sure the unit is powered off and press in the Dust Bin Release Switch and pull the Dust Bin away from the vacuum. Dispose of debris in a waste basket. To attach your Dust Bin back to the vacuum, just hold down the Dust Bin Release Switch and press the Dust Bin into place.



CLEANING YOUR DUST BIN AND FILTER

Remove your Dust Bin by following instructions from the previous section above. Once removed, twist your Dust Filter counter-clockwise to remove the Dust Filter. Your Dust Filter can be cleaned using warm water and soap. Allow your Dust Filter to dry before placing back in the vacuum. Your filter should be cleaned monthly if using your vacuum multiple times per week.



BATTERY GAUGE

Your battery includes a power gauge on the back of the unit. To check the power of your battery, press the button on the back of the unit. Below is a table showing the power level of your battery. When your LED is flashing, it is time to charge your battery. (See Table 2)



Prefer video tips instead? Go to Pinkpowerdrill.com/Videos

TOOL SAFETY:

SAFETY

Do not use power tools under the influence of medication, drugs, or alcohol as this could result in serious injury. Keep hair, clothing, jewelry, and other loose objects away from moving parts. Use the proper safety equipment when operating power tools.

Never modify your tools as this could increase the risk of electric shock or malfunction. Make sure to always ensure proper balance when using power tools. If your tool is damaged stop use immediately.

WORKING AREA

Keep your working area clean and well lit. Cluttered and dark areas can lead to accidents. Do not operate power tools in explosive atmospheres such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite fumes and dust.

CLEANING & MAINTENANCE

Always remove the battery before cleaning. Remove dust and dirt with a slightly damp cloth. Ensure that no water gets into the inner parts of your tools, battery, and charger. Your tool is permanently lubricated and does not require oil.

BATTERY USE & CARE

Only use the PP205 charger to charge your battery. Using the incorrect charger could result in injury or damage to your battery. Do not leave the battery and charger unattended when charging. Once the battery is fully charged, remove it from the charger. Abuse of the tool can lead to battery leakage. Avoid contact with battery fluid. If contact occurs, seek medical help immediately. Never attempt to open the battery for any reason. Do not expose your battery to rain or wet conditions. Do not store your battery in temperatures below 39°F or above 70°F.

OTHER

Do not vacuum materials that are harmful to one's health. Do not use the vacuum on liquids or without a filter. Do not vacuum hot or burning materials.

TECHNICAL DATA:

Battery: 20-Volt Lithium-ion
Battery capacity: 1.5Ah
Run time: 18 minutes
Dust Bin capacity: 600ML
Charge time: < 1 hour

●		Charger has power
●	★	Battery is charging
	●	Battery is fully charged
★	★	Charging fault
★		Charger is outside operating temperature

Indicator lamps			Remaining capacity
Lighted	Off	Blinking	
■ ■ ■ ■	□	▬	75% to 100%
■ ■ ■ □	□	▬	50% to 75%
■ ■ □ □	□	▬	25% to 50%
■ □ □ □	□	▬	0% to 25%
▬ □ □ □	□	▬	Charge the battery