

# PinkPower®

POWERFUL TOOLS FOR POWERFUL WOMEN

## 20-VOLT LITHIUM-ION SANDER KIT



PP204

## Thank you for your purchase!

Ever since we started back in 2011, our mission has been to give YOU the confidence to tackle something new. Whether you're building a deck or just hanging a picture, we'll be there along the way. We stand behind every product, which is why they come with a full 3-year warranty. Our contact information is listed below and you can reach out to us any time. From the entire Pink Power family, we wish you all the best on your next project!

Thank you!

*Michael Wilson*

## Need to get in touch?

Register Your Warranty and sign up for free coupons:  
[Pinkpowerdrill.com/warranty](https://pinkpowerdrill.com/warranty)

## Questions?

📞 Call or Text Us: 813.304.2224

✉️ Email Us: [customerservice@pinkpowerdrill.com](mailto:customerservice@pinkpowerdrill.com)


## Love your items so much that you want to be a Brand Ambassador?

Join the Pink Power Army by sending your request to:  
[affiliate@pinkpowerdrill.com](mailto:affiliate@pinkpowerdrill.com)

## Follow us for discounts and fun!



@shoppinkpower

 [pinkpowerdrill.com/blog](https://pinkpowerdrill.com/blog)



# 20-VOLT LITHIUM-ION SANDER KIT

## FEATURES:

- 1 **Soft-grip Handle**
- 2 **ON/OFF Switch**
- 3 **Hook and Loop Pad**
- 4 **Dust Collection Box**
- 5 **Washable Filter**
- 6 **Battery Pack**



## OPERATING INSTRUCTIONS:

### CHARGING THE BATTERY PACK

Your sander comes with a fast charger. The battery pack for this tool has been shipped in a low charge condition to extend battery life. Remove your charger and plug it into a power source. A red light on the charger will illuminate. Place the battery in the charger and a green light will flash. Do not charge batteries in extreme heat or cold. Make sure to fully charge and discharge the batteries on the first few uses to help the battery reach full charge. Please reference the table on the next page for battery charge status. *(See Table 1)*



### INSERTING AND REMOVING THE BATTERY

Before placing the battery in the sander, make sure the ON/OFF Switch is in the "OFF" position. Slide the battery into the back of the sander until you hear a "Click" noise. To remove the battery, press the button on the front of the battery down and pull the battery directly out of the sander. This will release the battery.



### APPLYING AND REMOVING YOUR ABRASIVE PAPER

Your sander comes with three pieces of sandpaper (P80, P120 and P180). Lower numbers are used for projects like stripping paint from wood. Medium numbers are used for general sanding of bare wood without paint or primer applied. The highest numbers are used for finishing your projects and will give you a smooth surface. Once you choose the correct sandpaper, make sure your tool is switched OFF and place the sandpaper on the Hook and Loop Pad. When you want to change sandpaper, just pull the paper from the Hook and Loop Pad and install a different piece.





## INSTALLING AND EMPTYING THE DUST COLLECTION BOX

To install the Dust Collection Box, press the clips on each side and push into the sander. Make sure your sander is not ON when installing. We recommend you empty your Dust Collection Box when it is about 30% full. To empty, switch your sander off and press the clips on the side and pull the box away from the sander. You can empty the box by tapping lightly. For thorough cleaning, you can remove the Dust Filter on the top and rinse with warm water.



## BATTERY GAUGE

Your battery includes a power gauge on the back of the unit. To check the power of your battery, press the button on the back of the unit. Below is a table showing the power level of your battery. When your LED is flashing, it is time to charge your battery. (See Table 2)



Prefer video tips instead? Go to [Pinkpowerdrill.com/Videos](http://Pinkpowerdrill.com/Videos)

# TOOL SAFETY:

## SAFETY

Do not use power tools under the influence of medication, drugs, or alcohol as this could result in serious injury. Keep hair, clothing, jewelry, and other loose objects away from moving parts. Use the proper safety equipment when operating power tools.

Never modify your tools as this could increase the risk of electric shock or malfunction. Make sure to always ensure proper balance when using power tools. If your tool is damaged stop use immediately.

## WORKING AREA

Keep your working area clean and well lit. Cluttered and dark areas can lead to accidents. Do not operate power tools in explosive atmospheres such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite fumes and dust.

## CLEANING & MAINTENANCE

Always remove the battery before cleaning. Remove dust and dirt with a slightly damp cloth. Ensure that no water gets into the inner parts of your tools, battery, and charger. Your tool is permanently lubricated and does not require oil.

## BATTERY USE & CARE

Only use the PP205 charger to charge your battery. Using the incorrect charger could result in injury or damage to your battery. Do not leave battery and charger unattended when charging. Once the battery is fully charged, remove it from the charger. Abuse of the tool can lead to battery leakage. Avoid contact with battery fluid. If contact occurs, seek medical help immediately. Never attempt to open the battery for any reason. Do not expose your battery to rain or wet conditions. Do not store your battery in temperatures below 39°F or above 70°F.

# TECHNICAL DATA:

**Battery:** 20-Volt Lithium-ion  
**Battery capacity:** 1.5Ah  
**Orbits per minute:** 11,000 OPM  
**Charge time:** < 1 hour  
**Weight (tool and battery):** 2.7lbs

TABLE 1

●		Charger has power
●	★	Battery is charging
	●	Battery is fully charged
★	★	Charging fault
★		Charger is outside operating temperature

TABLE 2

Indicator lamps			Remaining capacity
Lighted	Off	Blinking	
■ ■ ■ ■			75% to 100%
■ ■ ■ □			50% to 75%
■ ■ □ □			25% to 50%
■ □ □ □			0% to 25%
■ □ □ □	■		Charge the battery