





SUPER DUTY 2017+ HEADHLIGHT INSTALLATION

STEP 1

There are 15 pop up tabs that need to be removed so you can remove the dust cover.


Use a pry tool or a small flat head screw driver to pop up the tab. Once the tab is popped up you can remove this piece.

Once you have removed all of your pop up tabs, remove your plastic dust cover.







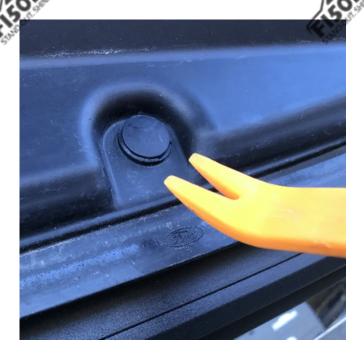




STEP 2

Remove your grille from your truck. To remove your grille, there are 8 size 10MM bolts that need to be removed from the top of the grille.

Once these bolts are removed there are two metal tabs on each side of your grille and metal tabs along the bottom of your grille that are holding your grille in place.

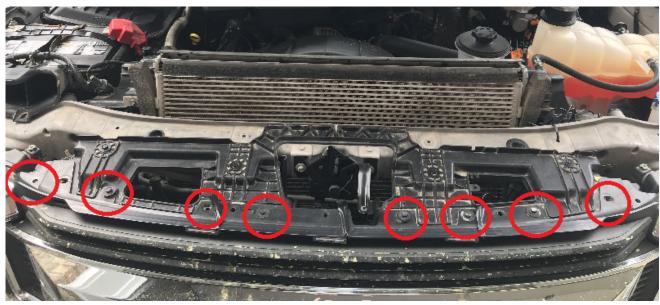

Soleds


isole0°


E ISOLEOS

Once these bolts are removed there are two metal tabs on each side of your grille and metal tabs along the bottom of your grille that are holding your grille in place.

Using force pull your grille away from your truck.

Once your grille is removed, we recommend laying your grille on a blanket or a surface that will not scratch your grille.

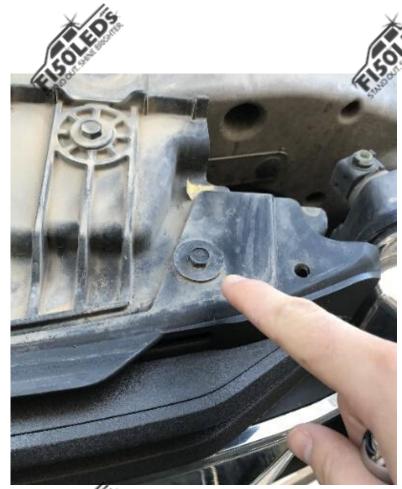

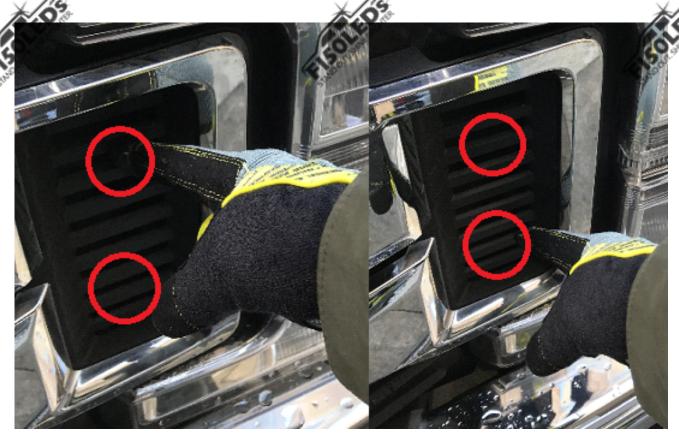


21501±05

e Boltos

RISOLEOS



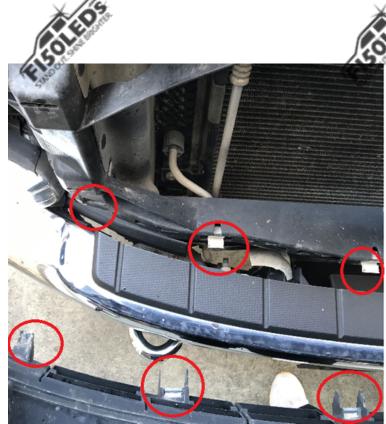

STEP 3

Remove four size 10MM bolts that are securing the headlight assembly to your truck. Two of them are located on the inside of the headlight assembly.

One is located on the top of the headlight assembly.



ELSO LEOS

One is located on the top of the headlight assembly.

One is located under the rubber seal under your headlight assembly.





Once these bolts are removed carefully pull your headlight assembly away from your truck. With some moderate force and some finesse the assembly should come right out.




ELSO LEOS


ELSO LEOS

STEP 4

Removing your headlight bulb from the headlight assembly.

Push down on the plastic tab that is connecting your OEM headlight bulb to the truck's harness and pull away.

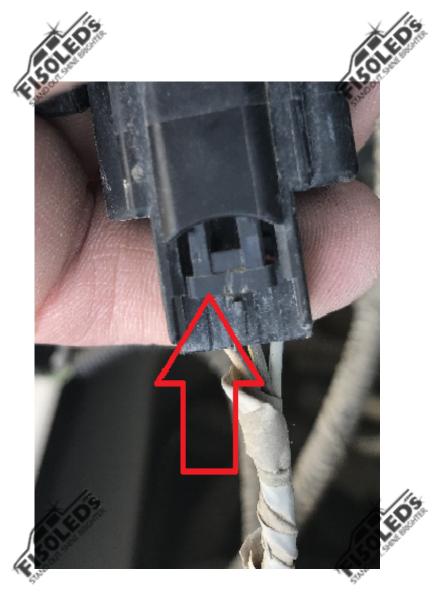

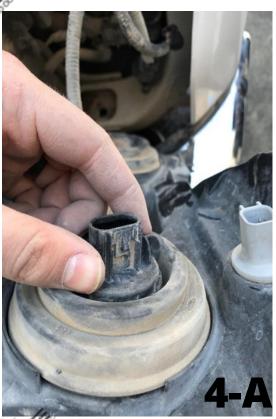


Now that the harness is disconnected from the bulb give the bulb a counterclockwise turn to remove it from your headlight housing.

1501105



Now that your rubber seals are removed, insert your F150LEDs.com
Headlight bulb into your housing with a clockwise turn to lock the bulb into
place.

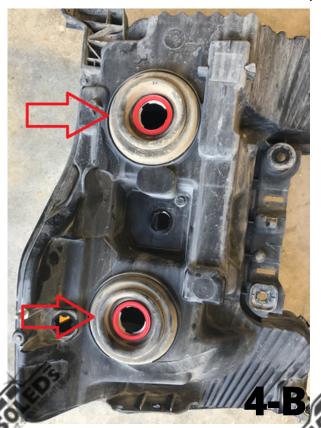



Once your bulbs are installed, slide your rubber seal over your bulb and secure it back into place to seal your headlights.





OLEO

Connect your F150LEDS.com Ballast to your bulb.





Connect your ballast to the headlight plug from your truck.

Now all that there is left to do is reinstall your headlight assembly by reversing the headlight removal steps!

After testing your lights if you need to adjust the beam angle use a size 2 phillips head screwdriver to adjust the screw below.

Counter clockwise will lower the beam and clockwise will raise the beam.



alfolio S



Text for support: 706-214-2618
Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com



