


2019 - 2022 RANGER HEADLIGHT INSTALL GUIDE

STEP 1

Remove the five pop taps shown in the image below

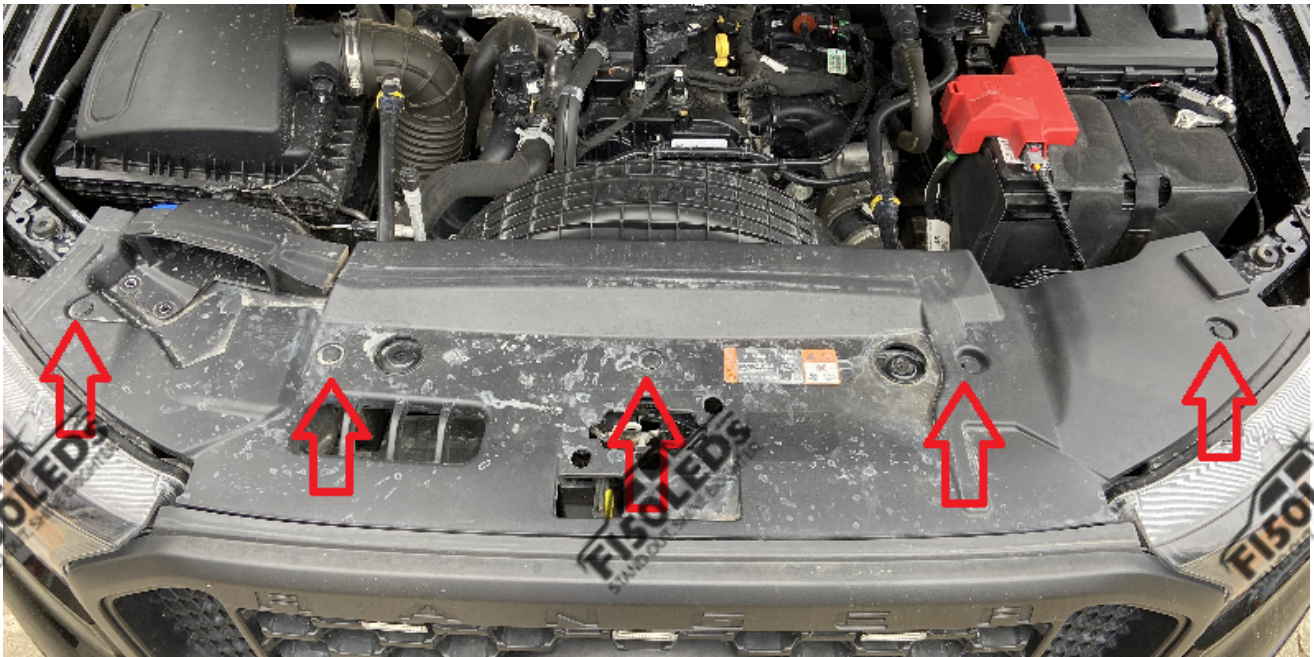


STEP 2

Use a size 30 torx head screw driver to remove the two bolts circled below



STEP 3

Once the pop tabs and bolts are removed, to remove this plastic valance there are a few tabs located at the front of the valance that are connecting the valance to the grille. Pull up on the front of the plastic valance to pop these tabs out and remove the plastic valance.

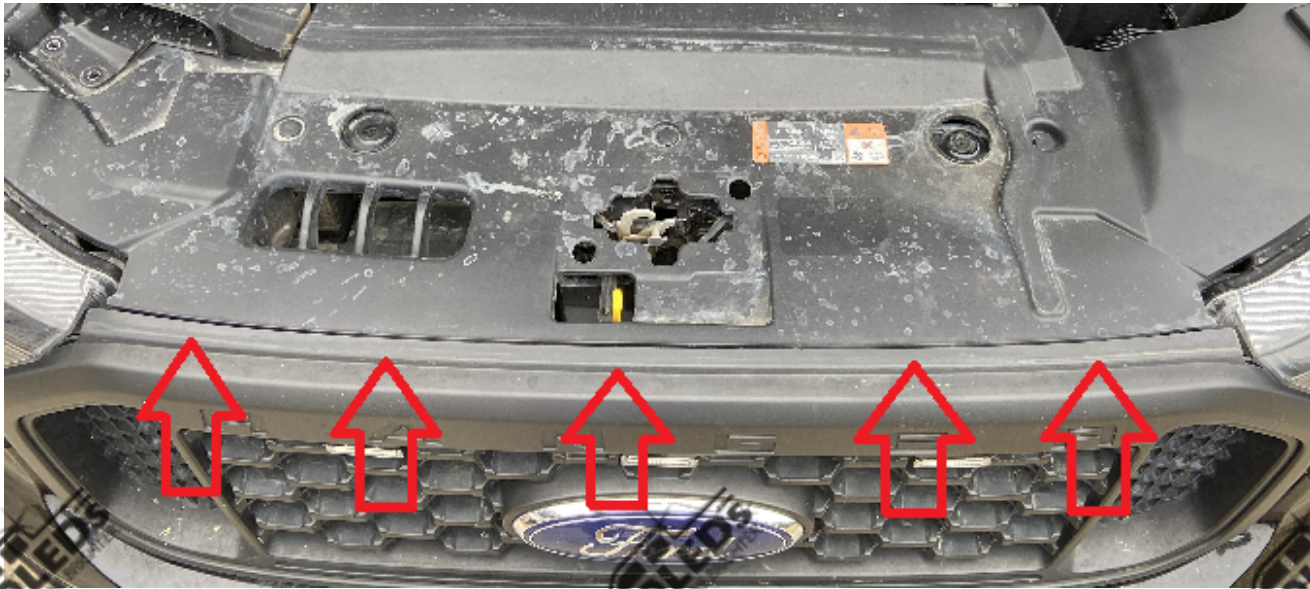

Now that the valance is removed the headlights will be easier to remove by reaching behind the assembly.

STEP 4


To remove the headlight bulbs, first remove the headlight caps using a counterclockwise turn



STEP 5

Disconnect the factory wiring connection from the bulb then turn the bulb counterclockwise.

The low beam bulb is the outside headlight bulb

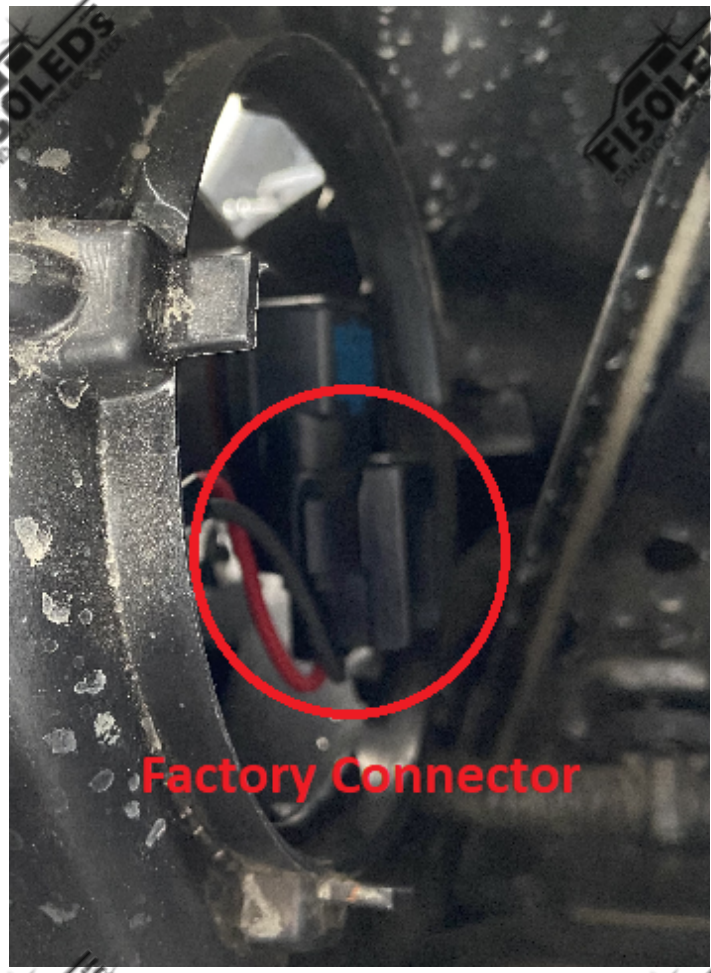


Factory Connector



STEP 6

Once the factory bulb is removed line up the tabs of the MKV F150LEDs headlight bulb and turn it clockwise into place.



It is a tight fit, we recommend looking at the tabs from the front of the assembly to line the tabs up easier.

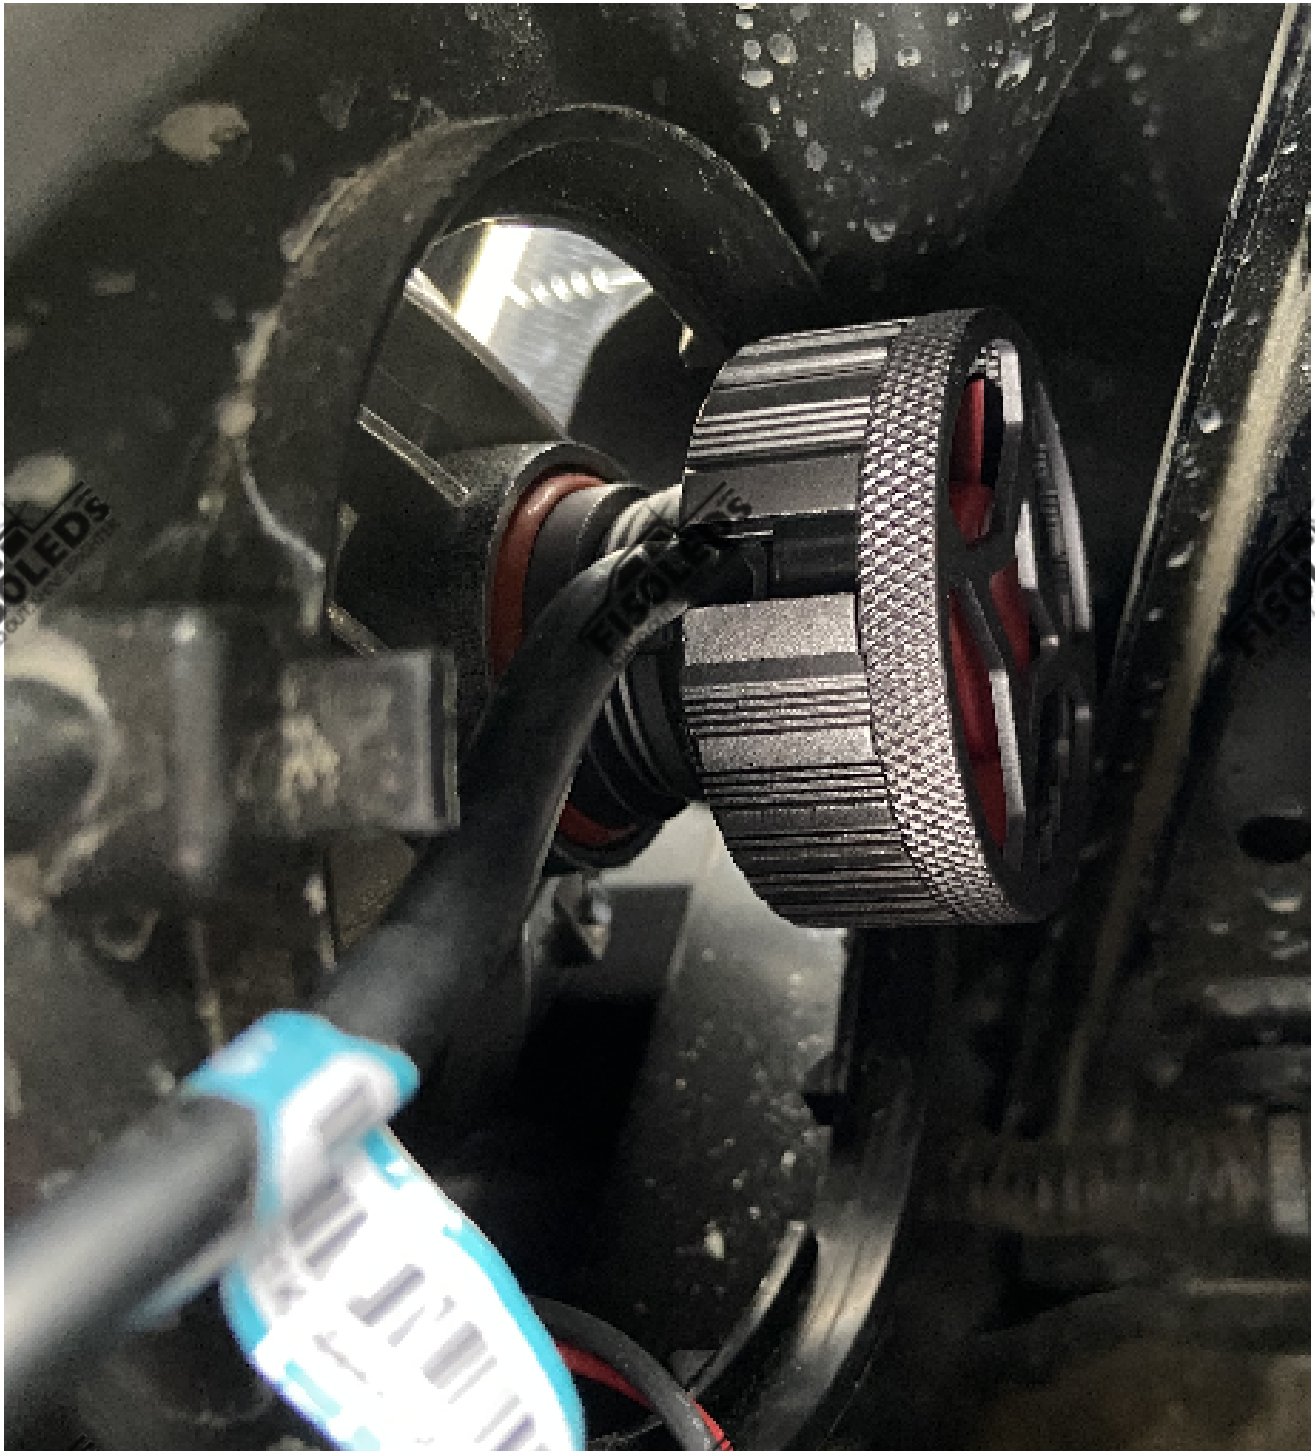



STEP 7


Once the bulb is installed plug the ballast from the kit to the factory headlight connector.

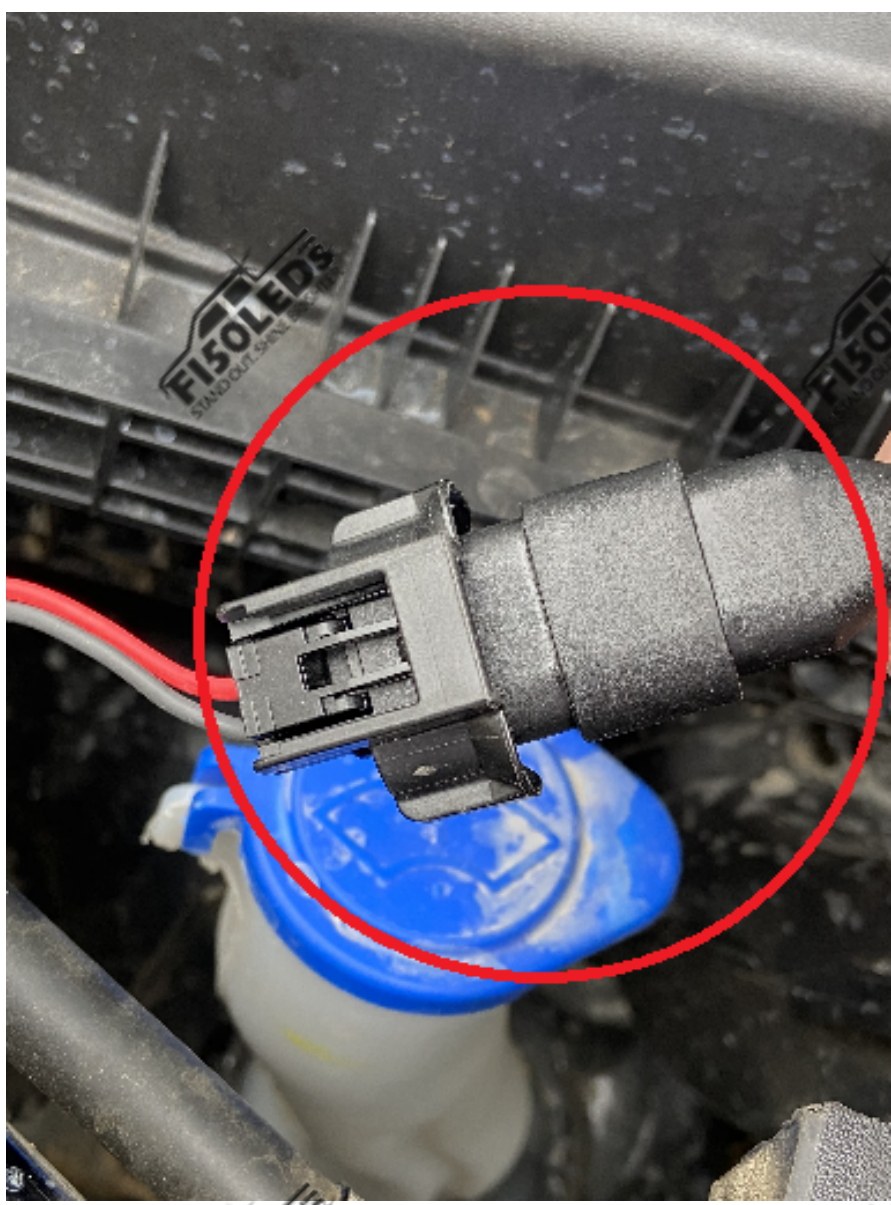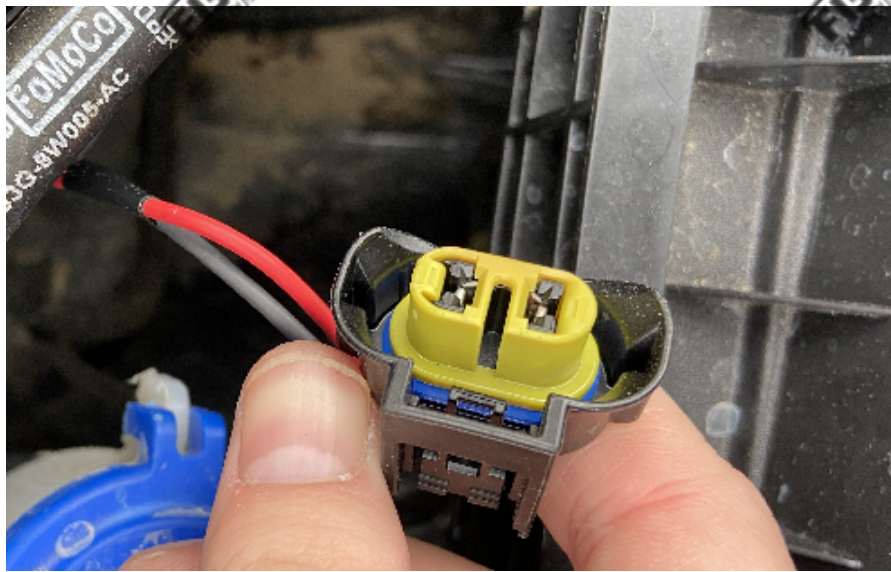

STEP 8

Connect the headlights ballast to the MKV headlight then you can leave the ballast hanging behind the assembly or you can tuck it into the opening for the headlight bulb.



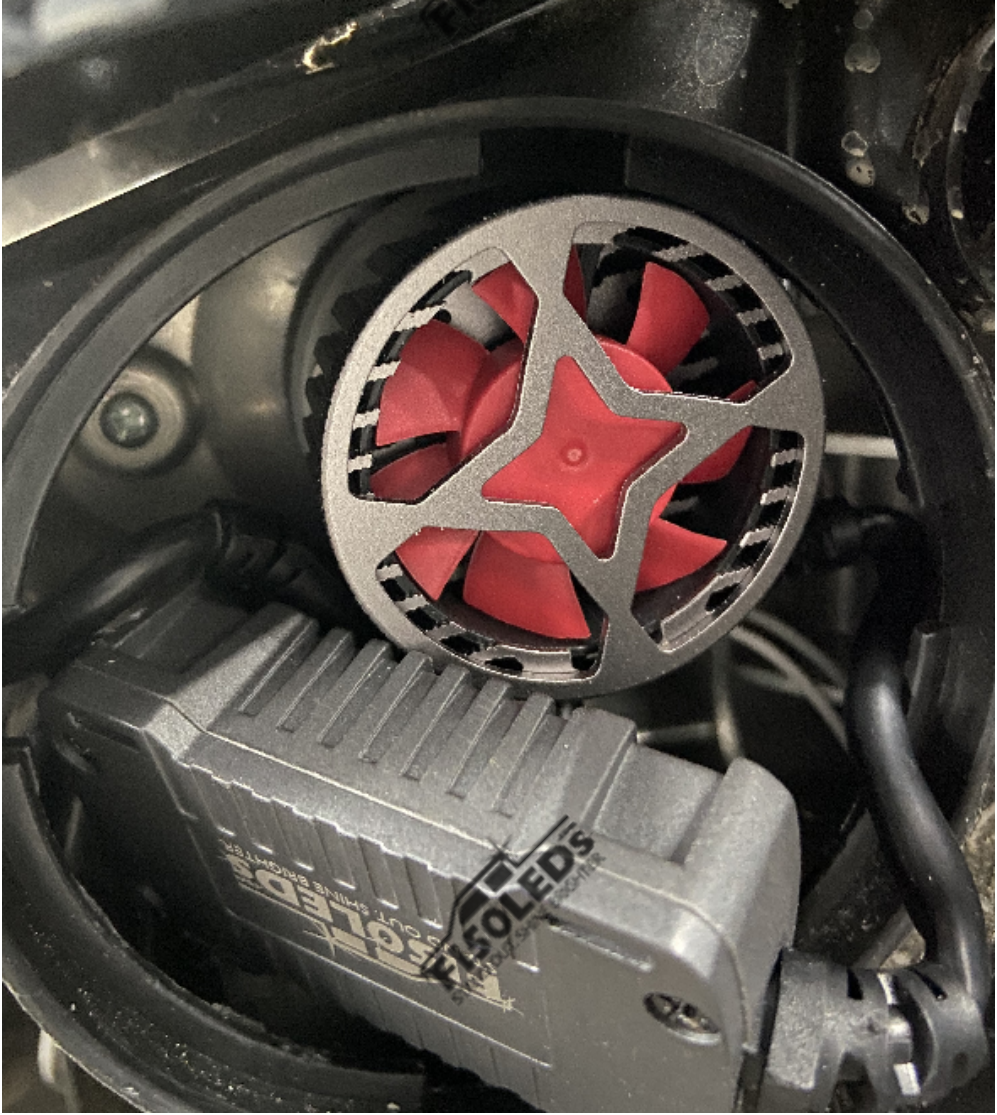

STEP 9

Repeat the same steps for the High beam bulb.



Text for support: 706-214-2618
Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

