

MKIII SUPER DUTY TAIL LIGHT

STEP 1

Be sure that there is no power going to your taillights.

Remove two size 8mm bolts from your truck.





There are two tabs located at the top and bottom of the side of your housing.

Pull away from the side of your truck with moderate force with moderate force to release these tabs



STEP 2

Remove your tail light socket from the housing using a counterclockwise turn



STEP 3

carefully remove the OEM glass bulb by pulling away from the base of the bulb.

****Make sure this bulb is not hot when removing the bulb****



STEP 4

Insert your F150LEDs.com tail light bulb. Place the longer bulb in the top hole of the housing and the shorter bulb in the bottom hole of the housing.

Test your bulb, if the bulb does not light then remove the bulb and rotate it 180 degrees.

****It is ok to experience hyper-flashing at this point as we are just testing to make sure that the bulb lights up. ****



Reinsert the bulbs back into the housing using a clockwise turn to lock it into place.




STEP 5

Use your provided screws to mount the included resistors to the metal surface behind the housing.

You may need to drill a pilot hole using a 3/16 size drill bit so that the screws will mount easier.

****As you are about to drill your hole make sure you are not about to drill into your bed area. ****



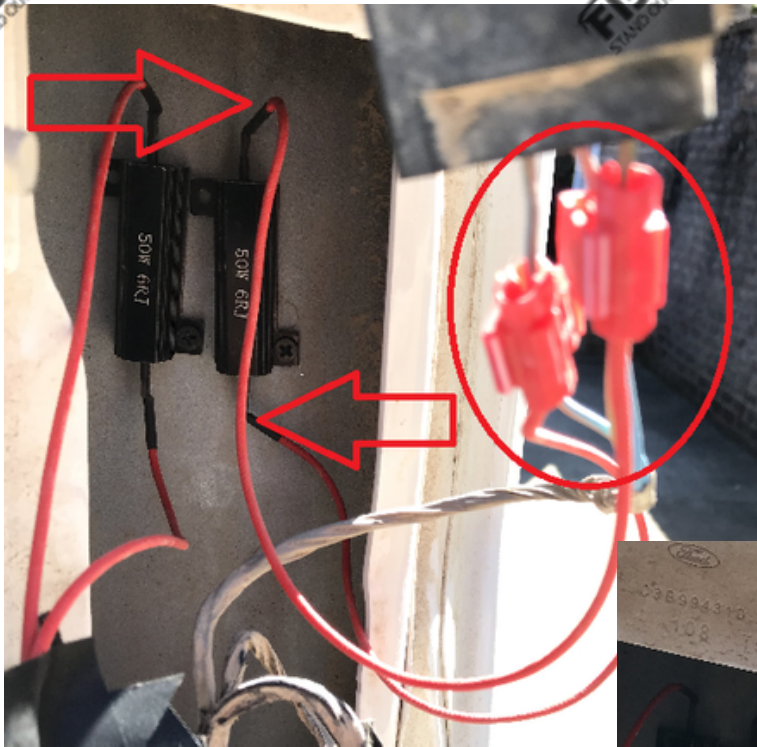

Using the provided splice connectors, splice each wire from one resistor to the two outside wires of your top taillight bulb.

Splice the other resistor wire to the two outside wires to your bottom taillight bulb.

Reinstall your tail light assembly.



Text for support: 706-214-2618

Visit our site to chat: www.F150LEDs.com
or email CustomerSupport@F150LEDs.com

