

KOVEAUDIO.COM



COMMUTER

**PORTABLE BLUETOOTH SPEAKER
WITH X-BASS SUB-WOOFER**

COMMUTER

PORTABLE BLUETOOTH SPEAKER
WITH X-BASS SUB-WOOFER

The Kove Commuter Portable Wireless Bluetooth Speaker packs a lot of sound in a compact package. A single charge of the 4000mAH battery gets you up to 8 hours of superior sound quality thanks to the powerful X-bass subwoofer - yes, a subwoofer in a portable speaker! Connect to your computer or mobile device via Bluetooth 4.1 and feel free to walk up to 30 feet away without interrupting your music.

Before using your Commuter, please read this manual and keep it for future reference.

BLUETOOTH CONNECTION

Turn the Commuter on by pressing and holding the power for several seconds, the blue LED light will pulse quickly, letting you know that the speaker is now entered Bluetooth pairing mode.

CONNECT TO MOBILE PHONES/TABLET PCS/COMPUTERS

1. Activate your phone's Bluetooth.
2. Go to your phone's Bluetooth settings and scan for a new Bluetooth device.
3. Once the device is found (Commuter), click the device name and pair with it.
4. If your phone ask for a pairing code, please enter "0000" and confirm it.
5. After the pairing is successful, the speaker will make a prompting sound and the LED light will turn solid blue.

BLUETOOTH SPECIFICATIONS

- Pairing time varies with different devices. The Commuter only needs to be paired for the first use and will auto connect to devices which have already been paired from then on (only the last 8 paired device names)
- In Bluetooth mode, when the 3.5mm audio plug is inserted, the speaker will switch to line in status automatically;
- Bluetooth Compatibility: It is compatible with Bluetooth 4.2 Class II and supports A2DP V1.2, AVRCP V1.4 profiles agreement.
- Transmission distance: up to 10 m

AUX AUDIO-IN CONNECTOR

The Commuter also features an AUX audio in port. Connect the speaker with your to any audio device with the 3.5mm jack audio cable. Once the orange light shows, you will be able to play music through the wired connection.

LOW POWER INDICATION

The Commuter will beep to indicate low battery (10%). The indicator light will also pulse orange or red. Charge the speaker as soon as possible.

CHARGING

Connect the micro USB charging cable to a computer or USB charger. You will see a red LED light indicating that the device is charging. The light will turn green when charging is complete, after approximately 4 to 5 hours of charging.


NFC FUNCTION

The Commuter is equipped with an NFC chip. Activate the NFC Chip using on your phone and position the phone close to the NFC position on the speaker. Follow the instructions on your phone to quickly connect with the Commuter via the NFC function.

Notes:

- Turn off the speaker when not in use to conserve battery power.
- Don't try to disassemble the speaker as it may get damaged if you are not professional.
- Don't use intensive chemical products or detergent to clean the speaker.
- Don't scratch the surface with sharp tips.


YOUR COMMUTER

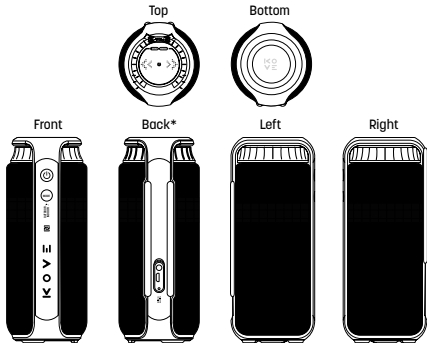

**FOR BEST SOUND QUALITY, LAY THE SPEAKER ON IT'S BACK
TO EXPOSE THE SUBWOOFER.**




 Slide Next / Previous



USB Charging

 
LINE IN



Mode Change Button
(OUTDOOR / INDOOR)



 


 


Power ON/OFF

Play / Pause &
Calls Handsfree



Rotary Volume +/-



Power ON / OFF	Press  for 2 seconds to power on / off.
Volume - or +	 Turn clockwise to turn up the Volume and counterclockwise to turn the Volume down.
Next / Previous	In Bluetooth mode, slide to the right to get to the next track and to the left to get to the previous track  •  .
Play / Pause	When playing music, press  quickly to Pause / Play.
Answering a call	When a call comes in, press  quickly to pick up the call and press it again to hang up.
Refusing a call	When a call comes in, quickly double tap  to refuse the call.
EQ mode	Press  to select the mode to OUTDOOR or INDOOR, the icon will illuminate accordingly.
Working Temp.	Temperature: 0° C - 40° C Humidity: 0% - 85% RH
Storage Temp	Temperature: -30° C - 60° C Humidity: 0% -90% RH

SPECIFICATIONS

- Sound track: dual track
- Water Resistant: IPX4
- Signal to noise ratio S / N: ≥ 80 dB
- Frequency Range: 68Hz-20KHz
- Distortion THD: $\leq 1\%$
- Speaker unit: outer diameter 45mm, inner magnet, 4 Ω , 12W x 2
- Audio input connector: 3.5mm
- AUX cable: supports external audio input.
- Charging interface: Micro USB; Input 5V

POWER

- Battery: built-in lithium battery, 4000mAh
- Charging Voltage / Current: ± 0.25 V / 1.5A
- Charging time: 4-5 hours
- Playing time: 6-8 hours

ACCESSORIES

- 1x Commuter Portable Speaker
- 1x User Manual
- 1x USB Charging Cable
- 1x AUX 3.5mm Audio Cable



FREQUENTLY ASKED QUESTIONS

MY MOBILE PHONE CAN'T FIND ANY NEW BLUETOOTH DEVICES.

Make sure the Bluetooth speaker has entered pairing mode; and that the speaker is within the effective working range of your phone.

BLUETOOTH DEVICES CAN'T PAIR UP.

Make sure your mobile phone allows a new connection and has not reached the maximum amount of connections allowed—please refer to your bluetooth device's user manual for more information

MY COMMUTER DOES NOT PLAY MUSIC OR ANSWER CALLS WHEN IT'S CONNECTED TO A BLUETOOTH MOBILE PHONE.

Make sure your Bluetooth mobile phone supports A2DP and HSP (hands-free) profile; and ensure that your Bluetooth cell phone is within its effective working range.

WHEN PAIRED WITH MY COMPUTER, WINDOWS ASK FOR NEW DRIVER. DO YOU PROVIDE THIS?

We do not. The Bluetooth A2DP/HSP drivers may require playing stereo sound via Bluetooth Connection, but the driver is actually needed for the Bluetooth module on your PC, instead of the speaker. Different Bluetooth modules may require different drivers. Please contact your PC or Bluetooth module's manufacturer for a driver update.

MY CONNECTION IS NOT STABLE, IT CUTS IN AND OUT, OR THERE IS A LOT OF WHITE NOISE.

Check for nearby radio or wifi interference, also check to see that there are no objects between your Commuter and Bluetooth device that would impede the signal.

WHY CAN'T I REMOTELY CONTROL THE PAUSE, PLAY, PREVIOUS SONG AND SKIP TRACK FUNCTIONS WITH THE SPEAKER WHEN PLAYING MUSIC?

When you are using 3.5mm AUX audio in connection, you can't pause, change volume or skip tracks with the buttons on the speaker; This feature needs the Bluetooth devices paired with the speaker to support AVRCP (Audio/Video Remote Control Profile). Please make sure your Bluetooth device supports AVRCP.

I'VE CONNECTED MY DEVICE, BUT I'M NOT HEARING SOUND.

Make certain that the volume is up on both the commuter and your device. Some smart phones require you to setup the Commuter as an audio output device before sound is transmitted. Please see the pairing instructions on your smart phone for details. If you are using a music player or other Bluetooth device, please make sure it supports an A2DP/HSF stereo music profile.

THERE ARE A LOT OF LIGHTS ON MY COMMUTER. WHAT DO THEY ALL MEAN?

Solid Green / Blue	Your Commuter is fully charged
Flashing Red / Orange	This is the low battery indicator. Your Commuter only has 10% battery left, time to plug in.
Pulsing Blue	Your Commuter is in Bluetooth Pairing Mode.
Solid Orange	Your commuter is plugged into an audio source through the auxillary port.
Solid Red	The Commuter is Charging.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept and interference received including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

KOVEAUDIO.COM

RoHS   

FCC ID: 2AKAX-COMMUTER01

MADE IN CHINA