SIGNATURE SERIES

INSTALLATION AND CARE GUIDE

63" TALL FREE WALL CABINET E027046

Designed By: DANELONMERONI | UK

PRE-INSTALLATION

Tools Required



Materials Included

1 set of wall cleats

8 long screws

Materials Required

8 anchors

FREE 63" Tall Wall Cabinet

Model: E027046


Designed By: DANELONMERONI | UK

INSTALLATION


Step 1: Determine the ideal location of your new wall cabinet.

Mark the location of the pilot holes for the top wall cleat.

Make sure the pilot holes are level.

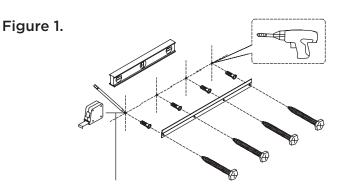

30-3/4"(78.2cm)

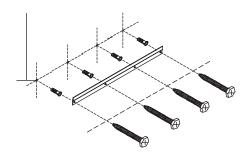

Step 2: Measure 30-3/4" (78.2cm) from each pilot hole down and mark the location of the pilot holes for the bottom wall cleat.

Make sure the pilot holes are level.


Step 3: Secure each wall cleat to the wall with the screws provided.

See Figure 1.

Step 4: Secure the cleat in the back of the cabinet to the wall cleat.

Check if the wall cabinet is level.

See Figure 2.

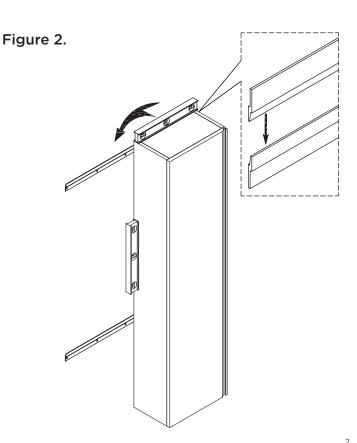

Designed By: DANELONMERONI | UK

Bracket

REVERSE DOOR OPENING FOR INVERTED INSTALLATION

Figure 3.

Hook

Step 1: Unhinge the door by popping off the hinge from the base of the cabinet.


See Figure 3.

Step 2: Unscrew the hinge plate from the base of the cabinet.

Measure the distances of the existing screw holes and copy that to the oppposite side.

- **Step 3:** Install the hinge plate.
- **Step 4:** Install the door to the base of the cabinet. Push the hinge until you hear a click to lock the hinge into place.

See Figure 4.

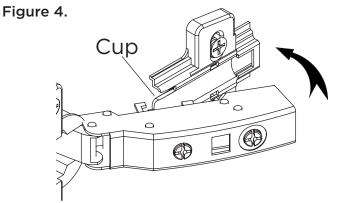

•

Designed By: DANELONMERONI | UK

REMOVE GLASS SHELVES


Step 1: Unhinge the door by popping off the hinge from the base of the cabinet.

See page 3.

Step 2: Unscrew the shelf clip from the under-side.

Remove the glass shelves.

See Figure 5.

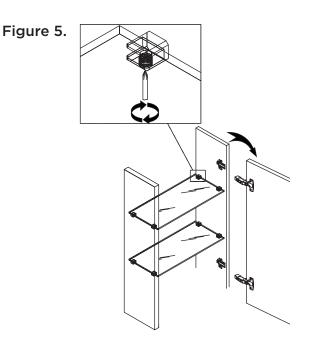


Designed By: DANELONMERONI | UK

ADJUST DOOR HINGE

Side to Side

Locate the screw nearest the hinge cup and rotate clockwise or counterclockwise to move the door from side to side.

See Figure 6.

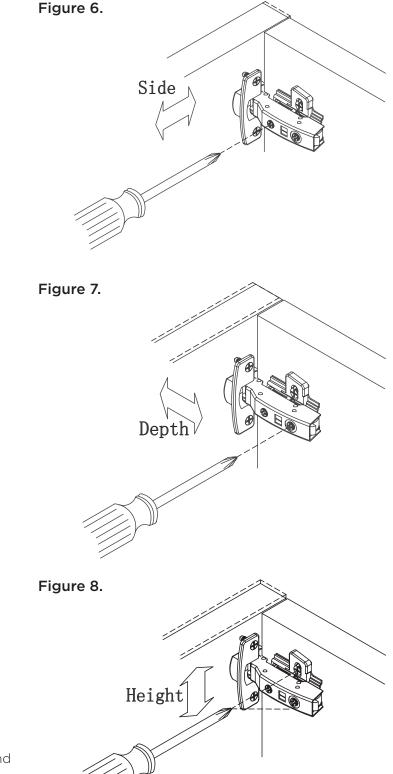

Front to Back

Locate the screw furthest away from the hinge cup and turn the screw clockwise or counter-clockwise to move the door from front to back.

See Figure 7.

Top to Bottom

Locate the screw pictured in Figure 6. Turn the screw clockwise or counterclockwise to move the door from top to bottom.

See Figure 8.

NOTE: When adjusting the door hinges keep in mind to adjust the other hinges.

Designed By: DANELONMERONI | UK

PRODUCT CARE AND MAINTENANCE

The fine furniture finish of your new vanity, mirror or other bathroom accessories are designed to protect against normal home use. With proper care, your product will provide years of use and beauty in your home.

General Care Tips

- Test cleaning product on small, discrete area prior to applying to entire surface.
- Wipe surfaces frequently with dry, soft, non-abrasive and lint-free towel.
- Do not allow liquids and moisture to accumulate on the surface of products.
- For warranty information, please visit our website at www.ronbow.com or contact the Customer Service Department at (510) 713-1188.

Wood Surfaces

- If a spill occurs, clean and dry the surface immediately as liquid can soak through the surface and cause greater damage.
- Do not place in direct sunlight. Exposure to sunlight may affect the appearance of your vanity, and the finish will eventually crack.
- Keep away from direct sources of extreme temperatures as heat, cold or moisture from humidity. Color changes, or blemishes in the wood can occur if recommended care of is not met. Try to avoid these extremes.
- Most wood surfaces can be cleaned, or dusted, with any commercial wood cleaning product. For general cleaning, use a non-abrasive, or lint-free cloth while dusting along the wood grain to preserve the wood's chacteristics.

Recommended Products

- Pledge Orange Oil, or similar
- Orange-Glo Wood Cleaner

DISCLAIMERS: Wood naturally ages, darkens and changes color over time due to several environmental conditions that may cause materials to vary from their original color and/or to warp, split or crack. These variations are considered to be the nature of the material in relation to their environmental exposure and may be significant over a long period of time. The effectiveness of cleaning Ronbow product is dependant on various factors that include sunlight, smoke, moisture, household cleaners and/or amount of cleaning product used over time. Ronbow cannot guarantee that the above Product Care & Maintenance methods will effectively clean your product.



40650 Encyclopedia Circle Fremont, CA 94538 T 510.713.1188 F 510.657.9388