



Installation Instructions: MaxG NA and NB Miata Water Pump Pulley

Contact information:


Office: 830-438-2890
Toll Free: 844-562-9467
Email: info@maxgms.com
Website: maxgms.com




Installation

A clean engine is a lot easier to work on and belts do not like grease; we recommend cleaning the engine before starting work.

- 1) For easier access to the pulley remove the intake air duct.
- 2) Leave the belt tight and loosen the three (3) bolts holding the pulley to the pump.
- 3) Loosen the belt tension on the power steering pump. Remove the power steering belt.
- 4) Loosen the tension on the alternator and water pump belt. Remove the belt.

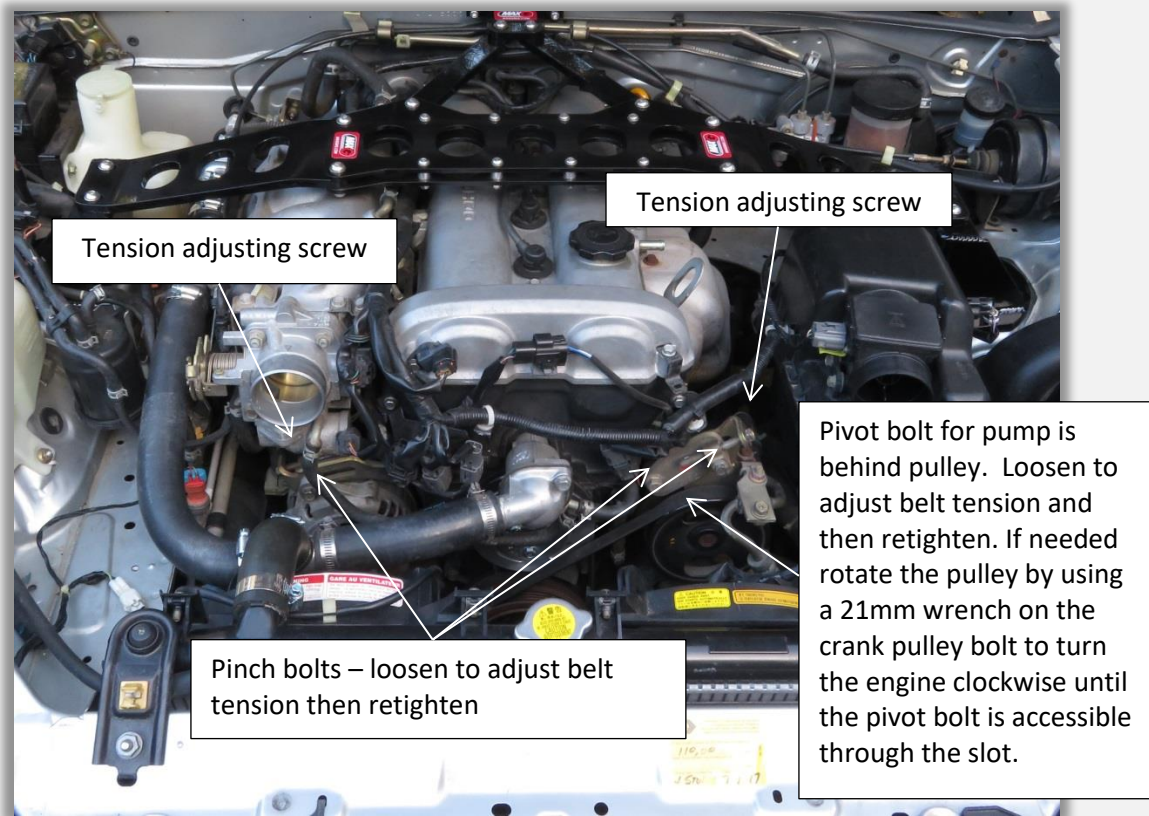

- 5) Remove the three (3) bolts holding the pulley.
- 6) Replace the pulley and finger tighten the bolts.
- 7) Replace the belt onto the pulley. Tension the belt.

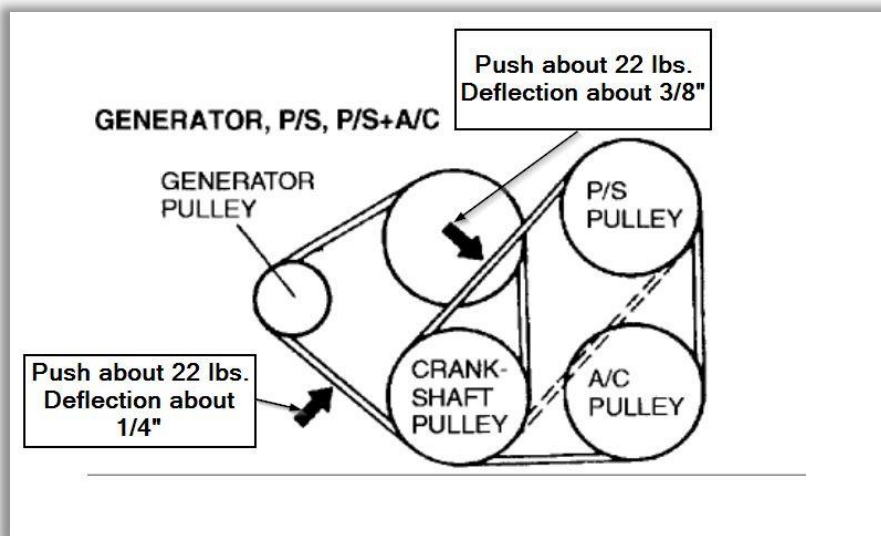

- 8) Finish tightening the three (3) pulley bolts. Torque to 70-80 inch-lbs
- 9) Reinstall and tension the power steering pump belt.
- 10) Reinstall the intake air duct.
- 11) Drive about 50 miles and recheck the belt tension and pulley bolt torque.

If you have any questions or comments, please feel free to contact us.

Thank you for your business!