



AK2000S Camera Compatibility List (Wi-Fi Control)

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark	
Sony	α9	Wi-Fi	✓	✓	✗	✓	✗	✓	✗	✗	✗	6.0	sony_v104_bin		
	α7 III (A7M3)	Wi-Fi	✓	✓	✗	✓	✗	✓	✗	✗	✓		sony_v104_bin		
	α7R III	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✗	3.01	sony_v104_bin		
	α7 II (A7M2)	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	4.00	sony_v104_bin		
	α7S II	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✓	2.00	sony_v104_bin		
	α7R II	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	4.00	sony_v104_bin		
	A7s	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗		sony_v104_bin		
	A7r	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	2.00	sony_v104_bin		
	α7	Wi-Fi	✓	✗	✗	✗	✓	✗	✗	✗	✗	✓		sony_v104_bin	
	RX100 IV (RX100M4)	Wi-Fi	✓	✓	✗	✓	✓	✓	✓	✗	✗	✓	1.0.0	sony_v104_bin	
	RX100 V (RX100M5)	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	✓	1.0.2	sony_v104_bin	
	RX100 VI (RX100M6)	Wi-Fi	✓	✓	✗	✓	✓	✓	✓	✗	✗	✓		sony_v104_bin	
	α5100	Wi-Fi	✓	✓	✓	✗	✓	✗	✗	✗	✗	✓		sony_v104_bin	
	α6000	Wi-Fi	✓	✗	✗	✗	✓	✗	✗	✗	✗	✓		sony_v104_bin	
	α6500	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	✓	2.00	sony_v104_bin	
α6400	Wi-Fi	✓	✓	✗	✓	✓	✓	✓	✗	✗	✓	1.0	sony_v104_bin		
α6300	Wi-Fi	✓	✓	✗	✓	✓	✓	✓	✗	✗	✓	2.00	sony_v104_bin		
α6100	Wi-Fi	✓	✓	✗	✓	✓	✓	✓	✗	✗	✓	1.0	sony_v106_bin		

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark	
Canon	EOS M50	Wi-Fi	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.0.0	canon_v104_bin		
	EOS R	Wi-Fi	✓	✓	✓	✓	✓	✗	✗	✗	✗	1.0.0	canon_v104_bin		
	EOS M6 Mark II	Wi-Fi	✓	✓	✓	✓	✓	✗	✗	✗	✗	1.0.0	canon_v105_bin		
	EOS RP	Wi-Fi	✓	✓	✓	✓	✗	✗	✗	✗	✗	1.3.0	canon_v105_bin		
	EOS 200D II (250D)	Wi-Fi	✓	✓	✓	✓	✓	✗	✗	✗	✗	1.0.0	canon_v106_bin		
	EOS 90D	Wi-Fi	✓	✓	✓	✓	✓	✗	✗	✗	✗	1.0.0	canon_v106_bin	Connecting Step: Camera:WiFi Setup—Camera Control API—Connecting	
	Powershot G7 X Mark III	Wi-Fi	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.0.1	canon_v105_bin		
	EOS 80D	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✓	✓			canon_v106_bin	
	EOS 6D Mark II	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✓	✗	1.1.1	canon_v106_bin	Connecting Step: Camera:WiFi Setup—Camera Control API—Connecting	
	EOS 6D	Wi-Fi	✓	✗	✗	✓	✓	✓	✗	✗	✗	1.1.8	canon_v106_bin		
	EOS 200D	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗			canon_v106_bin	
	EOS 5D Mark IV	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗			canon_v106_bin	
	EOS 70D	Wi-Fi	✓	✗	✗	✓	✓	✓	✗	✗	✗	1.1.1	canon_v106_bin		
EOS 77D	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.0.2	canon_v106_bin			

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark	
Panasonic	DMC-GH4GK	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✗	2.7	panasonic_v104_bin		
	DC-GF9AGK	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✓		panasonic_v104_bin		
	DC-GF9K GK	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	panasonic_v104_bin		
	DC-GF10K GK	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✓	✗		panasonic_v104_bin		
	DC-GH5SGK-K	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.2	panasonic_v104_bin	
		Wi-Fi	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	panasonic_v104_bin	
	DC-GX9K GK-K	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗		panasonic_v104_bin	
	DMC-GX85GK (Mmode)	Wi-Fi	✓	✓	✓	✓	✗	✓	✓	✗	✓	✗	1.2	panasonic_v104_bin	
	DMC-GX85GK (S, A, P mode)	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.2	panasonic_v104_bin	
	DC-GH5 (M, S, A, P mode)	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	2.3	panasonic_v104_bin	

Notice:
1. "✓" Means Support this function. "✗" Means Do not Support;



AK2000S Camera Compatibility (Cable Control)

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark
	RX100 III (RX100M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V102	
	RX100 IV (RX100M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.30	HUB_V102	
	RX100M5A	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V102	
	RX100 VI (RX100M6)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V102	
	RX100 VII (RX100M7)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	HUB_V102	
	ZV-1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V102	
	DSC-WX500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V102	
	DSC-HX90	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V102	
	DSC-RX10 III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	HUB_V102	
DSC-RX10 IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	HUB_V102		
ZV-E10	USB 2.0 to Type-C (C01)	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.0	HUB_V107	1. Please set the [Ctrl w/ Smartphone] to be off. Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. Please set [Auto Review] to be "Off" when shooting the timelapse video. 5. After connecting the cable, be sure to power on the GOMAX before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 7. When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark
Sony	a6100	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	1.00	HUB_V102	1. After connecting the cable, be sure to power on the AK2000S before the camera. 2. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video. 4. Support Switch Photo/ Video Mode in P. A. S. M. AUTO Mode.
	a6300	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	2.00	HUB_V102	
	a6400	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	1.00	HUB_V102	
	a6500	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	2.00	HUB_V102	
	a6600	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	2.00	HUB_V102	
	A7S	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	3.20	HUB_V102	
	a7S II	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	2.00	HUB_V102	
	A7R	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	2.00	HUB_V102	
	a7R II	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	4.00	HUB_V102	
	a7R III	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	3.01	HUB_V102	
	a7R IV	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	1.00	HUB_V107	
	a7R M4A	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	1.00	HUB_V102	
	a7 III (A7M2)	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	4.00	HUB_V102	
	a7 III (A7M3)	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	3.1	HUB_V102	
a9	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	6.00	HUB_V102		
a9 II	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	3.00	HUB_V102		
A7C	USB 2.0 to Type-C (C01)	✓	✓	✓	×	×	×	✓	×	×	1.0	HUB_V106	1. After connecting the cable, be sure to power on the AK2000S before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5. Please set [Auto Review] to be "Off" when shooting the timelapse video. 6. Support Switch Photo/ Video Mode in P. A. S. M. AUTO Mode.	
a1	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	1.01	HUB_V106	1. After connecting the cable, be sure to power on the AK2000S before the camera.	
a7S III	USB 2.0 to Type-C (C01)	✓	✓	✓	×	×	×	✓	×	×	1.01	HUB_V109	1. After connecting the cable, be sure to power on the AK2000S before the camera. 2. Support Optical Zoom when equipped with a Motorize Lens: Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video. 4. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 5. Support Switch Photo/ Video Mode in P. A. S. M. AUTO Mode.	
FX3	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	1.01	HUB_V109	1. After connecting the cable, be sure to power on the gimbal before the camera. 2. Operate digital zoom the camera's digital zoom function needs to be turned on.	
a7 IV (A7M4)	Type-C to Multi	✓	✓	✓	×	×	×	✓	×	✓	1.00	HUB_V109	1. After connecting the cable, be sure to power on the AK2000S before the camera. 2. Operate digital zoom the camera's digital zoom function needs to be turned on.	
Canon	EOS M50	USB 2.0 to Micro (A01)	✓	✓	×	×	×	×	✓	×	×	1.0.0	HUB_V104	1. AK2000S can switch to video mode from P.A.M shooting mode, but need to switch to video mode from photo mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS M50 Mark II	USB 2.0 to Micro (A01)	✓	✓	×	×	×	×	✓	×	×	1.00	HUB_V104	1. AK2000S can switch to video mode from P.A.M shooting mode, but need to switch to video mode from photo mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS M6 Mark II	USB 2.0 to Type-C (C01)	✓	✓	×	×	×	×	✓	×	×	1.0.0	HUB_V104	1. AK2000S can switch to video mode from P.A.M shooting mode, but need to switch to video mode from photo mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	Powershot G7 X Mark III	USB 2.0 to Type-C (C01)	✓	✓	×	×	×	×	✓	×	×	1.0.1	HUB_V104	1. Be sure camera Wi-Fi is off before connecting the cable 2. AK2000S can switch to video mode from P.A.M shooting mode, but need to switch to video mode from photo mode on camera manually. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS 200D II (250D)	USB 2.0 to Micro (A01)	✓	✓	×	×	×	×	✓	×	×	1.0.0	HUB_V104	1. Please switch photo / video mode on camera manually. 2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 850D	USB 2.0 to Micro (A01)	✓	✓	×	×	×	×	✓	×	×	1.0.0	HUB_V109	1. Please switch photo / video mode on camera manually. 2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 80D	USB 2.0 to Mini (B01)	✓	✓	×	×	×	×	✓	×	×	1.0.2	HUB_V104	1. Please switch photo / video mode on camera manually. 2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 90D	USB 2.0 to Micro (A01)	✓	✓	×	×	×	×	✓	×	×	1.0.0	HUB_V104	1. Please switch photo / video mode on camera manually. 2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 6D	USB 2.0 to Mini (B01)	✓	✓	×	×	×	×	✓	×	×	1.1.1	HUB_V104	1. Please switch photo / video mode on camera manually. 2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 6D Mark II	USB 2.0 to Mini (B01)	✓	✓	×	×	×	×	✓	×	×	1.1.8	HUB_V104	1. Please switch photo / video mode on camera manually. 2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 5D Mark III	USB 2.0 to Mini (B01)	✓	✓	×	×	×	×	✓	×	×	1.3.5	HUB_V104	1. Please switch photo / video mode on camera manually. 2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 5D Mark IV	USB2.0 to Micro (A01)	✓	✓	×	×	×	×	✓	×	×	1.1.2	HUB_V104	1. Please switch photo / video mode on camera manually. 2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS 5DS R	USB2.0 to Micro (A01)	✓	✓	×	×	×	×	✓	×	×	V1.1.1	HUB_V109	1. After connecting the cable, be sure to power on the AK2000S before the camera and wait for about 5 seconds for successfully connection after camera power on, the camera icon on the gimbal screen will light up. 2. When the camera is in photo mode and the gimbal switches to video mode, some keys of the camera will not respond to commands.
	EOS RP	USB 2.0 to Type-C (C01)	✓	✓	×	×	×	×	✓	×	×	1.3.0	HUB_V104	1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS R	USB 2.0 to Type-C (C01)	✓	✓	×	×	×	×	✓	×	×	1.0.0	HUB_V104	1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS R5	USB 2.0 to Type-C (C01)	✓	✓	×	×	×	×	✓	×	×	1.1.1	HUB_V104	1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS R6	USB 2.0 to Type-C (C01)	✓	✓	×	×	×	×	✓	×	×	1.1.1	HUB_V104	1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS R7	USB 2.0 to Type-C (C01)	✓	✓	×	×	×	×	✓	×	×	1.0.1	HUB_V109	Please switch photo / video mode on camera manually.
	EOS R10	USB 2.0 to Type-C (C01)	✓	✓	×	×	×	×	✓	×	×	1.0.1	HUB_V109	Please switch photo / video mode on camera manually.
EOS R8	USB 2.0 to Type-C (C01)	✓	✓	×	×	×	×	✓	×	×	1.0.0	HUB_V109	Please switch photo / video mode on camera manually.	
EOS R50	USB 2.0 to Type-C (C01)	✓	✓	×	×	×	×	✓	×	×	1.0.0	HUB_V109	1. Please switch photo / video mode on camera manually. 2. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	
EOS R6 Mark II	USB 2.0 to Type-C (C01)	✓	✓	×	×	×	×	✓	×	×	1.1.2	HUB_V109	1. Please switch photo / video mode on camera manually. 2. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark	
Panasonicio	GH5S	USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.2	HUB_V104	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.	
	GH5	Type-C to DC2.5mm	✓	✓	✗	✗	✗	✗	✓	✗	✗	2.6	HUB_V109	When switched to Photo mode, the camera won't respond to video-capturing commands; when switched to video mode, the camera won't respond to photo-capturing commands.	
		USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✓	✗	2.6	HUB_V109	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.	
	GH4	Type-C to DC2.5mm	✓	✓	✗	✗	✗	✗	✓	✗	✗	2.7	HUB_V104		
	G9	Type-C to DC2.5mm	✓	✓	✗	✗	✗	✗	✓	✗	✗	2	HUB_V104	Please switch photo / video mode on camera manually.	
		Type-C to DC2.5mm	✓	✓	✗	✗	✗	✗	✓	✗	✗	2	HUB_V104	Please switch photo / video mode on camera manually.	
	S5	USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✓	✗	2	HUB_V104	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. AK2000S can switch photo/ video mode in P, A, S, M shooting mode. 4. The camera will auto focus when control capture photo.	
		Type-C to DC2.5mm	✓	✓	✗	✗	✗	✗	✓	✗	✗			HUB_V109	Please switch photo / video mode on camera manually.
	GH6	USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.2	HUB_V109	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. AK2000C can switch photo/ video mode in P, A, S, M shooting mode. 4. The camera will auto focus when control capture photo.	
		Type-C to DC2.5mm	✓	✓	✗	✗	✗	✗	✓	✗	✗			HUB_V109	Please switch photo / video mode on camera manually.
S511	USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.0	HUB_V109	1. Set the USB Mode to be PC(tether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. AK2000C can switch photo/ video mode in P, A, S, M shooting mode. 4. The camera will auto focus when control capture photo.		
	Type-C to DC2.5mm	✓	✓	✗	✗	✗	✗	✓	✗	✗			HUB_V109	Please switch photo / video mode on camera manually.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark	
Nikon	Z7	USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.00	HUB_V106		
	Z7 II	USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.00	HUB_V106	1. After connecting the cable, be sure to power on the camera before the gimbal.	
	Z5	USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.11	HUB_V109	2. It takes a few seconds for the gimbal to connect to the camera.	
	Z6	USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✗	✗	2.00	HUB_V106	3. Please switch photo / video mode on camera manually.	
	Z6 II	USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.00	HUB_V107	4. The playback operation can be performed only after the recording operation is performed.	
	Z50	USB 2.0 to Micro (A01)	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.00	HUB_V106		
	D7500	USB 2.0 to Micro (A01)	✓	✓	✗	✗	✗	✗	✗	✓	✗	✗	1.00	HUB_V109	1. After connecting the cable, be sure to power on the AK2000S before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please make sure the LV is on to use the gimbal to control the camera. 3. The AK2000S can start/ stop video recording only if the camera is turn on under video mode. 4. When use gimbal to control the video recording, the camera monitor show the light but not show the video duration. 5. When the gimbal is connected to the camera, some keys of the camera will not respond to commands.
	Zfc	USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.10	HUB_V109	1. After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.	
	Z30	USB 2.0 to Type-C (C01)	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.00	HUB_V109	1. After connecting the cable, be sure to power on the AK2000C before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark	
Fujifilm	X-T20	Type-C to TRS2.5 (T02)	✓	✓	✗	✗	✗	✗	✓	✗	✗	2.01	HUB_V104	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu	
	X-T30	Type-C to TRS2.5 (T02)	✓	✓	✗	✗	✗	✗	✓	✗	✗	1.00	HUB_V104	2. After switch to video mode on camera manually, AK2000S can control camera to start recording.	
	X-A5	Type-C to TRS2.5 (T02)	✓	✗	✗	✗	✗	✗	✓	✗	✗	2.00	HUB_V104		
	X-A7	Type-C to TRS2.5 (T02)	✓	✗	✗	✗	✗	✗	✓	✗	✗	1.00	HUB_V104	Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu	
	X-T100	Type-C to TRS2.5 (T02)	✓	✗	✗	✗	✗	✗	✓	✗	✗	2.00	HUB_V104		
	X-H1	Type-C to TRS2.5 (T02)	✓	✓	✗	✗	✗	✗	✓	✗	✗	2.01	HUB_V104		
	X-T3	Type-C to TRS2.5 (T02)	✓	✓	✗	✗	✗	✗	✓	✗	✗	3.01	HUB_V104	1. Make sure to connect AK2000S to the camera ø2.5mm port. 2. Please switch photo/ video mode on camera manually.	
	X-T4	Type-C to TRS2.5 (T02)	✓	✓	✗	✗	✗	✗	✓	✗	✗	1.00	HUB_V104		
	X-S10	Type-C to TRS3.5 (T03) (Optional)	✓	✓	✗	✗	✗	✗	✓	✗	✗	1.02	HUB_V104		
	X-T200	Type-C to TRS3.5 (T03) (Optional)	✓	✓	✗	✗	✗	✗	✓	✗	✗	1.00	HUB_V104	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually.	
	X-E3	Type-C to TRS2.5 (T02)	✓	✓	✗	✗	✗	✗	✓	✗	✗	1.22	HUB_V107		
X-T30 II	Type-C to TRS2.5 (T02)	✓	✓	✗	✗	✗	✗	✓	✗	✗	1.00	HUB_V109	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually.		

X100V	Type-C to TRS2.5(T02)	√	√	×	×	×	×	√	×	×	2.00	HUB_V109	1. Please set [MIG/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually. 3.To take photos/video is operated through the photo mode	
X-H2S	Type-C to TRS2.5(T02)	√	√	×	×	×	×	√	×	×	1.00	HUB_V109	Please switch photo/ video mode on camera manually.	
X-H2	Type-C to TRS2.5(T02)	√	√	×	×	×	×	√	×	×	1.21	HUB_V109	Please switch photo/ video mode on camera manually.	
X-T5	Type-C to TRS2.5(T02)	√	√	√	×	×	×	√	×	×	1.02	HUB_V109	Please switch photo/ video mode on camera manually.	
X-S20	Type-C to TRS3.5(T03) (Optional)	√	√	×	×	×	×	√	×	×	1.11	HUB_V109	1.Please set [MIG/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo/ video mode on camera manually.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark
Sigma	FP	USB 2.0 to Type-C (C01)	√	√	√	×	×	×	×	×	×	4.00	HUB_V109	1.USB mode select "Camera Control" 2.When the gimbal is connected to the camera,some keys of the camera will not respond to commands. 3.The camera is in ONE mode and gimbal can control the camera recording 4.Camera in STILL mode gimbal controlled camera to take pictures or video
<p>Notice:</p> <p>1. "√" Means Support this function, "×" Means Do not Support;</p> <p>2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro (A03)release calbe can charge Sony camera but not control it;</p>														