

AK4500 Camera Compatibility List (WIFI Control)

Brand	Model	Photo	Video	Follow focus	Zoom in&out	ISO	EV	WB	Switch photo/video	Keyboard firmware version on gimbal	Camera firmware	Note for Wifi Connection
SONY	α 9	✓	✓	✗	✗	✓	✗	✓	✗	ak4500_ajb_sony_v1.2.6	---	Enter the interface of smartphone control
	α 7 III	✓	✓	✗	✓	✓	✗	✓	✗	ak4500_ajb_sony_v1.2.6	---	---
	α 7R III	✓	✓	✗	✗	✓	✓	✓	✗	ak4500_ajb_sony_v1.2.6	---	---
	α 7S II	✓	✓	✗	✓	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	---	---
	α 7R II	✓	✓	✗	✗	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	---	---
	α 7 II	✓	✓	✗	✗	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	---	---
	α 7	✓	✗	✗	✗	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	---	---
	α 7S	✓	✓	✗	✗	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	---	---
	α 7R	✓	✓	✗	✓	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	---	---
	RX100M4	✓	✓	✗	✓	✓	✓	✓	✗	ak4500_ajb_sony_v1.2.6	1.0.0	---
	RX100M5	✓	✓	✗	✓	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	1.0.2	---
	RX100 M5A	✓	✓	✗	✓	✓	✓	✓	✗	ak4500_ajb_sony_v1.2.6	Ver. 1.00	Enter the interface of smartphone control
	RX100M6	✓	✓	✗	✓	✓	✓	✓	✗	ak4500_ajb_sony_v1.2.6	---	---
	α 5100	✓	✓	✗	✓	✗	✓	✗	✓	ak4500_ajb_sony_v1.2.6	---	---
	α 6000	✓	✗	✗	✓	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	---	---
	α 6300	✓	✓	✗	✓	✓	✓	✓	✗	ak4500_ajb_sony_v1.2.6	V2.0.0	---
		✓	✓	✗	✓	✓	✓	✓	✗	ak4500_ajb_sony_v1.2.6	V2.0.1	---
	α 6400	✓	✓	✗	✓	✓	✓	✓	✗	ak4500_ajb_sony_v1.2.6	Ver. 1.00	Enter the interface of smartphone control
	α 6500	✓	✓	✗	✓	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	---	---
	RX0	✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_sony_v1.2.6	1.1.1	Enter the interface of smartphone control
QX1	✓	✓	✗	✓	✓	✓	✓	✓	ak4500_ajb_sony_v1.2.6	---	---	
RX1R1 I	✓	✗	✗	✓	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	---	---	
WX500	✓	✓	✗	✓	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	Ver. 1.00	---	
HX90	✓	✓	✗	✓	✗	✓	✗	✗	ak4500_ajb_sony_v1.2.6	Ver. 1.00	---	
Brand	Model	Photo	Video	Follow focus	Zoom in&out	ISO	EV	WB	Switch photo/video	Keyboard firmware version on gimbal	Camera firmware	Note for Wifi Connection
Canon	EOS 80D	✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_canon_v1.2.6	---	---
	EOS 6D	✓	✗	✓	✗	✓	✓	✓	✗	ak4500_ajb_canon_v1.2.6	---	---
	EOS 6D Mark II	✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_canon_v1.2.6	---	---
	EOS 5D Mark IV	✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_canon_v1.2.6	---	---
	EOS 70D	✓	✗	✗	✗	✓	✓	✗	✗	ak4500_ajb_canon_v1.2.6	Ver. 1.1.1	---
	EOS 77D	✓	✓	✓	✗	✓	✓	✗	✓	ak4500_ajb_canon_v1.2.6	Ver. 1.0.2	---
	EOS R	✓	✓	✗	✗	✓	✓	✗	✓	ak4500_ajb_canon_v1.2.6	Ver. 1.0.0	---
	EOS 200D	✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_canon_v1.2.6	---	---
	M50	✓	✓	✗	✗	✓	✓	✗	✓	ak4500_ajb_canon_v1.3.2	---	---
	EOS 90D	✓	✓	✓	✗	✓	✗	✗	✗	ak4500_ajb_canon_v1.3.1and above	Ver. 1.0.0	steps: WIFI setting—Camera Control API—connect
Brand	Model	Photo	Video	Follow focus	Zoom in&out	ISO	EV	WB	Switch photo/video	Keyboard firmware version on gimbal	Camera firmware	Note for Wifi Connection
	DMC-LX100	✓	✓	✓	✓	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	---	---
	DMC-LX10	✓	✓	✓	✓	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	---	---
	DC-ZS70GK	✓	✓	✓	✓	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	---	---
	DC-ZS220GK	✓	✓	✓	✓	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	---	---
	DMC-GH4	✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	---	---
	DC-GF9XGK	✓	✓	✓	✓	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	---	---

Panasonic	DC-GF9KGK		✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	Ver. 1.1.1	---
	DC-GH5SGK-K		✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	Ver. 1.0.2	---
			✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	Ver. 1.0.0	---
	DC-GX9KGK-K		✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	---	---
	DC-GF10KGK		✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	---	---
	DMC-ZS110	M	✓	✓	✓	✓	✓	✗	✓	✓	ak4500_ajb_panasonic_v1.2.6	Ver. 1.2	---
		S, A, P	✓	✓	✓	✓	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	Ver. 1.2	---
	DMC-GX85	M	✓	✓	✓	✗	✓	✗	✓	✓	ak4500_ajb_panasonic_v1.2.6	Ver. 1.2	---
		S, A, P	✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	Ver. 1.2	---
	GH5	M, S, A, P	✓	✓	✓	✗	✓	✓	✓	✓	ak4500_ajb_panasonic_v1.2.6	Ver. 2.3	---

AK4500 Camera Compatibility List (Cable Control)

Brand	Model	Camera version	Control cable	Function	Setting notes on Camera/Lens	HUB Firmware			
Sony	α 6400	2.00	USB 2.0 to Micro(A01). Connect the cable with camera control port on the gimbal and USB port on camera.	1. Take photos 2. Start/Stop recording video	1. Select "Network" and then turn off "Ctrl w/ Smartphone" in camera setting. 2. Set up the USB Connection to PC remote in camera setting menu. 3. Be able to set up Photo storage location in PC remote setting (Camera with old version firmware don't have this feature). 4. After taking a photo, you have to wait a few seconds to save the photos, which depends on the resolution of the photo, and then take next photo or recording .	AK4500_HUB_V102 or above			
	α 6300	2.00			1. Set up the USB Connection to PC remote in camera setting menu. 2. Be able to set up Photo storage location in PC remote setting (Camera with old version firmware don't have this feature). 3. After taking a photo, you have to wait a few seconds to save the photos, which depends on the resolution of the photo, and then take next photo or recording .				
	α 6600	1.10		USB 2.0 to Type-C (001) Connect the cable with camera control port on the gimbal and USB TYPE C port on camera.	1. Take photos 2. Start/Stop recording video 3. Camera will focus automatically first before taking photo	1. Can control motorized zoom lens to zoom. 2. Can only control digital zoom while using non-motorized lens. 3. Select "Network" and then turn off "Ctrl w/ Smartphone" in camera setting. 4. Set up the USB Connection to PC remote in camera setting menu.	AK4500_HUB_V104 or above		
	α 6500	2.00				1. Set up the USB Connection to PC remote in camera setting menu. 2. Set up USB Power Supply to OFF in camera setting menu. 3. Be able to set up Photo storage location in PC remote setting (Camera with old version firmware don't have this feature). 4. After taking a photo, you have to wait a few seconds to save the photos, which depends on the resolution of the photo, and then take next photo or recording .			
	RX100 IV	1.30			1. Take photos 2. Start/Stop recording video	1. Take photos 2. Start/Stop recording video	1. Select "Network" and then turn off "Ctrl w/ Smartphone" in camera setting. 2. Set up the USB Connection to PC remote in camera setting menu. 3. Be able to set up Photo storage location in PC remote setting (Camera with old version firmware don't have this feature). 4. After taking a photo, you have to wait a few seconds to save the photos, which depends on the resolution of the photo, and then take next photo or recording .	AK4500_HUB_V102 or above	
	α 9	2.00					1. Set up USB Power Supply to OFF in camera setting menu. 2. Be able to set up Photo storage location in PC remote setting (Camera with old version firmware don't have this feature). 3. After taking a photo, you have to wait a few seconds to save the photos, which depends on the resolution of the photo, and then take next photo or recording .		
	α 7R	2.00					1. Set up the USB Connection to PC remote in camera setting menu. 2. Set up USB Power Supply to OFF in camera setting menu. 3. Be able to set up Photo storage location in PC remote setting (Camera with old version firmware don't have this feature). 4. After taking a photo, you have to wait a few seconds to save the photos, which depends on the resolution of the photo, and then take next photo or recording .		
	α 7S11	2.00					1. After connecting the cable, be sure to power on the Feiyu AK4500 before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5. Please set [Auto Review] to be "Off" when shooting the timelapse video;		AK4500_HUB_V106 or above
	α 7R11	4.00							
	α 711	4.00							
A7C	1.00								
A7S3	1.01								

	ZV-E10	1.00	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video	1.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. Please set [Auto Review] to be "Off" when shooting the timelapse video. 5. After connecting the cable, be sure to power on the G6MAX before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 7. When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.	AK4500_HUB_V107 or above
Brand	Model	Camera version	Control cable	Function	Setting notes on Camera/Lens	HUB Firmware
Canon	5D MarkIV	1.1.2	USB 3.0 to Micro 3.0 (A02) , Connect the cable with camera control port on the gimbal and USB3.0 port on camera.	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	The lens should work in MF mode when Follow focus electronically.	AK4500_HUB_V102 or above
	5D MarkIII	1.3.5	USB 2.0 to Mini (B01), Connect the cable with camera control port on the gimbal and USB port on camera.			
	80D	1.0.2				
	6D	1.0.0				
	6D MarkII	1.0.3				
	67X mark III	1.0.1	USB 2.0 to Type-C (C01) , Connect the cable with camera control port on the gimbal and USB TYPE C port on camera.	1.Take photos 2.Start/Stop recording video	Please turn off the WIFI connection for Cable control.	AK4500_HUB_V104 or above AK4500_HUB_V107 or above
	M6 mark2	1.1.0		1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	The lens should work in MF mode when Follow focus electronically.	
	EOS R	1.0.0				
	EOS RP	1.2.0				
	EOS R5	1.1.1				
	EOS R6	1.4.0				
	EOS 5DS R	1.1.1				
	EOS 5D MarkIV	1.2.1	USB2.0 to Micro (A01)	1.Take photos 2.Start/Stop recording video	2. When the camera is in photo mode and the gimbal switches to video mode, some keys of the camera will not respond to commands.	AK4500_HUB_V107 or above
	EOS 850D	1.0.0	USB 2.0 to Micro(A01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 2. When shooting timelapse video, please set the camera "Image Review" to be off.	AK4500_HUB_V107 or above
	M50	1.1.0	USB 2.0 to Micro(A01)	1.Take photos 2.Start/Stop recording video	1. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 2. When shooting timelapse video, please set the camera "Image Review" to be off.	AK4500_HUB_V107 or above
	EOS 90D	1.0.0	USB 2.0 to Micro (A01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 2. When shooting timelapse video, please set the camera "Image Review" to be off.	AK4500_HUB_V107 or above
	EOS R5C	1.0.0.1	USB2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. After the gimbal and camera are turned on, you need to wait about 10 seconds to establish a connection 2. When the camera is in photo file, the gimbal can control taking and recording; 3. When the camera is in video file, the gimbal can control recording 4. When you look back at an image, you have to switch to photo, and when you look back at a video, you have to switch to video	AK4500_HUB_V107 or above
	EOS 200D II	1.0.0	USB 2.0 to Micro (A01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 2. When shooting timelapse video, please set the Canon camera "Image Review" to be off.	AK4500_HUB_V107 or above
	EOS M6 Mark II	1.0.0	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off 4. When cable control, please turn off wifi	AK4500_HUB_V107 or above
	EOS R7	1.0.1	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically		AK4500_HUB_V107 or above
	EOS R10	1.0.1	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically		AK4500_HUB_V107 or above
	EOS R8	1.0.0	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	Please switch photo / video mode on camera manually.	AK4500_HUB_V107 or above
EOS R50	1.0.0	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus.	AK4500_HUB_V107 or above	
EOS R6 Mark II	1.1.2	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus.	AK4500_HUB_V107 or above	
EOS M50 Mark II	1.0.1	USB 2.0 to Micro (A01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus.	AK4500_HUB_V107 or above	

Brand	Model	Camera version	Control cable	Function	Setting notes on Camera/Lens	HUB Firmware	
Nikon	Z7	1	USB 2.0 to Type-C (C01) , Connect the cable with camera control port on the gimbal and USB TYPE C port on camera.		1.It takes a few seconds to automatically connect the camera with the gimbal. 2.When controlling with gimbal, please make sure Camera Live view function(LV) is on. 3.Turn the camera to video mode in order to control the recording 4.The lens should work in AF mode when Follow focus electronically	AK4500_HUB_V102 and above	
	Z6	2				AK4500_HUB_V104 and above	
	D7500	1	USB 2.0 to Micro(A01). Connect the cable with camera control port on the gimbal and USB port on camera.	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1.It takes a few seconds to automatically connect the camera with the gimbal. 2.When controlling with gimbal, please make sure Camera Live view function(LV) is on. 3.Turn the camera to video mode in order to control the recording 4.The lens should work in AF mode when Follow focus electronically 5. In video mode ,there is only indicator shows that D7500 is recording , it won't show up the time of video .	AK4500_HUB_V102 and above	
	D850	1.2	USB 2.0 to Micro(A01). Connect the cable with camera control port on the gimbal and USB 2.0 port on camera.		1.It takes a few seconds to automatically connect the camera with the gimbal. 2.When controlling with gimbal, please make sure Camera Live view function(LV) is on. 3.Turn the camera to video mode in order to control the recording 4.The lens should work in AF mode when Follow focus electronically	AK4500_HUB_V104 and above	
	Z5	1.00	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1.After connecting the cable, be sure to power on the Feiyu AK4500 before the camera and wait for about 6 seconds for successfully connection after camera power on	AK4500_HUB_V104 and above	
	Z50	1.00	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	2.Please make sure the LV is on to use the gimbal to control the camera. 3.Please switch photo / video mode on camera manually.	AK4500_HUB_V104 and above	
	Z6 II	1.21	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video	1.It takes a few seconds to automatically connect the camera with the gimbal. 2.Please switch photo / video mode on camera manually.	AK4500_HUB_V107and above	
	Z30	1.00	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.	AK4500_HUB_V107and above	
	Z8	1.01	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video	1.It takes a few seconds to automatically connect the camera with the gimbal. 2.Please switch photo / video mode on camera manually.	AK4500_HUB_V107and above	
Brand	Model	Camera version	Control cable	Function	Setting notes on Camera/Lens	HUB Firmware	
Panasonic	S5	1.2	USB 2.0 to Type-C (C01) . Connect the cable with camera control port on the gimbal and Type C USB port on camera.	1.Take photos 2.Start/Stop recording video 3.Camera will focus automatically first before taking photo	No need to manually switch camera shooting modes	AK4500_HUB_V104 or above	
	S1	2.0					
	GH5	V2.8	USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1.The photo button of gimbal controls the picture-taking when the camera in photo mode, it also controls the recording with photo button when the camera in video mode. 2.Video button of camera is not available to control the recording or switch camera modes with shutter release cable, please directly switch camera mode with camera function knob. 3 Please connect shutter button cable when the gimbal and camera are both off. The sequence to power on: Turn the gimbal on first, and then the camera. The sequence to power off: Turn the camera off, and then the gimbal. remove the shutter release.		AK4500_HUB_V107 or above
		V2.8	Panasonic Lumix Shutter Cable	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	Please switch photo / video mode on camera manually.		
	GH5S	1.2	USB 2.0 to Type-C (C01) . Connect the cable with camera control port on the gimbal and Type C USB port on camera.	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically (from AK4500_HUB_V104)	1.USB mode of Camera setting should work in PC (Tether) 2. Cannot use WIFI control and cable control together 3.The lens should work in MF mode when Follow focus electronically.	AK4500_HUB_V104 or above	
	GH6	1.2	Panasonic Lumix Shutter Cable	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	Please switch photo / video mode on camera manually.		AK4500_HUB_V107 or above
			USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1.Set the USB Mode to be PC(tether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.		AK4500_HUB_V107 or above
S5II	1.0	Panasonic Lumix Shutter Cable	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	Please switch photo / video mode on camera manually.		AK4500_HUB_V107 or above	
		USB 2.0 to Type-C (C01)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1. Set the USB Mode to be PC(tether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.		AK4500_HUB_V107 or above	

Brand	Model	Camera version	Control cable	Function	Setting notes on Camera/Lens	HUB Firmware
Fujifilm	X-E3	1.22	TRS3.5 to TRS2.5 (Optional)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1.Set the USB Mode to be PC(tether) on camera. 2.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu.Specific operations: Enter the setting interface, video Settings >Microphone/Remote shutter Settings>remote control. 3.Please switch photo/ video mode on camera manually.	AK4500_HUB_V107 or above
	X-T30 II	1.00	TRS3.5 to TRS2.5 (Optional)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu.Specific operations: Enter the setting interface, video Settings >Microphone/Remote shutter Settings>remote control.	AK4500_HUB_V107 or above
	X100V	2.00	TRS3.5 to TRS2.5 (Optional)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu.Specific operations: Enter the setting interface, video Settings >Microphone/Remote shutter Settings>remote control. 2.Please switch photo/ video mode on camera manually.	AK4500_HUB_V107 or above
	GFX 100S	1.32	TRS3.5 to TRS2.5 (Optional)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	Please switch photo/ video mode on camera manually.	AK4500_HUB_V107 or above
	X-H2S	1.00	TRS3.5 to TRS2.5 (Optional)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	Please switch photo/ video mode on camera manually.	AK4500_HUB_V107 or above
	X-H2	1.21	TRS3.5 to TRS2.5 (Optional)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	Please switch photo/ video mode on camera manually.	AK4500_HUB_V107 or above
	X-T5	1.02	TRS3.5 to TRS2.5 (Optional)	1.Take photos 2.Start/Stop recording video 3.Follow focus electronically	Please switch photo/ video mode on camera manually.	AK4500_HUB_V107 or above