

 
 



Feiyu SCORP2 Camera Compatibility (Bluetooth Control)

Brand	Camera Model	Bluetooth	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Bluetooth Firmware Version	Remark
Sony	RX100 V11 (RX100 M7)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_V103	1.How to set up the camera's bluetooth: -MENU→Network1→Bluetooth Settings→Bluetooth Function→On -Network2→Bluetooth Rmt Ctrl→On -Network1→Bluetooth Settings→Pairing 2.Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 3.Please switch photo / video mode on camera manually.
	A6100	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_V104	
	A6400	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Bluetooth_V104	
	A6700	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_V103	
	ZV-1M2	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_V103	1.How to set up the camera's bluetooth: -MENU→Network→Bluetooth Settings→Bluetooth Function→On -Network→Bluetooth Rmt Ctrl→On -Network→Bluetooth Settings→Pairing 2.Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 3.Due to limitations of some camera systems, camera control cannot be achieved in only Bluetooth pairing state. You must also ensure that the Bluetooth remote control is on. 4.Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture,shutter,ISO by connecting with shutter release cable.Please make sure bluetooth is disconnected . 5.Please switch photo / video mode on camera manually.
	A7C11 (A7C M2)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_V104	
	A7RV (A7 R5)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_V104	
	A7 S111 (A7 S3)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.10	Bluetooth_V103	
	ZV-1	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	Bluetooth_V105	
	A7C	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Bluetooth_V105	
	A7R4 (A7R IV)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.20	Bluetooth_V105	
	A74 (A7IV)	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Bluetooth_V105	
	ZV-E10	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Bluetooth_V105	1.How to set up the camera's bluetooth: -MENU→Network1→Bluetooth Settings→Bluetooth Function→On -Network2→Bluetooth Rmt Ctrl→On -Network1→Bluetooth Settings→Pairing 2.Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 3.Please switch photo / video mode on camera manually.
A7CR	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.01	Bluetooth_V105	1.How to set up the camera's bluetooth: -MENU→Network1→Bluetooth Settings→Bluetooth Function→On -Bluetooth Rmt Ctrl→On -Bluetooth Settings→Pairing 2.Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 3.Please switch photo / video mode on camera manually.	
A7 111	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	4.01	Bluetooth_V105	1.How to set up the camera's bluetooth: -MENU→Network2→Bluetooth Settings→Bluetooth Function→On -Bluetooth Settings→Pairing 2.Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 3.Please switch photo / video mode on camera manually.	
ZV-E1	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_V105	1.How to set up the camera's bluetooth: -MENU→Network→Bluetooth Settings→Bluetooth Function→On -Network→Bluetooth Rmt Ctrl→On -Network→Bluetooth Settings→Pairing 2.Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 3.Due to limitations of some camera systems, camera control cannot be achieved in only Bluetooth pairing state. You must also ensure that the Bluetooth remote control is on. 4.Since the Bluetooth shutter has a higher priority, if adjust camera parameters such as aperture,shutter,ISO by connecting with shutter release cable.Please make sure bluetooth is disconnected . 5.Please switch photo / video mode on camera manually.	
Brand	Camera Model	Bluetooth	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Bluetooth Firmware Version	Remark
	EOS 200D11	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.0.3	Bluetooth_V104	1.Wireless communication settings→Bluetooth function→Remote 2.Wireless communication settings→WiFi/Bluetooth connection→Connect to Wireless Remote→ Add a device to connect to 3.Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Switching the camera to M mode(photo mode):Single tap the Q/SET button→Drive mode→Self-timer:10 sec/remote or Self-timer:2 sec/remote 5. Switching the camera to video mode(M): →Remote control→Enable 6. →Auto power off→OFF 7.Please switch photo / video mode on camera manually.
	EOS M50	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.1.0	Bluetooth_V103	1.Wireless communication settings→Bluetooth function→Remote 2.Wireless communication settings→Bluetooth function→Pairing (If "Pairing" is gray, please click "Check/clear conection info" below to clear Bluetooth connection, then pairing again.) 3.Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Switching the camera to M mode(photo mode):Single tap the Q/SET button→Drive mode→Self-timer:10 sec / Self-timer:2 sec 5. Switching the camera to video mode(M): →Remote control→Enable 6. →Power saving→Auto power off→Disable 7.Please switch photo / video mode on camera manually.

Canon

EOS R	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.8.0	Bluetooth_V103	<ol style="list-style-type: none"> 1. Wireless communication settings→Bluetooth function→Remote 2. Wireless communication settings→Bluetooth function→Pairing (If "Pairing" is gray, please click "Check/clear connection info" below to clear Bluetooth connection, then pairing again.) 3. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Switching the camera to M mode(photo mode):Single tap the Q/SET button→Drive mode→Self-timer:10 sec / Self-timer:2 sec 5. Switching the camera to video mode →Remote control→Enable 6. →Power saving→Auto power off→Disable 7. Please switch photo / video mode on camera manually.
EOS R6	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.8.2	Bluetooth_V104	<ol style="list-style-type: none"> 1. Wireless communication settings→Bluetooth settings→Enable 2. Wireless communication settings→WiFi/Bluetooth connection→Connect to Wireless Remote 3. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Switching the camera to M mode(photo mode):Single tap the Q button→Drive mode→Self-timer:10 sec/remote or Self-timer:2 sec/remote 5. Switching the camera to video mode:Remote control→Enable 6. →Power saving→Auto power off→Disable 7. Please switch photo / video mode on camera manually.
EOS R7	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.3.1	Bluetooth_V104	<ol style="list-style-type: none"> 1. Wireless communication settings→Bluetooth settings→Enable 2. Wireless communication settings→WiFi/Bluetooth connection→Connect to Wireless Remote→ Add a device to connect to 3. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Switching the camera to M mode: →Drive mode→Self-timer:10 sec/remote or Self-timer:2sec/remote 5. Switching the camera to video mode:Remote control→Enable 6. Power saving→Auto power off→OFF 7. Please switch photo / video mode on camera manually.
EOS R10	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.2.0	Bluetooth_V104	<ol style="list-style-type: none"> 1. Wireless communication settings→Bluetooth settings→Enable 2. Wireless communication settings→WiFi/Bluetooth connection→Connect to Wireless Remote→ Add a device to connect to 3. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Switching the camera to M mode(photo mode) →Drive mode→Self-timer:10 sec or Self-timer:2 sec 5. Switching the camera to video mode: →Remote control→Enable 6. →Power saving→Auto power off→Disable 7. Please switch photo / video mode on camera manually.
EOS R50	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Bluetooth_V104	<ol style="list-style-type: none"> 1. →Bluetooth settings→Enable 2. Connect to Wireless Remote→Add a device to connect to 3. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Power saving→Auto power off→Disable 5. Please switch photo / video mode on camera manually.
EOS R5 C	Bluetooth	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.0.5.1	Bluetooth_V105	<ol style="list-style-type: none"> 1. Wireless communication settings→Bluetooth settings→Enable 2. Wireless communication settings→Wi-Fi/Bluetooth connection→Connect to Wireless Remote→Add a device to connect to 3. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Tap 0 button →Drive mode→Self-timer:10 sec/remote or Self-timer:2 sec/remote 5. →Power saving→Auto power off 6. Please make sure turn the gimbal on with Photo mode
EOS M50 Mark II	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.0.1	Bluetooth_V105	<ol style="list-style-type: none"> 1. Wireless settings→Bluetooth settings→Enable 2. Wireless settings→Wi-Fi/Bluetooth connection→Connect to Wireless Remote→Add a device to connect to 3. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Switching the camera to M mode:Shooting settings→Drive mode→Self-timer:10 sec/remote or Self-timer:2sec/remote 5. Switching the camera to video mode:Shooting settings→Remote control→Enable 6. Function settings→Power saving→Auto power off 7. Please switch photo / video mode on camera manually.
EOS RP	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.6.0	Bluetooth_V105	<ol style="list-style-type: none"> 1. Wireless communication settings→Bluetooth function→Remote 2. Wireless communication settings→Bluetooth function→Pairing (If "Pairing" is gray, please click "Check/clear connection info" below to clear Bluetooth connection, then pairing again.) 3. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Switching the camera to M mode(photo mode):Single tap the Q/SET button→Drive mode→Self-timer:10 sec/remote or Self-timer:2 sec/remote 5. Switching the camera to video mode →Remote control→Enable 6. →Power saving→Auto power off 7. Please switch photo / video mode on camera manually.
PowerShot G7 X Mark III	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.3.0	Bluetooth_V105	<ol style="list-style-type: none"> 1. Wireless communication settings→Bluetooth settings→Enable 2. Wireless communication settings→WiFi/Bluetooth connection→Connect to Wireless Remote→Add a device to connect to 3. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Switching the camera to M mode(photo mode) →Drive mode→Self-timer:10 sec/remote or Self-timer:2 sec 5. Switching the camera to video mode →Remote control→Enable 6. →Power saving→Auto power off→Disable 7. Please switch photo / video mode on camera manually.
EOS M6 Mark II	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.1.1	Bluetooth_V105	<ol style="list-style-type: none"> 1. Wireless communication settings→Bluetooth settings→Enable 2. Wireless communication settings→WiFi/Bluetooth connection→Connect to Wireless Remote→Add a device to connect to 3. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing 4. Switching the camera to M mode(photo mode) →Drive mode→Self-timer:10 sec/remote or Self-timer:2 sec/remote 5. Switching the camera to video mode(W) →Remote control→Enable 6. →Power saving→Auto power off→Disable 7. Please switch photo / video mode on camera manually.

	EOS R5	Bluetooth	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.9.0	Bluetooth_V105	<p>1. Wireless communication settings→Bluetooth settings→Enable</p> <p>2. Wireless communication settings→WiFi/Bluetooth connection→Connect to Wireless Remote→Add a device to connect to</p> <p>3. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing</p> <p>4. Switching the camera to M mode(photo mode):Single tap the Q button →Drive mode→Self-timer:10 sec/remote or Self-timer:2 sec/remote</p> <p>5. Switching the camera to video mode(M)  →Remote control→Enable</p> <p>6.  →Power saving→Auto power off→Disable</p> <p>7. Please switch photo / video mode on camera manually.</p>
Brand	Camera Model	Bluetooth	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Bluetooth Firmware Version	Remark
Nikon	Z30	Bluetooth	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.10	Bluetooth_V104	<p>1.  →Wireless remote (ML-L7) options→Wireless remote control→On</p> <p>2. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing</p> <p>3. Please switch photo / video mode on camera manually.</p>
	Z50	Bluetooth	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.50	Bluetooth_V105	<p>1. Setup Menu→Wireless remote (ML-L7) options→Wireless remote control→On</p> <p>2. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing</p> <p>3. Please switch photo / video mode on camera manually.</p>
	Z f	Bluetooth	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.10	Bluetooth_V105	<p>1. Network Menu→Wireless remote (ML-L7) options→Wireless remote control→On</p> <p>2. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing</p> <p>3. Please switch photo / video mode on camera manually.</p>
	Z fc	Bluetooth	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.50	Bluetooth_V105	<p>1. Setup Menu→Wireless remote (ML-L7) options→Wireless remote control→On</p> <p>2. Gimbal operation: Swipt left from the main interface →Bluetooth setting→turn on camera control button→click the camera name to pairing</p> <p>3. Please switch photo / video mode on camera manually.</p>
<p>Notice:</p> <p>1. "✓" Means Support this function. "✗" Means Do not Support;</p>														