



### G6Max Camera Compatibility List (Wi-Fi Control)

Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark
Sony	RX100 IV (RX100M4)	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	✗	✓	Any version	1.01	
	RX100 V (RX100M5)	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	✗	✓	Any version	1.01	
	RX100 VI (RX100M6)	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✗	✗	✓	Any version	1.01	
	RX100M5A	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✗	✗	✓	Any version	1.01	
	α 5100	Wi-Fi	✓	✓	✓	✗	✓	✗	✗	✗	✗	✗	✓	Any version	1.01	
	α 6000	Wi-Fi	✓	✗	✗	✗	✓	✗	✗	✗	✗	✗	✓	Any version	1.01	
	α 6100	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✗	✗	✓	Any version	1.01	
	α 6300	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✗	✗	✓	Any version	1.01	
	α 6400	Wi-Fi	✓	✓	✗	✓	✓	✓	✗	✗	✗	✗	✓	Any version	1.01	
	α 6500	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	✗	✗	Any version	1.01	
	HDR-AS50R	Wi-Fi	✓	✓	✓	✗	✓	✓	✓	✗	✗	✗	✗	Any version	1.01	
	FDR-X3000R	Wi-Fi	✓	✓	✓	✗	✓	✓	✓	✗	✗	✗	✗	Any version	1.01	
	ILCE-QX1	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	✗	✗	✗	✗	Any version	1.01	
	DSO-RX0	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	✗	✗	✗	✗	Any version	1.01	
	RX1R II	Wi-Fi	✓	✗	✗	✗	✓	✗	✗	✗	✗	✗	✓	Any version	1.01	
DSO-HX90	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	✗	✓	Any version	1.01		
DSO-WX500	Wi-Fi	✓	✓	✗	✗	✓	✗	✗	✗	✗	✗	✓	Any version	1.12		
Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark
Canon	EOS M50	Wi-Fi	✓	✓	✓	✓	✓	✗	✓	✓	✗	✗	✗	Any version	1.07	
	EOS 200D	Wi-Fi	✓	✓	✓	✓	✓	✗	✓	✓	✗	✗	✗	Any version	1.01	
	EOS 200D II (250D)	Wi-Fi	✓	✓	✓	✓	✓	✗	✓	✓	✗	✗	✗	Any version	1.01	
	Powershot G7 X Mark III	Wi-Fi	✓	✓	✓	✓	✗	✗	✓	✓	✗	✓	✗	Any version	1.01	
	EOS RP	Wi-Fi	✓	✓	✓	✓	✓	✗	✓	✓	✗	✗	✗	Any version	1.01	
	EOS M6 Mark II	Wi-Fi	✓	✓	✓	✓	✓	✗	✓	✓	✗	✗	✗	Any version	1.04	The G6MAX can start/ stop video recording only if the camera is turn on under video mode.
Brand	Camera Model	Control Form	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark
	DMC-LX10	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗	✓	✓	Any version	1.01	After connecting to WIFI for 30s, the camera will prompt: the monitoring screen is closed.
	DMC-LX100	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗	✓	✓	Any version	1.01	
	DMC-GH4GK	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗	✓	✗	Any version	1.01	
	DC-GF9XGK	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗	✓	✓	Any version	1.01	
	DC-GX9KGK-K	Wi-Fi	✓	✓	✓	✓	✓	✓	✗	✗	✗	✓	✗	Any version	1.01	

Panasonic	DC-GF9KGK	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	×	×	×	✓	×	Any version	1.01	
	DC-GF10KGK	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	×	×	×	✓	×	Any version	1.01	
	DC-ZS70GK	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	×	×	×	✓	✓	Any version	1.01	
	DC-ZS220GK	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	×	×	×	✓	✓	Any version	1.01	
	DMC-ZS110	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	×	×	×	✓	✓	Any version	1.01	
	DMC-GX85GK	Wi-Fi	✓	✓	✓	✓	✓	✓	✓	×	×	×	✓	×	Any version	1.01	
GoPro	HER05/6	Wi-Fi	✓	✓	✓	×	×	×	×	×	×	×	×	×	Any version	1.01	
	HER07 Black	Wi-Fi	✓	✓	✓	×	×	✓	×	×	×	×	×	×	Any version	1.01	
	HER07 Silver/White	Wi-Fi	✓	✓	✓	--	--	--	--	--	×	×	×	Any version	1.01		
	HER08	Wi-Fi	✓	✓	✓	--	--	--	--	--	×	×	×	Any version	1.01	For the way to connect HER08, see G6 Connecting HER08 tutorial	
SJcam	SJ6 LEGEND	Wi-Fi	✓	✓	×	--	--	--	--	--	×	×	×	Any version	1.01		
Xiaoyi	Yi 4K	Wi-Fi	✓	✓	×	--	--	--	--	--	×	×	×	Any version	1.01		
FeiYu	RICCA	Wi-Fi	✓	✓	--	--	--	--	--	--	--	--	--	Any version	1.01		

Notice:  
1. "✓" Means Support this function, "×" Means Do not Support;

### G6Max Camera Compatibility (Cable Control)

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark
	RX100 III (RX100M3)	Type-C to Multi	✓	✓	✓	×	×	×	×	×	✓	×	✓	2.00	1.01	1.After connecting the cable, be sure to power on the G6MAX before the camera. 2.Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video;
	RX100 IV (RX100M4)	Type-C to Multi	✓	✓	✓	×	×	×	×	×	✓	×	✓	1.30	1.01	
	RX100M5A	Type-C to Multi	✓	✓	✓	×	×	×	×	×	✓	×	✓	2.00	1.01	
	RX100 VI (RX100M6)	Type-C to Multi	✓	✓	✓	×	×	×	×	×	✓	×	✓	1.00	1.01	
	RX100 VII (RX100M7)	Type-C to Multi	✓	✓	✓	×	×	×	×	×	✓	×	✓	1.00	1.01	
	ZV-1	Type-C to Multi	✓	✓	✓	×	×	×	×	×	✓	×	✓	1.00	1.01	
	ZV-E10	Type-C to Type-C (C02)	✓	✓	✓	×	×	×	×	×	×	×	×	1.00	1.07	1.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. Please set [Auto Review] to be "Off" when shooting the timelapse video; 5. After connecting the cable, be sure to power on the G6MAX before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 7. When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.
	DSO-HX90	Type-C to Multi	✓	✓	✓	×	×	×	×	×	✓	×	✓	1.00	1.01	

Sony

DSC-WX500	Type-C to Multi	✓	✓	✓	×	×	×	×	×	×	×	✓	1.00	1.12		
a 6100	Type-C to Multi	✓	✓	✓	×	×	×	×	×	×	✓	×	✓	1.00	1.01	
a 6300	Type-C to Multi	✓	✓	✓	×	×	×	×	×	×	✓	×	✓	2.00	1.01	1.After connecting the cable, be sure to power on the G6MAX before the camera.
a 6400	Type-C to Multi	✓	✓	✓	×	×	×	×	×	×	✓	×	✓	1.00	1.01	2.Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.
a 6500	Type-C to Multi	✓	✓	✓	×	×	×	×	×	×	✓	×	✓	2.00	1.01	3.Please set [Auto Review] to be "Off" when shooting the timelapse video;
a 6600	Type-C to Multi	✓	✓	✓	×	×	×	×	×	×	✓	×	✓	2.00	1.04	
DSC-RX0	Type-C to Multi	✓	✓	✓	×	×	×	×	×	×	✓	×	✓	3.00	1.01	1.After connecting the cable, be sure to power on the G6MAX before the camera.
DSC-RX0 II	Type-C to Multi	✓	✓	✓	×	×	×	×	×	×	✓	×	✓	1.00	1.01	2.Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.
A7C	Type-C to Type-C (C02)	✓	✓	✓	×	×	×	×	×	×	✓	×	×	1.00	1.06	3.Please set [Auto Review] to be "Off" when shooting the timelapse video;
																6.Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.
A7M4	Type-C to Multi	✓	✓	✓	×	×	×	×	×	×	✓	×	✓	1.01	1.07	1.After connecting the cable, be sure to power on the gimbal before the camera.
																2. Operate digital zoom, the camera's digital zoom function needs to be turned on.
																3. Please set [Auto Review] to be "Off" when shooting the timelapse video

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark
	EOS M50	Type-C to Micro (A03)	✓	✓	✓	×	×	×	×	×	×	×	×	1.0.0	1.02	After connecting the cable, be sure to power on the G6MAX before the camera and wait for about 5 seconds for successfully connection after camera power on, the camera icon on the gimbal screen will light up.
	EOS M50 Mark II	Type-C to Micro (A03)	✓	✓	✓	×	×	×	×	×	×	✓	×	1.0.0	1.06	
	EOS RP	Type-C to Type-C (C02)	✓	✓	✓	×	×	×	×	×	×	✓	×	1.3.0	1.02	1.G6MAX can switch to video mode from P,A shooting mode, but need to switch to video mode from photo mode on camera manually.
																2. Switch to "MF" Mode on the lens when use pull focus.
																3. Please do not use the release cable to control the video recording while in photo mode camera as it is easy to cause the camera crash.
																4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
																5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.
	EOS M6 Mark II	Type-C to Type-C (C02)	✓	✓	✓	×	×	×	×	×	×	✓	×	1.0.0	1.02	1.G6MAX can switch to video mode from P,A,M shooting mode, but need to switch to video mode from photo mode on camera manually.
																2. Switch to "MF" Mode on the lens when use pull focus.
																3. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS M6	Type-C to TRS2.5 (T02)	✓	×	×	×	×	×	×	×	✓	×	×	1.0.0	1.02	
	EOS 200D II (250D)	Type-C to Micro (A03)	✓	✓	✓	×	×	×	×	×	×	✓	×	1.0.0	1.04	1.Please switch photo / video mode on camera manually.
																2. Switch to "MF" Mode on the lens when use pull focus.
																3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	Powershot G7 X Mark III	Type-C to Type-C (C02)	✓	✓	×	×	×	×	×	×	×	✓	×	1.0.1	1.02	

Canon

	EOS R6	Type-C to Type-C (C02)	√	√	×	×	×	×	×	×	×	×	×	1.4.0	1.07	Please switch photo / video mode on camera manually.
	EOS R10	Type-C to Type-C (C02)	√	√	×	×	×	×	×	×	×	×	×	1.0.1	1.07	
	EOS R8	Type-C to Type-C (C02)	√	√	×	×	×	×	×	×	×	×	×	1.0.0	1.07	Please switch photo / video mode on camera manually.
	EOS R50	Type-C to Type-C (C02)	√	√	×	×	×	×	×	×	×	×	×	1.0.0	1.07	Please switch photo / video mode on camera manually.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark
Panasonic	DC-S5GK-K	Type-C to DC2.5mm	√	√	×	×	×	×	×	×	√	×	×	2.00	1.02	Please switch photo / video mode on camera manually.
		TypeC to Type-C (C02)	√	√	×	×	×	×	×	×	×	×	×	2.00	1.02	1.G6MAX can switch photo/ video mode in P, A, S, M shooting mode. 2.The camera will auto focus when control capture photo.
	DMC-GH4GK	Type-C to DC2.5mm	√	√	×	×	×	×	×	×	√	×	×	2.7	1.01	Please switch photo / video mode on camera manually.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Switch Photo/ Video Mode	ISO Adjustment	EV Adjustment	WB Adjustment	Aperture Adjustment	Shutter Speed Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Version	HUB Version Info.	Remark
Fujifilm	X-T20	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	2.01	1.02	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-T30	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	1.20	1.02	
	X-T100	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	×	×	√	×	×	2.00	1.02	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-T200	Type-C to TRS3.5 (T03) (Optional)	√	√	×	×	×	×	×	×	√	×	×	1.00	1.02	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-A5	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	×	×	√	×	×	2.00	1.02	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-A7	Type-C to TRS2.5 (T02)	√	×	×	×	×	×	×	×	√	×	×	1.30	1.02	
	X-T3	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	3.01	1.02	
	X-T4	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	1.00	1.02	
	X-H1	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	2.01	1.02	
	X-S10	Type-C to TRS3.5 (T03) (Optional)	√	√	×	×	×	×	×	×	√	×	×	1.00	1.02	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-E3	Type-C to TRS2.5 (T02)	√	√	×	×	×	×	×	×	√	×	×	1.22	1.07	
	X-T30 II	Type-C to TRS2.5(T02)	√	√	×	×	×	×	×	×	√	×	×	1.00	1.07	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
X100V	Type-C to TRS2.5(T02)	√	√	×	×	×	×	×	×	√	×	×	2.00	1.07	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop	Switch	ISO	EV	WB	Aperture	Shutter Speed	Halfway Press	Pull Focus	Digital Zoom Control	Camera Version	HUB	Remark

Brand	Camera Model	Cable	Capture Photo	Recording Video	Photo/ Video Mode	Adjustment	Adjustment	Adjustment	Adjustment	Adjustment	To Focus	Full Focus	Digital Zoom Control	Camera version	Version Info.	Remark
Nikon	Z50	Type-C to micro (A03)	√	√	×	×	×	×	×	×	×	×	×	1.02	1.06	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	Z7	Type-C to TypeC (C02)	√	√	×	×	×	×	×	×	×	×	×	3.31	1.07	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2.Please switch photo / video mode on camera manually.
	Z7 II	Type-C to TypeC (C02)	√	√	×	×	×	×	×	×	×	×	×	1.00	1.07	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2.Please switch photo / video mode on camera manually.
	Z fc	Type-C to Type-C (C02)	√	√	×	×	×	×	×	×	×	×	×	1.10	1.07	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2.Please switch photo / video mode on camera manually.

Notice:

1. "√" Means Support this function, "×" Means Do not Support;

2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro (A03) release cable can charge Sony camera but not control it;