



## Feiyu SCORP-Mini2 Camera Compatibility (Cable Control)

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Sony	RX100 III (RX100M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.01	1.After connecting the cable, be sure to power on the SCORP-Mini before the camera. 2.Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 4.Please make sure the dial on the camera is set to M mode.
	RX100 IV (RX100M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.30	1.01	
	RX100 V (RX100M5)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.01	
	RX100 VA (RX100M5A)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.01	
	RX100 VI (RX100M6)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.01	
	RX100 VII (RX100M7)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.01	
	ZV-1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.01	
	ZV-1M2	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.20	1.Since the Bluetooth shutter has a higher priority,if adjust camera parameters such as aperture,shutter,ISO by connecting with shutter release cable.Please make sure bluetooth is disconnected. 2.Please make sure the dial on the camera is set to M mode.
	ZV-E10	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	1.01	1.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote]→[On] 3.Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.]→[Camera Only] 4.Please set [Auto Review] to be"Off" when shooting the timelapse video or Panorama; 5.After connecting the cable, be sure to power on the SCORP-Mini before the camera. 6.The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 7.When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video. 8.Please make sure the dial on the camera is set to M mode.
	ZV-E1	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.52	
	DSC-HX90	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.01	1.After connecting the cable,be sure to power on the SCORP-Mini before the camera. 2.Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 4.Please make sure the dial on the camera is set to M mode.
	DSC-RX500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.01	
	α5100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	1.01	
	α6000	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.01	
	α6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.01	
	α6300	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.01	
	α6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.01	
	α6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.01	
	α6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.10	1.01	
	α6700	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.52	
	DSC-RX0	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	1.01	
	DSC-RX0 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	1.01	
	A7 II (A7 M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	1.01	1.After connecting the cable,be sure to power on the SCORP-Mini before the camera. 2.Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 4.Please make sure the dial on the camera is set to M mode.
	A7S II (A7 S2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.01	
	A7R II (A7 R2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	1.01	
A7S	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	1.01		
A7R	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	1.01		
α7	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.10	1.01		
A7 III (A7 M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	1.01		
A7C	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.01	1.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote]→[On] 3.Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.]→[Camera Only] 4.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 5.After connecting the cable, be sure to power on the SCORP-Mini 2 before the camera. 6.After connecting the cable, playback the album may not supported. 7.Please make sure the dial on the camera is set to M mode.	
	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.1	1.03	1.Due to the lens,the zoom speed is very slow. 2.Please make sure the dial on the camera is set to M mode.	
A7S III (A7 S3)	Type-C to Type-C	✓	✓	✓	✓	✗	✓	✓	✗	✗	2.1	1.03	1.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2.Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote]→[On] 3.Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.]→[Camera Only] 4.Please set [Auto Review] to be"Off" when shooting the timelapse video or Panorama; 5.When change cable to control the camera, please make sure reboot both gimbal and camera.After connecting the cable, be sure to power on the SCORP-Mini 2 before the camera. 6.Due to the lens, the aperture cannot be controlled if you replace the electronically controlled aperture lens, you can control the aperture through the gimbal. 7.Since the Bluetooth shutter has a higher priority,if adjust camera parameters such as aperture,shutter,ISO by connecting with shutter release cable.Please make sure bluetooth is disconnected 8.Please make sure the dial on the camera is set to M mode.	

A7 IV(A7M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	1.05	1.After connecting the cable, be sure to power on the gimbal before the camera. 2.Operate digital zoom,the camera's digital zoom function needs to be turned on. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 4.Please make sure the dail on the camera is set to M mode.	
	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	1.05	1.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off] 2.Since the Bluetooth shutter has a higher priority,if adjust camera parameters such as aperture,shutter,ISO by connecting with shutter release cable.Please make sure bluetooth is disconnected. 3.Please make sure the dail on the camera is set to M mode.	
A7R	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	1.52	1.Set "USB Connecting" to be "PC Remote"; 2.Set "Still Img. Save Dest." to be "Camera Only"; (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 3.Please make sure the dail on the camera is set to M mode.	
A7C II (A7C M2)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.52	1.Set "USB Connecting" to be "PC Remote"; 2.Set "Still Img. Save Dest." to be "Camera Only"; (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 3.Since the Bluetooth shutter has a higher priority,if adjust camera parameters such as aperture,shutter,ISO by connecting with shutter release cable.Please make sure bluetooth is disconnected. 4.Please make sure the dail on the camera is set to M mode.	
A7R V (A7R5)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	1.52	1.Set "USB Connecting" to be "PC Remote"; (Network) → [PC Remote Function] → [PC Remote] → [On]Set the "USB Connection" to be "Computer Remote". The specific setting method is as follows: Step 1: Set the computer remote control on the camera.MENU → network → transmission/remote → Computer remote control function → computer remote control → open 2.Set "Still Img. Save Dest." to be "Camera Only"; (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 3.Since the Bluetooth shutter has a higher priority,if adjust camera parameters such as aperture,shutter,ISO by connecting with shutter release cable.Please make sure bluetooth is disconnected. 4.Please make sure the dail on the camera is set to M mode.
	Type-c to Multi	✓	✓	✓	✗	✗	✗	✗	✗	✓	1.00	1.52	1.After connecting the cable, be sure to power on the gimbal before the camera. 2.Operate digital zoom,the camera's digital zoom function needs to be turned on. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; 4.Please make sure the dail on the camera is set to M mode.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Canon	EOS M50	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.0.0	1.02	1.SCORP-Mini can switch to video mode from P,A,M shooting mode, but need to switch to video mode from photo mode on camera manually.
	EOS M50 Mark II	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	1.01	2.Switch to "MF" Mode on the lens when use pull focus. 3.When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS R	Type-C to Type-C	✓	✓	✓	✓	✓	✗	✓	✓	✗	1.8.0	1.01	1.SCORP-Mini can switch to video mode from P,A shooting mode, but need to switch to video mode from photo mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus.
	EOS RP	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.0	1.01	3.Please do not use the release cable to control the video recording while in photo mode camera as it is easy to cause the camera crash. 4.When shooting timelapse video, please set the Canon camera "Image Review" to be off. 5.It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.
	EOS M6	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.0.0	1.01	
	EOS M6 Mark II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	1.01	1.SCORP-Mini can switch to video mode from P,A,M shooting mode, but need to switch to video mode from photo mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus. 3.When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS 200D II (250D)	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	1.03	1.Please switch photo / video mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus. 3.When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	Powershot G7 X Mark III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.3.0	1.01	
	EOS R6	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.4.0	1.04	1.Please switch photo / video mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus.
	EOS R7	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	V1.05	
	EOS R10	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	V1.05	
	EOS R8	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	V1.07	Please switch photo / video mode on camera manually.
	EOS R50	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	V1.07	1.Please switch photo / video mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus.
	EOS R6 Mark II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.2	V1.09	1.Please switch photo / video mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Panasonic	DC-G9GK-K	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	1.01	Please switch photo / video mode on camera manually.
	DMC-GH4GK	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.70	1.01	Please switch photo / video mode on camera manually.
	DMC-GH5S	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	1.01	1.Set the USB Mode to be PC(tether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Fujifilm	X-T20	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	1.01	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-T30	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.20	1.01	
	X-T30 II	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.01	
	X-T100	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	1.01	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-T200	Type-C to TRS3.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.01	Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-A5	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	1.01	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-A7	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.30	1.01	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-T3	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	3.01	1.01	1.Make sure to connect Feiyu SCORP to the camera «2.5mm port. 2.Please switch photo/ video mode on camera manually.
	X-T4	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.01	
	X-H1	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	1.01	
	X-S10	Type-C to TRS3.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	1.01	
	X-S20	Type-C to TRS3.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	V1.36	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
	X-E3	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.22	1.01	
	X100V	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	1.02	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually.
X-H2	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.21	1.07	Please switch photo / video mode on camera manually.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Nikon	Z50	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.50	1.52	1.Please switch photo / video mode on camera manually. 2.After connecting the cable, be sure to power on the camera, then power on the gimbal. 3.Please finish recording before playback the album. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
	Z fc	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	1.01	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo / video mode on camera manually. 3.To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.
	Z6	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	1.01	
	Z6 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	1.01	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	Z7	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	3.31	1.01	2.Please switch photo / video mode on camera manually.
	Z7 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	1.01	
	Z5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.11	1.05	1.After connecting the cable, be sure to power on the SCORP-Mini before the camera. 2.After connecting the cable, be sure to power on the Feiyu SCORP before the camera and wait for about 6 seconds for successfully connection after camera power on 3.Please switch photo / video mode on camera manually. 4.If you go back to the album and play the video, you have to reconnect to control it again.
	Z30	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	1.52	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2.Please switch photo / video mode on camera manually. 3.To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.
	Z f	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	1.52	1.When the camera set up with photo mode, please do not single tap the shutter button, but long press the shutter button able 3 seconds, otherwise, the camera may get stuck. 2.To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode. 3.Please switch photo/ video mode on camera manually.
	Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version
SIGMA	FP	Type-C to Type-C	✗	✓	✗	✗	✗	✗	✗	✗	✗	4.00	1.02	1.Select "Camera Control" for USB mode; 2.All keys of the camera are unavailable after the connection with the SCORP-Mini 2

Notice:  
1. ""/"" Means Support this function, "X" Means Do not Support;  
2. When connecting by Type C to TRS3.5 and Type C to TRS2.5, the camera icon on the gimbal screen will not light up, long press the shutter button to take photos or record videos, the camera required to be in corresponding mode."