



### Feiyu SCORP Camera Compatibility

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Sony	RX100 III (RX100M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V103	
	RX100 IV (RX100M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.30	Gimbal_V103	
	RX100M5A	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V103	
	RX100 VI (RX100M6)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V103	
	RX100 VII (RX100M7)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V103	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera.
	ZV-1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	Gimbal_V103	2. Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram;
	DSC-WX500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	Gimbal_V103	
	DSC-HX90	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	Gimbal_V103	
	DSC-RX10 III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	Gimbal_V103	
	DSC-RX10 IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V103	
	ZV-E10	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V103	1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram; 5. After connecting the cable, be sure to power on the GOMAX before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PO". 7. When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.
	a 6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V103	
	a 6300	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V103	
	a 6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V103	
	a 6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V103	
	a 6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.10	Gimbal_V103	
	A 75	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	Gimbal_V103	
	a 75 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V103	
	A 7R	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V103	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera.
	a 7R II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	Gimbal_V103	2. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.
a 7R III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.01	Gimbal_V103	3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram;	
a 7R IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V103		
a 7R Type-C to Type-C	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	1.00	Gimbal_V105		
a 7R M4A	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V103		
a 7 II (A7M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	Gimbal_V103		
a 7 III (A7M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	Gimbal_V103		
a 9	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	6.00	Gimbal_V103		
a 9 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	Gimbal_V103		
A 7C	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.0	Gimbal_V105	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 2. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 3. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 4. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram;	
a 1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	Gimbal_V103	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram; 4. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]	
a 7S III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	Gimbal_V103	1. After connecting the cable, be sure to power on the gimbal before the camera. 2. Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram; 4. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]	
	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	Gimbal_V105	1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PO". 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram; 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.
FX3	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V105	1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. After connecting the cable, be sure to power on the gimbal before the camera. 3. The camera icon on the gimbal screen lights up after a successful connection. 4. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram; 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.	
	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V105	1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] 3. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 4. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PO". 5. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panoram; 6. After swapping from one cable to another, both camera and gimbal need to be rebooted.

A7M4	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V105	1. After connecting the cable, be sure to power on the gimbal before the camera. 2. Operate digital zoom, the camera's digital zoom function needs to be turned on.	
	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V106	1. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] Set the USB Connection to be "Computer Remote". The specific setting method is as follows: Step 1: Set the computer remote control on the camera.MENU → network → transmission/remote → Computer remote control function → computer remote control → open 3. When using the electronic focusing function of the camera, you need to set the lens mode to AF and camera mode to MF. 4. Settings to avoid losing photos when taking photos: Network → Transfer/Remote → PC Remote Control → Still Img. Save Dest. → Camera only.	
A7RM IV	Type-c to Multi	✓	✓	✓	✗	✗	✗	✗	✗	✓	1.10	Gimbal_V104	1. After connecting the cable, be sure to power on the gimbal before the camera. 2. Support Optical Zoom when equipped with a Motorize Lens. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama.	
FDR-AX60	Type-C to Multi	✗	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V106		
FDR-AX700	Type-C to Multi	✗	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V120		
A6700	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V122	1. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] Set the USB Connection to be "Computer Remote". The specific setting method is as follows: Step 1: Set the computer remote control on the camera.MENU → network → transmission/remote → Computer remote control function → computer remote control → open 2. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 3. Please make sure the dial on the camera is set to M mode.	
ZV-1W2	Type-C to Type-C	✓	✓	✓	✗	✓	✓	✓	✗	✗	1.00	Gimbal_V122		
A7C11 (A7C M2)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V122	1. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] Set the USB Connection to be "Computer Remote". The specific setting method is as follows: Step 1: Set the computer remote control on the camera.MENU → network → transmission/remote → Computer remote control function → computer remote control → open 2. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 3. Please make sure the dial on the camera is set to M mode.	
A7RV (A7R5)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V122	1. Set "USB Connecting" to be "PC Remote". (Network) → [PC Remote Function] → [PC Remote] → [On] Set the USB Connection to be "Computer Remote". The specific setting method is as follows: Step 1: Set the computer remote control on the camera.MENU → network → transmission/remote → Computer remote control function → computer remote control → open 2. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 3. Please make sure the dial on the camera is set to M mode.	
	Type-c to Multi	✓	✓	✓	✗	✗	✗	✗	✗	✓	1.00	Gimbal_V122	1. After connecting the cable, be sure to power on the gimbal before the camera. 2. Support Optical Zoom when equipped with a Motorize Lens. Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 4. Please make sure the dial on the camera is set to M mode.	
A7CR	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.01	Gimbal_V122	1. Set "USB Connecting" to be "PC Remote". 2. Set "Still Img. Save Dest." to be "Camera Only". (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] 3. Please make sure the dial on the camera is set to M mode.	
ZV-E1	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V122		
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Canon	EOS M50	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.0	Gimbal_V103	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
	EOS M50 Mark II	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	Gimbal_V121	2. Switch to "MF" Mode on the lens when use pull focus.
	EOS M6 Mark II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_V103	3. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	Powershot G7 X Mark III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	Gimbal_V103	1. Be sure camera Wi-Fi is off before connecting the cable 2. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS 200D II (250D)	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	Gimbal_V103	
	EOS 800D	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_V105	
	EOS 80D	Type-C to Mini (Optional)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.2	Gimbal_V103	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
	EOS 90D	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	Gimbal_V106	
	EOS 6D	Type-C to Mini (Optional)	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.8	Gimbal_V103	2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need.
	EOS 6D Mark II	Type-C to Mini (Optional)	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	Gimbal_V103	3. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 4. EOS 90D/EOS 200D camera needs to be covered on in photo mode, otherwise the camera screen may not display.
	EOS 5D Mark III	Type-C to Mini (Optional)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.5	Gimbal_V103	
	EOS 5D Mark IV	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.2	Gimbal_V103	
	EOS 5DS R	Type-c to Micro	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.1.1	Gimbal_V103	
	EOS RP	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.6.0	Gimbal_V121	
	EOS R	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_V103	1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash.
	EOS R5	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.9.0	Gimbal_V121	4. When shooting timelapse video, please set the Canon camera "Image Review" to be off 5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.
	EOS R6	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	Gimbal_V103	6. If connect camera to external device via HDMI Cable, need to set the "HDMI Display" to be display both on camera screen and on the other device to control capture photo or video recording.
	EOS R5C	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0.1	Gimbal_V1_06	1. After the gimbal and camera are turned on, you need to wait about 10 seconds to establish a connection 2. When the camera is in photo file, the gimbal can control taking and recording; 3. When the camera is in video file, the gimbal can control recording 4. When you look back at an image, you have to switch to photo, and when you look back at a video, you have to switch to video
	EOS R7	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	Gimbal_V1_06	
	EOS R10	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	Gimbal_V1_06	
	EOS R8	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_V1_20	Please switch photo / video mode on camera manually.

	EOS R50	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_V1.20	1.Please switch photo / video mode on camera manually. 2.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
	EOS R6 Mark II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.2	Gimbal_V1.20	1.Please switch photo / video mode on camera manually. 2.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark	
Panasonic	GHS5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	Gimbal_V103	1.Set the USB Mode to be PC(ether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5.When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.	
	GH5	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.60	Gimbal_V105	When switched to Photo mode, the camera won't respond to video-capturing commands; when switched to video mode, the camera won't respond to photo-capturing commands.	
		Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.60	Gimbal_V105	1.Set the USB Mode to be PC(ether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5.When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.	
	GH4	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.7	Gimbal_V103		
	GH7	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V103	Please switch photo / video mode on camera manually.	
	S5	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V103	Please switch photo / video mode on camera manually.	
		Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.00	Gimbal_V103	1.Set the USB Mode to be PC(ether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	
	GH6	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.20	Gimbal_V106	Please switch photo / video mode on camera manually.	
		Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.20	Gimbal_V106	1.Set the USB Mode to be PC(ether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	
	S511	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V120	Please switch photo / video mode on camera manually.	
		Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	Gimbal_V120	1.Set the USB Mode to be PC(ether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark	
Nikon	Z7	Type-C to Type-C	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V103		
	Z7 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V103		
	Z5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.11	Gimbal_V103	1.After connecting the cable, be sure to power on the Feiyu SDRP before the camera and wait for about 6 seconds for successfully connection after camera power on.	
	Z6	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	Gimbal_V103	2.Please switch photo / video mode on camera manually.	
	Z6 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V103		
	Z50	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V103		
	Z fc	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	Gimbal_V105	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on. 2.Please switch photo / video mode on camera manually. 3.To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.	
	Z7500	Type-C to Micro	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.10	Gimbal_V120	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds to hear the "click" sound for successfully connection after camera power on. 2.Control the camera with the gimbal, the camera Live View function needs to be enabled. 3.Gimbal can control camera recording only when the camera is turned on in video recording mode. 4.The camera screen does not show the duration of the video, but only lights. 5.The camera button is unavailable when connected to the gimbal. 6.When controlling the electronic focus, the lens needs to be in MF mode and its size.	
	Z850	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	Gimbal_V120	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds to hear the "click" sound for successfully connection after camera power on. 2.Control the camera with the gimbal, the camera Live View function needs to be enabled. 3.Gimbal can control camera recording only when the camera is turned on in video recording mode. 4.If you go back to the album and play the video, you have to reconnect to control it again.	
	Z30	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	Gimbal_V104	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on. 2.Please switch photo / video mode on camera manually. 3.To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.	
	Z8	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.01	Gimbal_V121	Please switch photo/ video mode on camera manually.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark	
	X-T20	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	Gimbal_V103	1.Please set [MIG/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu.	
	X-T30	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V103	1.After switch to video mode on camera manually, the gimbal can control camera to start recording.	
	X-A5	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V105		
	X-A7	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V103	Please set [MIG/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu.	
	X-T100	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V103		
	X-H1	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	Gimbal_V103		
	X-T3	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	3.01	Gimbal_V103	1.Make sure to connect Feiyu SDRP to the camera a2.5mm port. 2.Please switch photo/ video mode on camera manually.	
	X-T4	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V103		
	X-S10	Type-C to TRS3.5 (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.02	Gimbal_V103	1.Please set [MIG/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu.	
	X-T200	Type-C to TRS3.5 (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V103	2.Please switch photo/ video mode on camera manually.	

Fujifilm	X-E3	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.22	Gimbal_V103	
	X-T30 II	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V106	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface, video Settings >Microphone/Remote shutter Settings>remote control 2. Please switch photo/ video mode on camera manually.
	X100V	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V106	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface, video Settings >Microphone/Remote shutter Settings>remote control 2. After switch to video mode on camera manually, the gimbal can control camera to start recording.
	GFX 100S	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.32	Gimbal_V106	Please switch photo/ video mode on camera manually.
	X-H2S	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V120	Please switch photo/ video mode on camera manually.
	X-H2	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.21	Gimbal_V120	Please switch photo/ video mode on camera manually.
	X-T5	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.02	Gimbal_V120	Please switch photo/ video mode on camera manually.
	X-S20	Type-C to TRS2.5 (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.11	Gimbal_V121	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface, video Settings >Microphone/Remote shutter Settings>remote control 2. After switch to video mode on camera manually, the gimbal can control camera to start recording.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
SIGMA	FP	Type-C to Type-C	✗	✓	✗	✗	✗	✗	✗	✗	✗	4.00	Gimbal_V106	1. The camera icon on the gimbal screen lights up after a successful connection. 2. When the cable is connected, the camera button function cannot be used. 3. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
<p>Notice:</p> <p>1. "✓" Means Support this function. "✗" Means Do not Support;</p> <p>2. When connecting by Type C to TRS3.5 and Type C to TRS2.5, the camera icon on the gimbal screen will not light up. long press the shutter button to take photos or record videos, the camera required to be in corresponding mode.</p>														