



Feiyu SCORP Pro Camera Compatibility List

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Full Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark	
Sony	a6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101	1.After connecting the cable, be sure to power on the SCORP Pro before the camera. 2.Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 4.After connecting the cable, be sure to power on the SCORP Pro before the camera. 5.Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 6.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 7.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] 8.Set "USB Connecting" to be "PC Remote"; (Network) → [PC Remote Function] → [PC Remote]→[On] 9.Set "Still Img. Save Dest." to be "Camera Only"; (Network) → [PC Remote Function] → [Still Img. Save Dest.]→[Camera Only] 10.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama.	
	a6300	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101		
	a6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101		
	a6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101		
	a6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101		
	A7S	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	Gimbal_V101		
	a7S II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101		
	A7R	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101		
	a7R II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	Gimbal_V101		
	a7R III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.01	Gimbal_V101		
	a7R IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101		
	a7R IV	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00		Gimbal_V103
	a7R IMA	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101		
	a7 III (A7M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	Gimbal_V101		
	a7 III (A7M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	Gimbal_V101		
a9	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	6.00	Gimbal_V101			
a9 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	Gimbal_V101			
A7C	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.0	Gimbal_V103	1.After connecting the cable, be sure to power on the SCORP Pro before the camera. 2.Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 4.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]	
a1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	Gimbal_V101	1.After connecting the cable, be sure to power on the gimbal before the camera. 2.Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 4.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]		
Sony	a7S III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	Gimbal_V101	1.After connecting the cable, be sure to power on the gimbal before the camera. 2.Support Optical Zoom when equipped with a Motorize Lens; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 4.Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off]	
		Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	Gimbal_V103	1.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off] 2.Set "USB Connecting" to be "PC Remote"; (Network) → [PC Remote Function] → [PC Remote]→[On] 3.Set "Still Img. Save Dest." to be "Camera Only"; (Network) → [PC Remote Function] → [Still Img. Save Dest.]→[Camera Only] 4.The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 5.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 6.After swapping from one cable to another, both camera and gimbal need to be rebooted.
FX3		Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V103	1.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off] 2.After connecting the cable, be sure to power on the gimbal before the camera. 3.The camera icon on the gimbal screen lights up after a successful connection. 4.Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 5.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 6.After swapping from one cable to another, both camera and gimbal need to be rebooted.	
		Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V103	1.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off] 2.Set "USB Connecting" to be "PC Remote"; (Network) → [PC Remote Function] → [PC Remote]→[On] 3.Set "Still Img. Save Dest." to be "Camera Only"; (Network) → [PC Remote Function] → [Still Img. Save Dest.]→[Camera Only] 4.The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 5.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 6.After swapping from one cable to another, both camera and gimbal need to be rebooted.

		Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_Y103	1.After connecting the cable, be sure to power on the gimbal before the camera. 2.Operate digital zoom,the camera's digital zoom function needs to be turned on.	
	a7 IV (A7M4)	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_Y104	1.Please set the [Ctrl w/ Smartphone] to be off: (Network) → [Ctrl w/ Smartphone] → [Off] 2. Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On]Set the "USB Connection" to be "Computer Remote". The specific setting method is as follows: Step 1: Set the computer remote control on the camera: MENU → network → transmission/remote → Computer remote control function → computer remote control → open 3.When using the electronic focusing function of the camera, you need to set the lens mode to AF and camera mode to MF. 4.Settings to avoid losing photos when taking photos: Network → Transfer/Remote → PC Remote Control → Still Img. Save Dest. → Camera only.	
	RX10IV (RX10M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_Y104	1.After connecting the cable, be sure to power on the gimbal before the camera. 2.Operate digital zoom,the camera's digital zoom function needs to be turned on. 3.Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama;	
	FDR-AX60	Type-C to Multi	✗	✓	✓	✗	✗	✗	✗	✗	✓	1.00	Gimbal_Y104		
	FDR-AX700	Type-C to Multi	✗	✓	✓	✗	✗	✗	✗	✗	✓	1.00	Gimbal_Y104		
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark	
Canon	Powershot G7 X Mark III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	Gimbal_Y101	1.Be sure camera Wi-Fi is off before connecting the cable 2.When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 3.Switch to "MF" Mode on the lens when use pull focus. 4.When shooting timelapse video, please set the Canon camera "Image Review" to be off	
	EOS M50	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.0	Gimbal_Y104	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 2.Switch to "MF" Mode on the lens when use pull focus. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off	
	EOS M50 Mark II	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	Gimbal_Y121	Switch to "MF" Mode on the lens when use pull focus.	
	EOS 200D II (250D)	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	Gimbal_Y101		
	EOS 850D	Type-C to Micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_Y103		
	EOS 80D	Type-C to Mini	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.2	Gimbal_Y101	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.	
	EOS 90D	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	Gimbal_Y104	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.	
	EOS 6D	Type-C to Mini	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.8	Gimbal_Y101	2. When using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need.	
	EOS 6D Mark II	Type-C to Mini	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	Gimbal_Y101	3. When shooting timelapse video, please set the Canon camera "Image Review" to be off.	
	EOS 5D Mark III	Type-C to Mini	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.5	Gimbal_Y101	4. EOS 90D/EOS 200D camera needs to be powered on in photo mode, otherwise the camera screen may not display.	
	EOS 5D Mark IV	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.2	Gimbal_Y101		
	EOS 5DS R	Type-c to Micro	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.1.1	Gimbal_Y101		
	EOS RP	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.6.0	Gimbal_Y121		
	EOS R	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_Y101	1. Please switch photo / video mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in RP/R5/R6 camera as it is easy to cause the camera crash.	
	EOS R5	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.9.0	Gimbal_Y121	4. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus. 6. If connect camera to external device via HDMI Cable, need to set the "HDMI Display" to be display both on camera screen and on the other device to control capture photo or video recording.	
	EOS R6	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.4.0	Gimbal_Y104		
	EOS-10 X Mark III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.1.0	Gimbal_Y101	1. Set the camera to video mode before power on, otherwise control failure may occur. 2. The camera and gimbal need to be power on before connecting the data cable	
	EOS R3	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	Gimbal_Y1_04	1. Switch to "MF" Mode on the lens when use pull focus, set the camera to MF mode (adjusting speed is slow) 2. Can control the photos and videos in photo mode, only video in video mode
	EOS R5C	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0.1	Gimbal_Y1_04	1. After the gimbal and camera are turned on, you need to wait about 10 seconds to establish a connection 2. When the camera is in photo file, the gimbal can control taking and recording; 3. When the camera is in video file, the gimbal can control recording 4. When you look back at an image, you have to switch to photo, and when you look back at a video, you have to switch to video
	EOS M6 Mark II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_Y1_04	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 2. Switch to "MF" Mode on the lens when use pull focus. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off 4. Be sure camera Wi-Fi is off before connecting the cable
	EOS R7	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	Gimbal_Y1_04	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 2. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS R10	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	Gimbal_Y1_04	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 2. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
EOS R8	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_Y1_04	Please switch photo / video mode on camera manually.	

	E05 R50	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_V1_04	1.Please switch photo / video mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus.
	E05 R6 Mark II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.2	Gimbal_V1_04	1.Please switch photo / video mode on camera manually. 2.Switch to "MF" Mode on the lens when use pull focus.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark	
Panasonic	GH5S	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	Gimbal_V101	1.Set the USB Mode to be PC(tether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5.When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.	
	GH5	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.60	Gimbal_V103	When switched to Photo mode, the camera won't respond to video-capturing commands; when switched to video mode, the camera won't respond to photo-capturing commands.	
		Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.60	Gimbal_V103	1.Set the USB Mode to be PC(tether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5.When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.	
	GH4	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.7	Gimbal_V101		
	69	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V101	Please switch photo / video mode on camera manually.	
	S5	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V101	Please switch photo / video mode on camera manually.	
		Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.00	Gimbal_V101	1.Set the USB Mode to be PC(tether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	
	S1H	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.40	Gimbal_V102	1.Set the USB Mode to be PC(tether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	
	GH6	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.20	Gimbal_V104	Please switch photo / video mode on camera manually.	
		Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.20	Gimbal_V104	1.Set the USB Mode to be PC(tether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	
	S511	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V104	Please switch photo / video mode on camera manually.	
		Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	Gimbal_V104	1.Set the USB Mode to be PC(tether) on camera. 2.Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3.The camera will auto focus when control capture photo. 4.To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark	
Nikon	Z7	Type-C to Type-C	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101		
	Z7 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101		
	Z5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.11	Gimbal_V101	1.After connecting the cable, be sure to power on the Feiyu S00RP PRO before the camera and wait for about 6 seconds for successfully connection after camera power on	
	Z6	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	Gimbal_V101	2.Please switch photo / video mode on camera manually.	
	Z6 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101		
	Z50	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101		
	Z fc	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	Gimbal_V103	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2.Please switch photo / video mode on camera manually. 3.To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.	
	Z9	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	Gimbal_V104	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2.Please switch photo / video mode on camera manually. 3.To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.	
Z30	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	Gimbal_V104	1.After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2.Please switch photo / video mode on camera manually. 3.To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.		

	D7500	Type-C to Micro	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.10	Gimbal_V121	1.After connecting the cable, be sure to power on the camera before the gimbal and wait for about 6 seconds to hear the "click" sound for successfully connection after camera power on 2.Control the camera with the gimbal, the camera Live View function needs to be enabled; Please make sure "PV" show up on the right top screen of camera, then click LV button. 3.Gimbal can control camera recording only when the camera is turned on in video recording mode 4.The camera screen does not show the duration of the video, but only lights 5.The camera button is unavailable when connected to the gimbal 6.When controlling the electronic focus, the lens needs to be in AF mode and is slow
	D850	Type-C to Micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	Gimbal_V121	1.After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds to hear the "click" sound for successfully connection after camera power on 2.Control the camera with the gimbal, the camera Live View function needs to be enabled 3.Gimbal can control camera recording only when the camera is turned on in video recording mode 4.If you go back to the album and play the video, you have to reconnect to control it again.
	Z8	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.01	Gimbal_V121	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
Fujifilm	X-T20	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	Gimbal_V101	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.After switch to video mode on camera manually, Feiyu SCORP PRO can control camera to start recording.
	X-T30	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V101	
	X-A5	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V103	Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-A7	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V103	
	X-T100	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V101	
	X-H1	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	Gimbal_V101	
	X-T3	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	3.01	Gimbal_V101	Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-T4	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V101	
	X-S10	Type-C to TRS3.5 (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.02	Gimbal_V101	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-T200	Type-C to TRS3.5 (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V101	2.Please switch photo/ video mode on camera manually.
	X-E3	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.22	Gimbal_V101	
	X-T30 II	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V104	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.After switch to video mode on camera manually, The Feiyu SCORP can control camera to start recording.
X100V	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V104	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo/ video mode on camera manually.	
GFX 100S	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.32	Gimbal_V104	Please switch photo/ video mode on camera manually.	
X-H2S	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1	Gimbal_V104	Please switch photo/ video mode on camera manually.	
X-H2	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.21	Gimbal_V120	Please switch photo/ video mode on camera manually.	
X-T5	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.02	Gimbal_V104	Please switch photo/ video mode on camera manually.	
X-S20	Type-C to TRS3.5 (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.11	Gimbal_V121	1.Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2.Please switch photo/ video mode on camera manually.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
SIGMA	FP	Type-C to Type-C	✗	✓	✗	✗	✗	✗	✗	✗	✗	4.00	Gimbal_V104	1.The camera icon on the gimbal screen lights up after a successful connection. 2.When the cable is connected, the camera button function cannot be used. 3.When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
BMPOCC	6K	Type-C to Type-C	✗	✓	✓	✗	✗	✗	✗	✗	✗	V7.3	Gimbal_V102	
	BMPOCC 4k	Type-C to Type-C	✗	✓	✓	✗	✗	✗	✗	✗	✗	V7.3	Gimbal_V104	

Notice:
1. "✓" Means Support this function, "✗" Means Do not Support.
2. For the Sony Camera with Multi Port, can use Type-C to Multi release cable to control Sony camera but not charge; Use Type-C to Micro release cable can charge Sony camera but not control it;
3. When connecting by Type C to TRS3.5 and Type C to TRS2.5, the camera icon on the gimbal screen will not light up. Long press the shutter button to take photos or record videos, the camera required to be in corresponding mode.