
Viale Inground or Wall Light Installation Instructions

		Product Specificat	ions	
Model No.	HV19062T-BR	HV19062T-AB	HV19062T	HV19062T-GPH
	HV19072T-BR	HV19072T-AB	HV19072T	HV19072T-GPH
	HV19082T-BR	HV19082T-AB	HV19082T	HV19082T-GPH
	HV19092T-BR	HV19092T-AB	HV19092T	HV19092T-GPH
Name	Viale			
Material	316 Stainless Steel + Brass	316 Stainless Steel + Brass	316 Stainless Steel	316 Stainless Steel + Brass
Colour	Face - Brass Body - 316 Stainless Steel	Face - Antique Brass Body - 316 Stainless Steel	316 Stainless Steel	Face - Graphite Body - 316 Stainless Steel
Installation Type	Ground or Wall - Recessed			
Trafficable	500kgs			
IP Rating	IP65			
IK Rating	IK10			
Input Voltage	12v DC Constant Voltage - External Power Supply Required			
Protection Class	3 (Low Voltage, no earth required) 🐠			
Lamp Base	MR16			
Lamp Wattage	1x 5w (Maximum - 20w)			
Colour Temp	TRI Colour - 3000k, 4000k, 5500k			
Lumens	270lm, 285lm, 300lm			
CRI	> 80			
Wiring	Parallel			
Dimmable	No - Not with supplied globe			
Warranty	3 Years Replacement*			

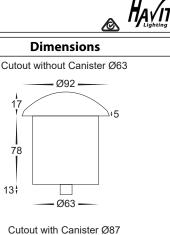

Cutout with Canister Ø87 Ø87 125 CANISTER Ø67



allow for water to run away from fitting

Light Fitting

† Canister

00mm Space

of Crushed Rock

This product must be installed by a qualified electrician according to AS/NZS 3000.
 Ensure all electrical mains are disconnected before any installation.

Ensure an electrical mains are disconnected before a

Important Safety Issues:

Modification of this product will void any warranty.

- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
 When installing low voltage fittings, Voltage to fitting must be within +or-5% of voltage required, if not within this allowance warranty will be voided.
- When installing low voltage neurops, voltage to neurophilis be within +0- 3% of voltage required, in hot within this allowance
 Aluminium and 304SS fittings must not be installed within 5km of any salt water environments
- Aluminium and 30455 littings must not be installed within 5km of any sait water environments
- When installing copper fittings, gloves must be worn to avoid any oils transferring to fitting.
- All 316 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting. (Warranty does not cover Tea Staining)
- + All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Solid Brass fittings will naturally tarnish, Solid brass fittings with additional coatings (Antique Brass & Graphite) may tarnish

Steps for Installation:

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Make a hole where fitting is to be placed using dimensions provided on line drawings, making sure adequate drainage is allowed.
- 3. Insert canister, and ensure that the top is level with wall or ground. Failure to do so will void warranty.
- 4. Using an appropriate 12v DC LED Driver DO NOT CONNECT LIGHT FITTING DIRECTLY TO 240V
- 5. Connect the cable If more than one fitting installed, wiring must be done in parallel.
- 6. Strip back the cable on both fitting and cable run and twist the positive cables together. Then connect neutral cables together
- 7. Solder all joins using solder and either a heat gun or butane gas torch.
- 8. Cover connections using an adhesive lined heat shrink or gel cap to make connection watertight. Failure to do this will void warranty.
- 9. Heat the heat shrink or crimp the gel cap making sure all connections are covered.
- 10. Colour temperature is preset to 3000k, to change remove cover from fitting by twisting anti clockwise and set aside.
- Remove C-Clip and set aside, Remover globe and select desired colour temperature by moving switch on side of globe and reinsert globe into lampholder and reinsert C-Clip.
- 11.Reattach glass and then cover by turning clockwise making sure the seals are still in place and cap is tight to avoid any water penetration.
- 12. Tighten cable gland on bottom of fitting before inserting fitting into canister
- 13.Insert fitting into canister. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
- 14.All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Installation: HV190-HC

- Remove cover and glass and set aside
- 2. Insert Honeycomb lens on the inside of the glass
- Reattach glass and then cover by turning clockwise making sure the seals are still in place and cap is tight to avoid any water penetration.

Steps for Changing Globe:

- Remove the cover by twisting anti-clockwise then remove glass and set aside, remove globe by pulling gently.
 Re-insert the appropriate globe by aligning the 2 pins of the globes into the lampholder and pushing down gently until fimly in place.
- (Make sure not to exceed max wattage, see product label for correct info)
- 3. Reattach cover by turning clockwise making sure the seals are still in place and cover is tight to avoid any water penetration.

Must be installed by a licensed electrician

Contact Details:Warranty Terms & Conditions*www.havit.com.au143 Beauchamp Road
Matraville NSW 2036
AustraliaTel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.auImage: Conditions and the sale of the