
Lokk Wall Light Installation Instructions



Product Specifications					
Model No.	HV2899NW-AB	HV2899NW-BR	HV2899NW-SS316	HV2899NW-BLK	HV2899NW-CP
Name			Lokk		
Material	Brass Face + 316 Stainless Steel Body		316 Stainless Steel		Copper Face + 316 Stainless Steel Body
Colour	Antique brass	Brass	Stainless Steel	Black	Copper
Installtion Type	Wall - Recessed				
IP Rating	IP65				
Input Voltage	12v DC				
Protection Class	3 - Low Voltage				
Lamp Base	MR11				
Lamp Wattage	1x 3w				
Colour Temp	3000K 4000K				
Lumens	270lm, 300lm				
CRI	> 80				
Wiring	Parallel				
Dimmable	No				
Warranty	3 Years Replacement*				

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- · Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- When installing low voltage fittings, Voltage to fitting must be within +or-5% of voltage required
 and cannot be installed more than 25m from LED Driver, if not within this allowance warranty will be
 voided.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- · All o-rings and seals must be in place correctly to maintain warranty.
- These instructions may be updated at any time due to product improvements, Please visit website for most current installation instructions.

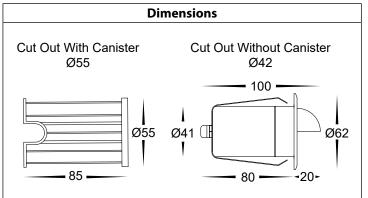

Steps for Installation:

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Make a hole where fitting is to be placed using dimensions provided on line drawings, making sure adequate drainage is allowed.
- 3. Using an appropriate 12v DC LED Driver DO NOT CONNECT LIGHT FITTING DIRECTLY TO 240V
- 4. If installing into concrete, insert canister making sure it is flush with ground level.
- 5. Connect the cable If more than one fitting installed, wiring must be done in parallel.
- 6. Strip back the cable on both fitting and cable run and twist the positive cables together.
- 7. Then connect neutral cables together
- 8. Solder all joins using solder and either a heat gun or butane gas torch.
- 9. Cover connections using an adhesive lined heat shrink or gel cap to make connection watertight. Failure to do this will void warranty.
- 10. Heat the heat shrink or crimp the gel cap making sure all connections are covered.
- 11. Fitting is supplied with 3000k MR11 Globe installed in fitting. To change to 4000k.
 - 1. Remove front cover by twisting anti clockwise,
 - 2. Remove clip by squeezing and set aside,
 - 3. Remove globe by pulling gently
 - 4. Insert 4000k globe by aligning the 2 pins and pushing in gently.
 - 5. Reinsert clip
 - 6. Reattach front cover by twisting clockwise making sure this is on tight to avoid water penetration into electrical connections.
- 12. Insert fitting into hole or canister
- 13. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
- 14. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

143 Beauchamp Road Matraville NSW 2036 Australia

Contact Details:

Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au



