


# Halo Wall Light Installation Instructions



## Product Specifications

Model No.	HV3591T-BLK	HV3591T-WHT	HV3592T-BLK	HV3592T-WHT	HV3593T-BLK	HV3593T-WHT	HV3594T-BLK	HV3594T-WHT
Name	Halo							
Material	Aluminium							
Colour	Black	White	Black	White	Black	White	Black	White
IP Rating	IP65							
Input Voltage	240v AC							
Lamp Base	Built in LED							
Lamp Wattage	1x 7w		1x12w		1x18w		1x24w	
Colour Temp	TRI Colour - 3000k, 4000k, 5500k							
Lumens	540lm, 550lm, 560lm		960lm, 1020lm, 1080lm		1315lm, 1380lm, 1440lm		1920lm, 2040lm, 2160lm	
CRI	> 80							
Wiring	Parallel							
Dimmable	Yes - Triac Dimmable							
Warranty	3 Years Replacement*							

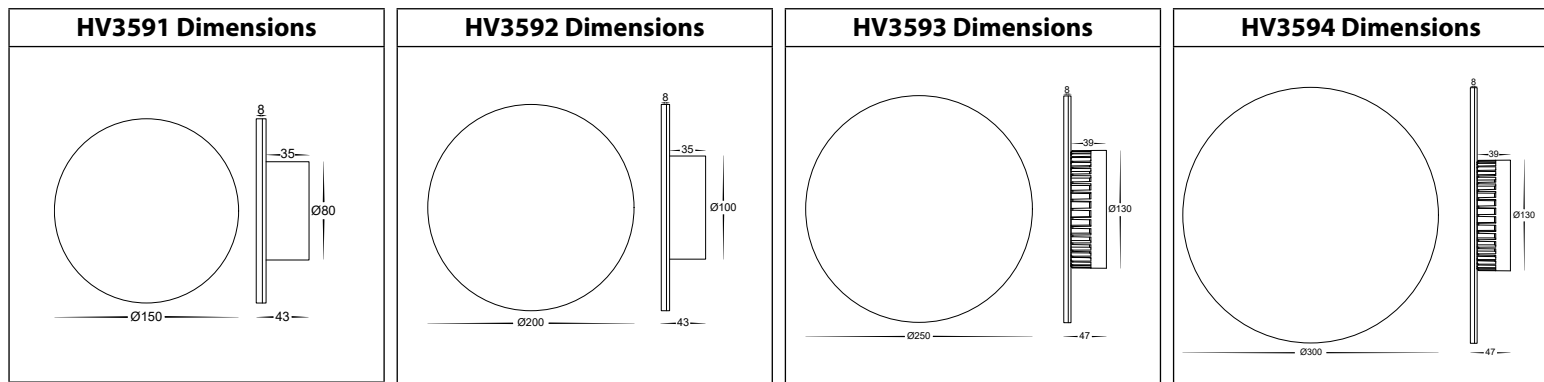

## Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- When using dimmers, Havit Lighting has tested on its own model dimmers and product works fine, When using other model dimmers, Dimming results could be different.
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

## Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Remove the screws from side of fitting and set aside
3. Remove base plate from fitting
4. Install base plate to wall in desired location using appropriate screws for application.
5. Seal all holes including cable entry hole and mounting screws.
6. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire
7. Fitting is preset to 3000k, to change slide switch to desired colour temperature
8. Reattach fitting to base plate making sure screws are tight to avoid water penetration
9. Apply silicon around edge of base to prevent any water from getting inside to electrical connections.
10. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

**Must be installed by a licensed electrician**

### Contact Details:

143 Beauchamp Road  
Matraville NSW 2036  
Australia  
Tel: 02 9381 8300  
Fax: 02 9666 8881  
Email: sales@havit.com.au  
Web: www.havit.com.au

### Warranty Terms & Conditions\*



### Additional Information

