


Porter Wall Light Installation Instructions





Product Specifications								
Model No.	HV3628T-BLK	HV3628T-WHT	HV3628T-BLK-SQ	HV3628T-WHT-SQ	HV3629T-BLK	HV3629T-WHT	HV3629T-BLK-SQ	HV3629T-WHT-SQ
Name	Porter							
Material	Aluminium							
Colour	Black	White	Black	White	Black	White	Black	White
IP Rating	IP54							
Protection Class	1 (240v Requires Earth)							
Input Voltage	240v AC							
Lamp Base	Built in LED							
Lamp Wattage	1x 15w				2x 15w			
Colour Temp	TRI Colour - 3000k, 4000k, 5500k				TRI Colour - 3000k, 4000k, 5500k			
Lumens	1200lm, 1275lm, 1350lm				2x 1200lm, 2x 1275lm, 2x 1350lm			
CRI	> 80							
Wiring	Parallel							
Dimmable	Yes - Triac Dimmable							
Warranty	3 Years Replacement*							

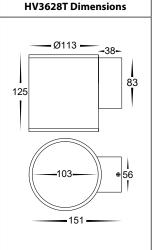

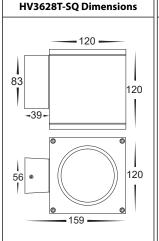

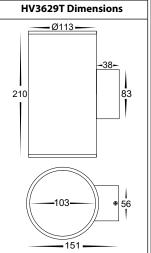

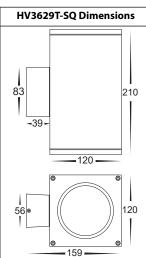

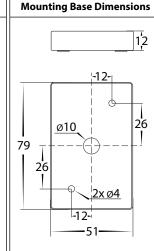

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- Remove Philips head screws from baseplate and set aside.
- 3. Remove base plate from fitting.
- 4. Install base plate to wall in desired location using appropriate screws for application.
- 5. Seal all holes including cable entry and around screws
- 6. Connect the cable use wire with earth; connect the earth first, then live and neutral wire.
- 7. Fitting is preset to 3000k, to change slide switch located inside base of fitting to desired colour temperature.
- 8. Reattach fitting to base plate making sure screws are tight to avoid any water penetration.
- Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
- 10. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

Contact Details: 143 Beauchamp Road Matraville NSW 2036 Australia

Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au





