


# Focus Adjustable Spot Lights Installation Instructions

			Produ	ict Specificatio	ns				
Model No.	HV3791T-BLK	HV3791T-WHT	HV3792T-BLK	HV3792T-WHT	HV3793T-BLK	HV3793T-WHT	HV3794T-BLK	HV3794T-WHT	
Name	Focus								
Material	Polycarbonate								
Colour	Black	White	Black	White	Black	White	Black	White	
IP Rating	IP65								
Installation Type	Surface Mounted - Wall or Ceiling (Eaves)								
Input Voltage	240v AC 🔲								
Protection Class	2 (No Earth Required)								
Lamp Base	Built in LED								
Lamp Wattage	1x 15w					2x 1	2x 15w		
Colour Temp		TRI Colour - 300	0k, 4000k, 5500k		TRI Colour - 3000k, 4000k, 5500k				
Lumens	1200lm, 1275lm, 1350lm				2x 1200lm, 2x 1275lm, 2x 1350lm				
Sensor Type	Microwave - 5.8Ghz +/- 75Mhz								
Sensor Detection Area	180°								
Sensor Detection Range	Up to 12m - Dependant on installation height, to achieve maximum range, recommended height is 2.1m								
Lux Settings	2, 10, 25, 50, 100, 200 Lux								
Time	30 seconds, 90 seconds, 5 minutes, 10 minutes, 30 minutes								
Standby Mode	3 minutes, 10 minutes, 30 minutes								
Sensitivity	25% = 3m, 50% = 6m, 75% = 9m, 100% = 12m approximately								
CRI		>80							
Dimmable	1	No	Yes, Using	remote only	1	No	Yes, Using	remote only	
Warranty	3 Years Replacement*								

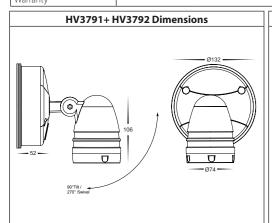

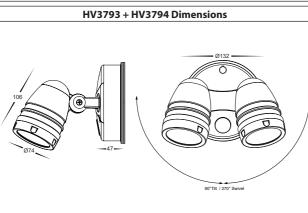

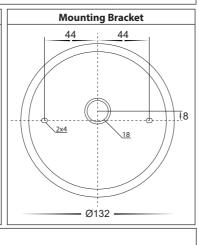

#### **Important Safety Issues:**

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system
- All o-rings and seals must be in place correctly to maintain warranty

  The wait does add by wind to the sum likely with a sub-Na to a sum and the sum of the sum
- The unit should be wired to its own light switch only. No two way switching. Do not interconnect with other lights on the same switch.
- Ideally the security lamp should be mounted 2.1m above the ground to be scanned for best results.
   To avoid nuisance triggering, the sensor should be directed away from heat sources such as barbecues, Air-conditioners, other outside lighting, moving cars and flue vents.
- To avoid nuisance triggering, keep away from areas of strong electromagnetic disturbance.
- Do not aim towards reflective surfaces such as smooth white walls, swimming pools, etc.
- The security lamp scanning specifications (approximately 12 metres at 180°) may vary slightly depending on the mounting height and location. The detection range of the unit may also alter with temperature change. Before selecting a place to install your security light, you should note that movement across the scan area is more effective than movement directly toward or away from the sensor. If movement is made walking directly towards or away from the sensor and not across, the apparent detection range will be substantially reduced.
- This form may be updated at any time due to product improvements, please check online installation form for most current version

# **Steps for Installation:**


- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Remove base plate from fitting, insert cable into cable entry hole and attach base plate in desired location using appropriate screws for application, For Sensor Models, Ideal height to achieve maximum sensor range is 2.1m, If installed higher or lower, Detection range will be affected
- 3. Seal all holes including cable entry and screw points to avoid any water penetration.
- 4. Connect the cable If wire has earth Terminate as this is not required (DO NOT CONNECT EARTH CABLE TO TERMINAL MARKED LO AS THIS WILL CAUSE FITTING TO SHORT AND FAIL); connect live and neutral wire, If fitting has LO on terminal block, This is for connecting multiple non sensor fittings to Sensor models to be activated when sensor is triggered.
- 5. Fitting is preset to 3000k, to change slide switch to desired colour temperature located in back of fitting.
- Reattach fitting to baseplate making pins are in line with terminal block, make sure screws are tight to avoid water penetration. Insert caps provided to cover screws.
- 7. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
- To adjust heads, loosen screw on side of head and gently move into position to where you want fitting pointed and tighten screw, Do not overtighten.
- 9. For sensor models, Refer next page for remote instructions.
- 10. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

## Must be installed by a licensed electrician

Contact Details:		Warr	ranty
143 Beauchamp Road	Tel: 02 9381 8300		
Matraville NSW 2036	Fax: 02 9666 8881		l
Australia	Email: sales@havit.com.au		
	Web: www.havit.com.au		

ns & Conditions*	www.havit.com.au



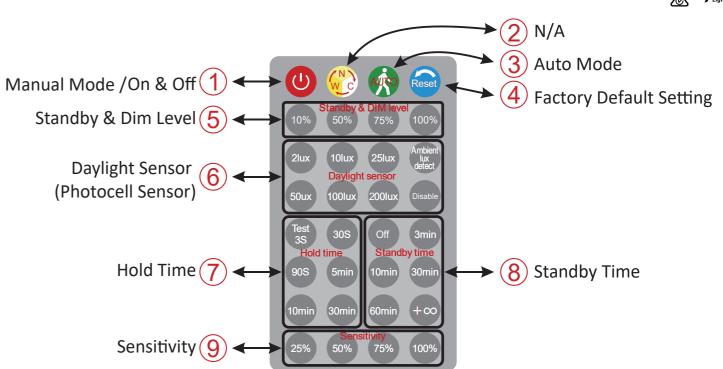

### Remote Instructions for Sensor Models Only:

- 1. Pressing this button will switch fitting to Manual Mode, Press it to switch the light to On & Off. In Manual Mode, fitting can only be controlled by the remote control, the fitting won't be controlled by the photocell sensor and radar motion sensor, the brightness of the light can be adjusted by pressing "Standby & Dim Level" buttons.
- 2. No Function Pressing this button will not change colour temperature, To do this you must select colour temperature inside base.
- 3. Auto Mode: Light fitting is controlled by motion detector and photocell sensor.
- Reset button returns fitting to factory default settings: The default settings are:
   Mode = Auto / Daylight Sensor = 50Lux / Hold time = 30S / Standby time = OFF (0S) / Sensitivity = 100%
- 5. Standby & Dim Level: Adjusts the standby Level on Auto Mode; Adjust the Dim Level on Manual Mode. (Standby Level is referring to the Light brightness level when sensor time has elapsed providing a level of light for extra security.
- 6. Daylight (Photocell) Sensor: In Auto Mode, the light is not only controlled by motion detection, it is also controlled by the ambient light brightness and depends on the setting values, the light will be restricted when the brightness of ambient light exceeds the set values. Lux refers to the amount of daylight photocell is detecting, the lower the number the darker it will need to be to be for light to be activated.
- "Disable": to disable the daylight sensor function, fitting will only be controlled by motion detection.
- "Ambient Lux detection": Press this button to set the current ambient lux level as the daylight threshold.
- 7. Hold Time: The length of time that the sensor switches the light "on" after activation.
- In Auto mode, when the daylight threshold is set to light-on, and the unit detects a valid motion, the light will turn on. After the hold time, the light will be back to the set up accordingly.
- "Standby & Dim Level" or turn off (depends on the settings on "Standby Time").
- "Test 35" button is a test mode, the duration time is 3 seconds, which is convenient for testing the motion detection distance and the daylight threshold. The "Hold Time" will not be saved when power is turned off.
- 8. Standby Time: To Adjust the standby time.
- "OFF" is to turn off the standby function, the light will be turned off directly after the hold time expires.
- "+∞" means the standby light is always on (affected by setting value of the Daylight Sensor, when the brightness of ambient light is higher than the setting value of Daylight sensor, the light will turn off). All other settings will allow light to stay in standby mode for time period set and then completely switch off.
- Photocell control Mode: When Standby time is set to +∞ and Standby & Dim Level is set to 100%, the light is only controlled by daylight (photocell) sensor. The unit will turn on at full power when the brightness of ambient light is lower than the setting value of daylight sensor.
- 9. Sensitivity: How sensitive the sensor is to movement. you can set to operate the unit at the desired level by pressing this button. Sensitivity and detection distance (approx.): 25%: detection distance = 3m, 50%: detection distance = 6m, 75%: detection distance = 9m, 100%: detection distance = 12m