

# LED Mini Downlight Range

## Installation Instructions

 
 


HV5701C-BLK  
HV5701W-BLK

HV5701C-WHT  
HV5701W-WHT

HV5702C-BLK  
HV5702W-BLK

HV5702C-WHT  
HV5702W-WHT

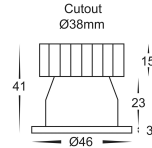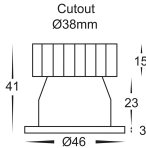 


### Important Safety Issues;

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Do not touch the lamp with bare hands, and ensure to let lamp cool after use before touching. This lamp can get extremely hot.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- All o-rings and seals must be in place correctly to maintain warranty .

### Steps for Installation;

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Cut hole (38mm) in desired location
3. Connect the cable -
  - 240v models, (use wire with earth); connect the earth first, then live and neutral wire.
4. Push back springs on downlight and insert in hole.
5. Once springs are inserted in hole they will pull back and hold downlight in place.
6. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

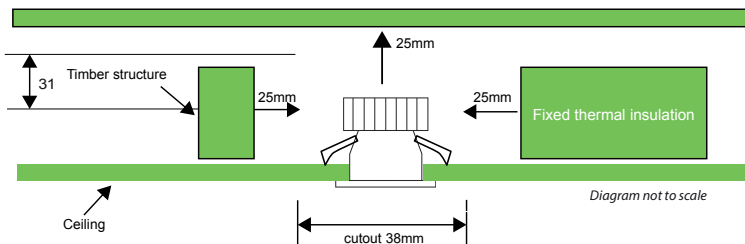

Cutout  
Ø38mm

This product must be installed by a licensed electrician